


Bose SoundTouch Portable Subwoofer Replacement

Replace subwoofer on your Bose SoundTouch Portable.

Written By: Chelsea Martin

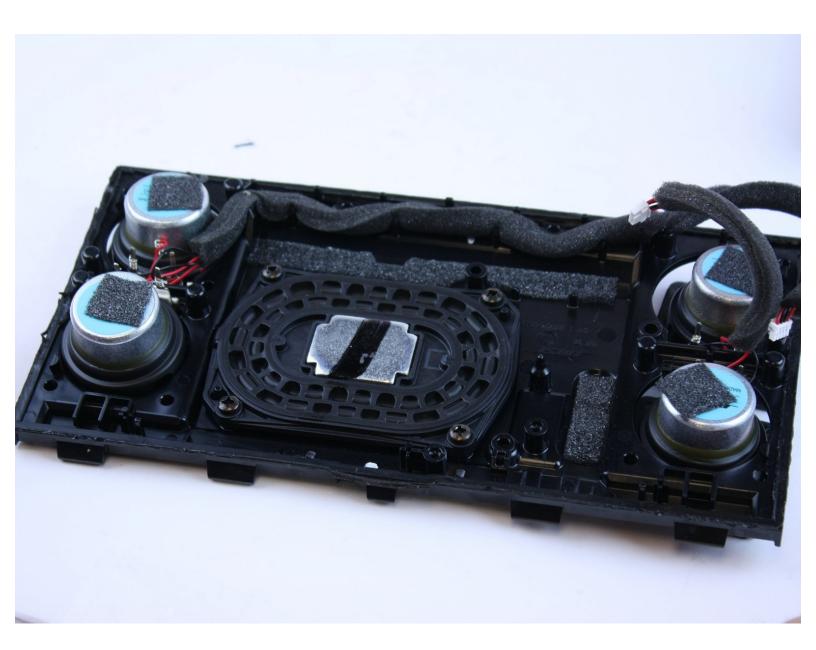

This document was generated on 2020-11-28 05:43:36 AM (MST).



- T10 Torx Screwdriver (1)
- iFixit Opening Tools (1)
- Small Needle Nose Pliers (1)

Step 1 — Speaker Battery



 Remove the two T-10 machine screws at the bottom of the device.

Step 2



- Turn the device around.
- From the top, lightly push down the back cover to release it.
- Lift the bottom of the cover and pull it up.

Step 3



 Remove the two T-10 machine screws, then pull the battery straight out.

Step 4 — Grille




 Remove the two screws holding the speaker grille in place.

Step 5



 Grip the sides of the device and push the speaker grille down and out.

Step 6

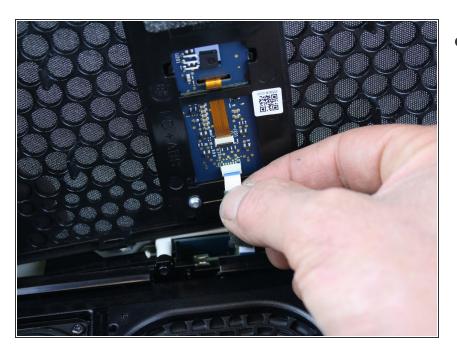


 Gently release the ribbon from its connector and remove the grille.

Step 7 — Metal Trim



 Remove the two screws using a torx screwdriver.

Step 8

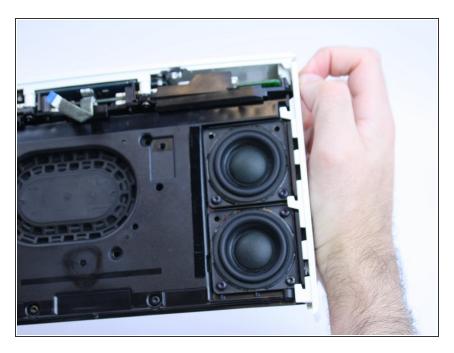

 With the bottom of the device facing you, pull down the trim pieces to remove from the device body.

Step 9 — Subwoofer





Separate the case that holds the subwoofer in place.


♠ Be careful when doing this step because there are several connectors inside.


Step 10




 Gently pull on the connectors at the circuit board to remove. Remove the screws from the circuit board and set the board aside.

Step 11

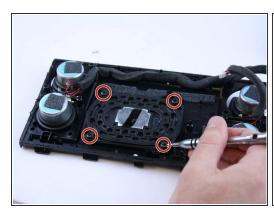

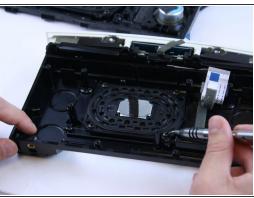

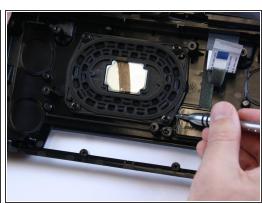

• Remove the four screws from the subwoofer and lift it out of the casing.

To reassemble your device, follow these instructions in reverse order.