




# Bose SoundTouch Portable USB/AC Adapter and Aux Cord Replacement

Replace USB/AC adapter and ox cord on your Bose SoundTouch Portable.

Written By: Chelsea Martin

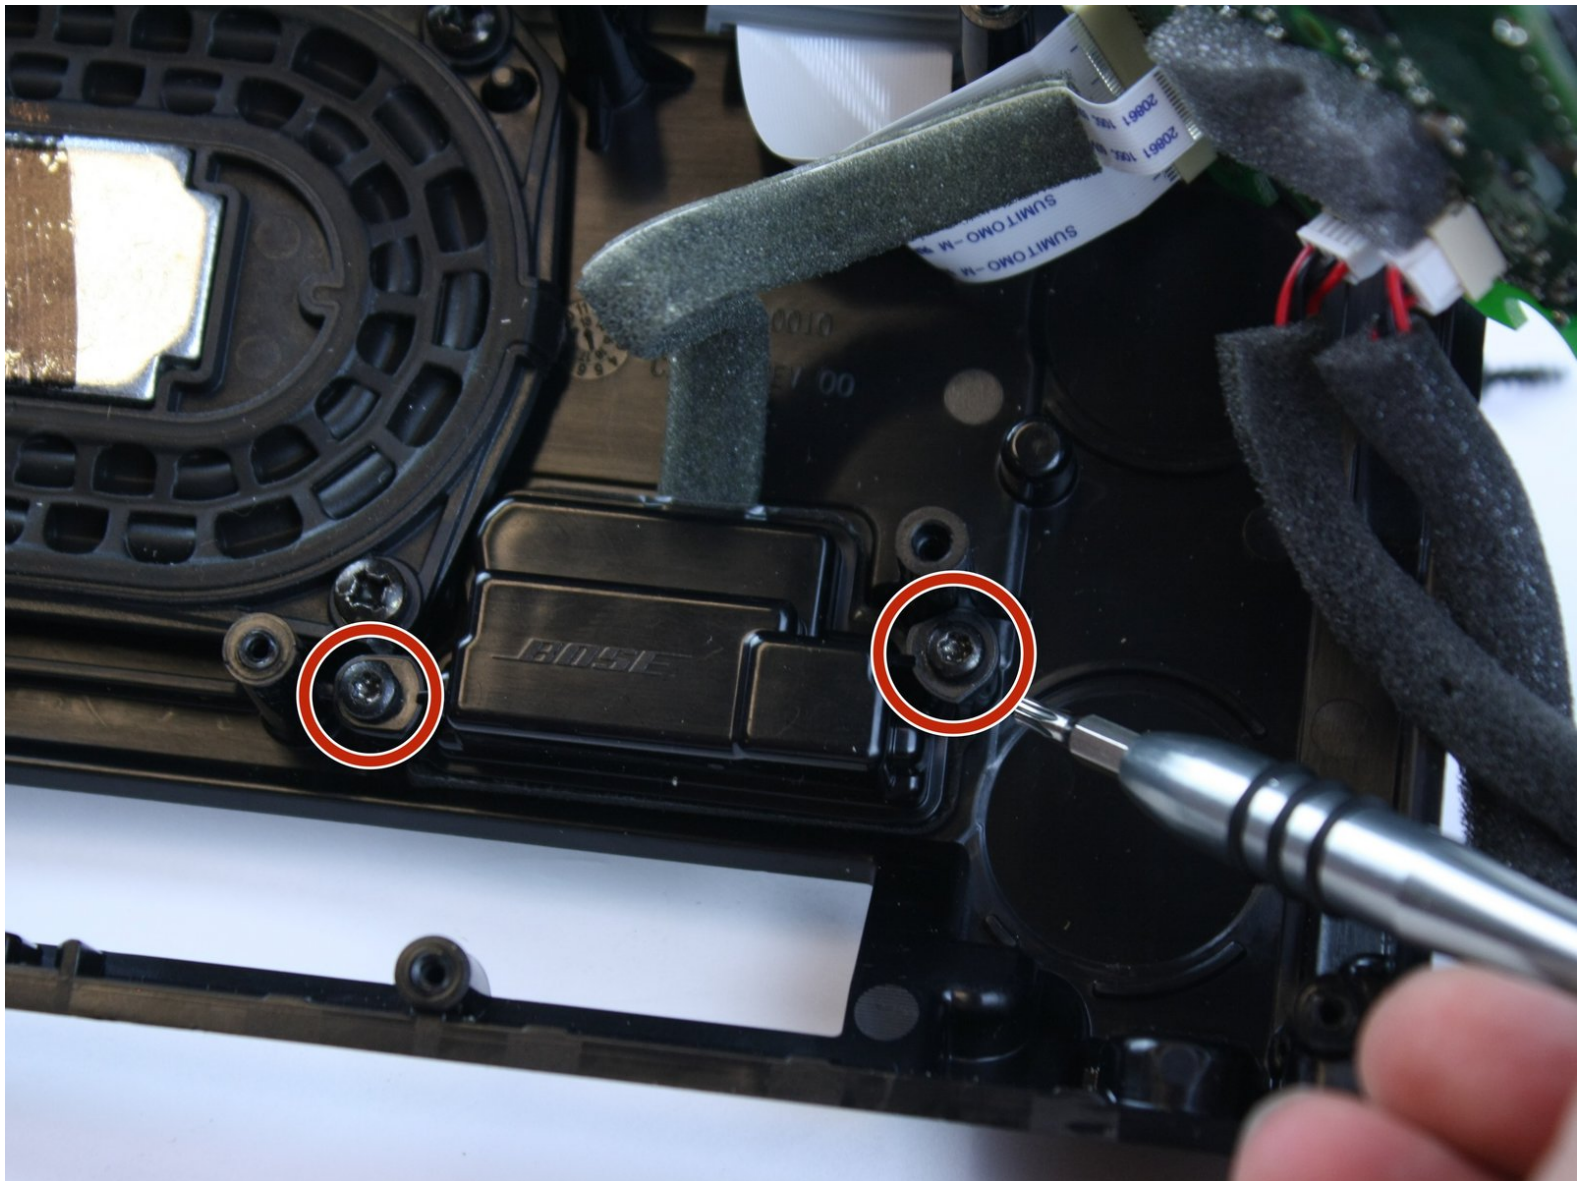



## TOOLS:

- [T10 Torx Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Small Needle Nose Pliers](#) (1)
-

## Step 1 — Speaker Battery



- Remove the two T-10 machine screws at the bottom of the device.

## Step 2



- Turn the device around.
- From the top, lightly push down the back cover to release it.
- Lift the bottom of the cover and pull it up.

### Step 3



- Remove the two T-10 machine screws, then pull the battery straight out.


### Step 4 — Metal Trim



- Remove the two screws using a torx screwdriver.






## Step 5

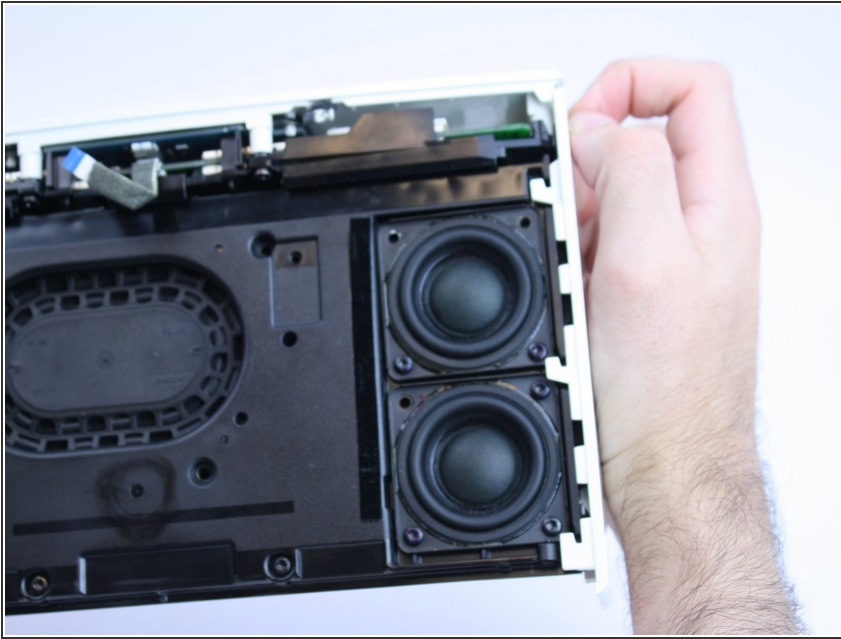

- With the bottom of the device facing you, pull down the trim pieces to remove from the device body.

## Step 6 — USB/AC Adapter and AUX Cord

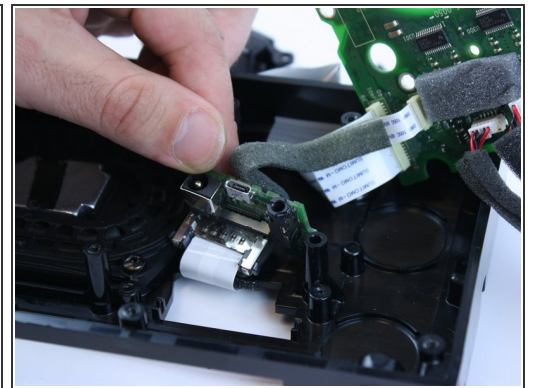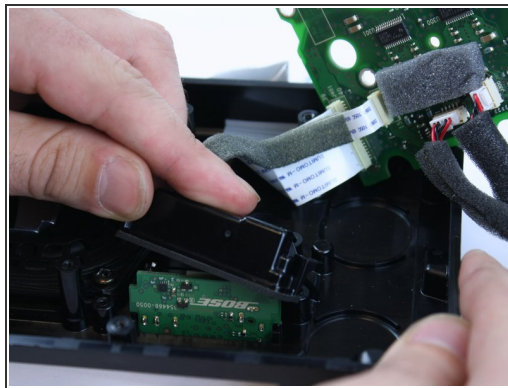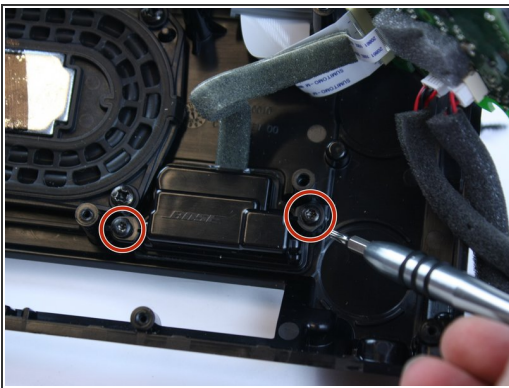

- Remove the two T-10 Torx screws
- Remove the black casing
- Pry off flat connector

To reassemble your device, follow these instructions in reverse order.