


# Bose SoundTouch Portable Motherboard Replacement

Replace the motherboard on your Bose SoundTouch Portable.

Written By: Chelsea Martin

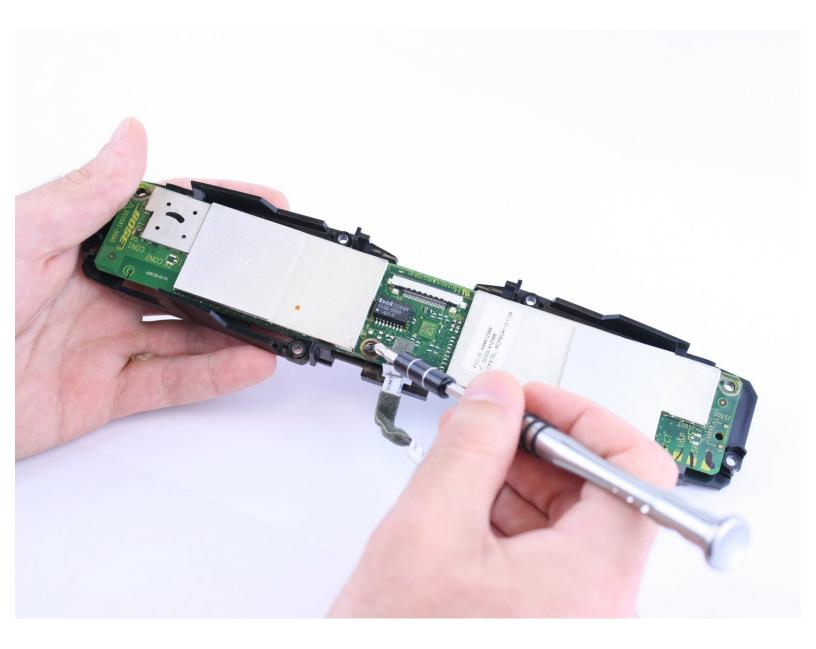

## **TOOLS:**

۶

- iFixit Opening Tools (1)
- Small Needle Nose Pliers (1)
- T10 Torx Screwdriver (1)

#### Step 1 — Speaker Battery



 Remove the two T-10 machine screws at the bottom of the device.

#### Step 2



- Turn the device around.
- From the top, lightly push down the back cover to release it.
- Lift the bottom of the cover and pull it up.

### Step 3




 Remove the two T-10 machine screws, then pull the battery straight out.

#### Step 4 — Metal Trim




Remove the two screws using a torx screwdriver.

#### Step 5

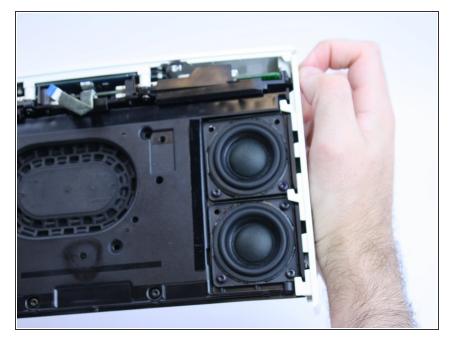


• With the bottom of the device facing you, pull down the trim pieces to remove from the device body.

#### Step 6 — Motherboard

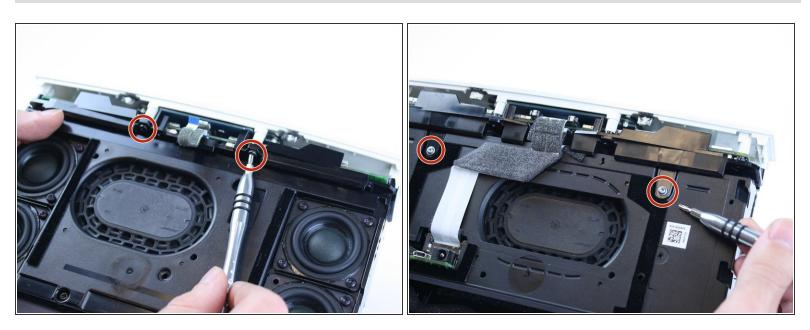


Remove four T-10 Torx screws; there are two on the front and two on the back.

#### Step 7

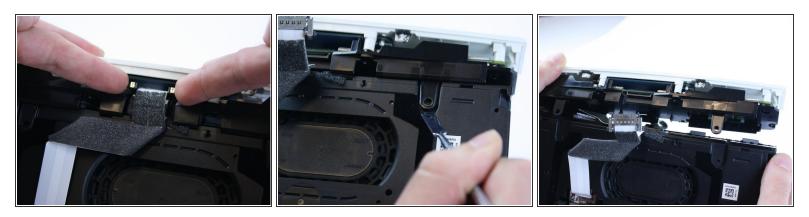

- Pinch and remove the connectors.
- Use a flat tool to pry off the top piece.

#### Step 8

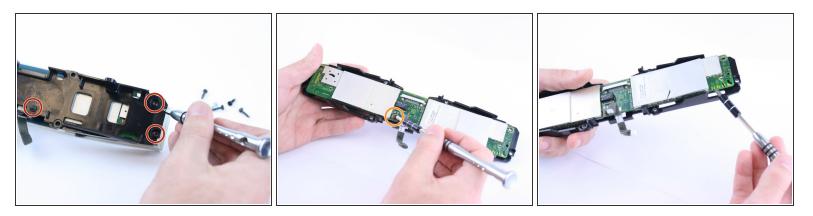

- Remove the four T-10 Torx screws holding the plastic cover in place.
- Remove the one T-10 Torx screw that is holding the motherboard in place.
- Pry off the motherboard.

To reassemble your device, follow these instructions in reverse order.