


Fugoo Tough XL Motherboard Replacement

Use this guide to remove and replace the...

Written By: Abdul

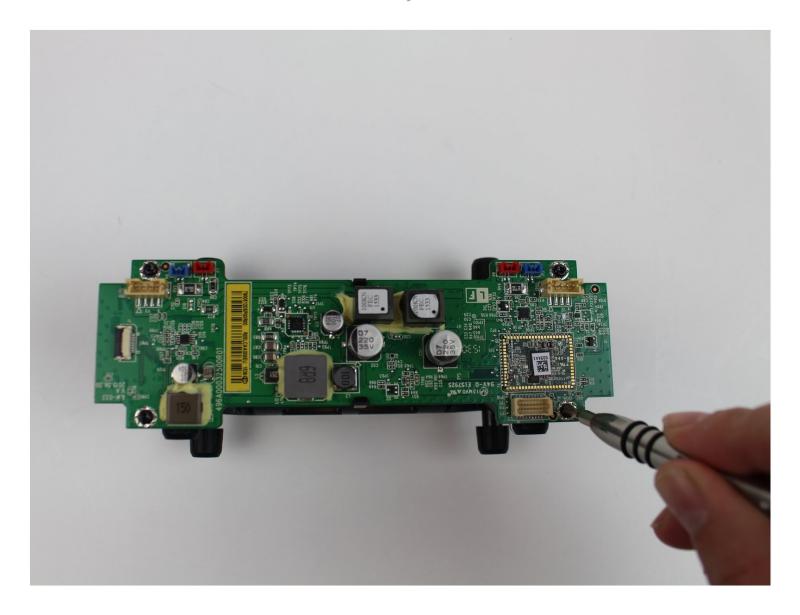


INTRODUCTION

Use this guide to remove and replace the motherboard.

TOOLS:


3mm Hex Key (or Bit) (1) iFixit Opening Tool (1) TR10 Torx Security Screwdriver (1) Tweezers (1)

Step 1 — Case

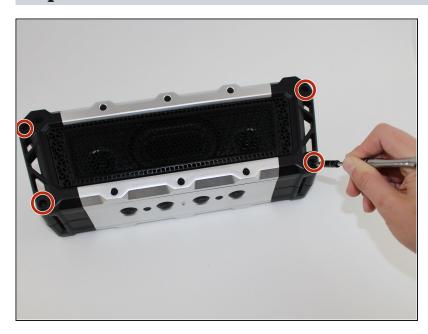

 Remove the four 3 mm screws located in each corner using a 3 mm Hex screwdriver.

Step 2

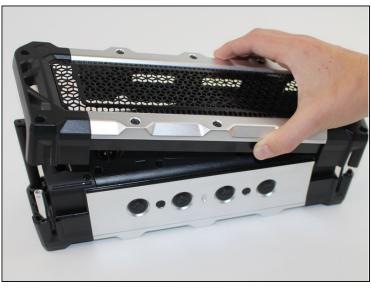



- Gently pull up and off the outer casing.
- (i) Do not feel afraid to use a bit of force if necessary.

Step 3





- Remove the internal device from the outer casing.
- Remove the four 12 mm screws on each corner using a T10 Torx screwdriver.
- Remove the eight 6 mm screws on the top and bottom using a T10 Torx screwdriver.

Step 4









- Use your hands to gently remove the side plates.
 - Use an opening tool to pry off the back plate with the Fugoo trademark.

Step 5

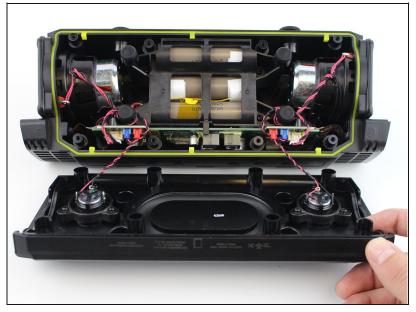

- Slowly pull the front casing from the back casing. Avoid putting any tension on the connected cables.
- ⚠ Separate the two slowly and consistently to avoid damaging the speaker cables.


Step 6 — Motherboard

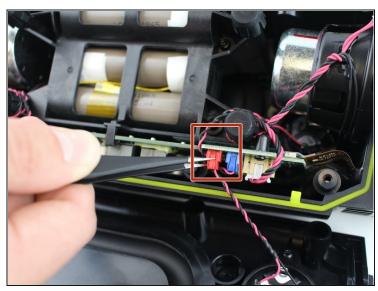




Carefully untangle the wires that connect the speaker to the motherboard.

Step 7

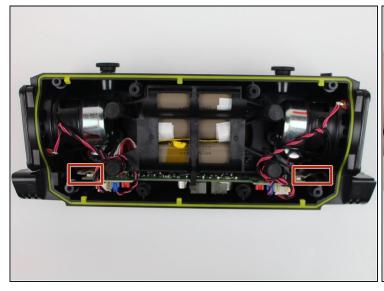


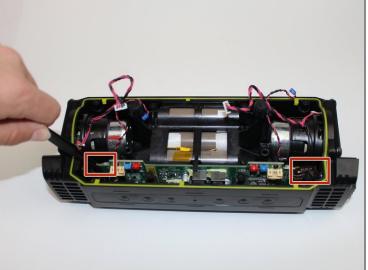

• Use tweezers to remove the two ribbon wires on the left and right side of motherboard.

⚠ Do not pull the cables by the cord, as this could damage the cables and the motherboard. It is best to always disconnect the cables from the base, which is closest to the motherboard, using an iFixit opening tool.


Step 8

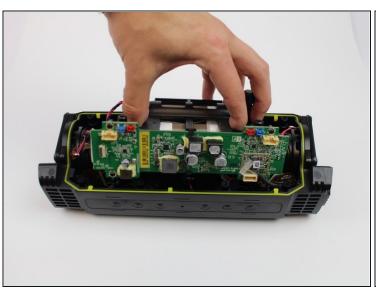




- (i) There is a hidden ribbon on the motherboard, that becomes visible once the motherboard has been pulled out.
- Pull the motherboard halfway out.
- Gently unplug the ribbon using tweezers.

Step 9

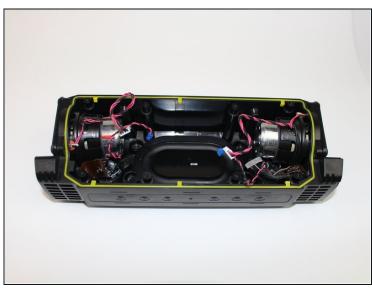

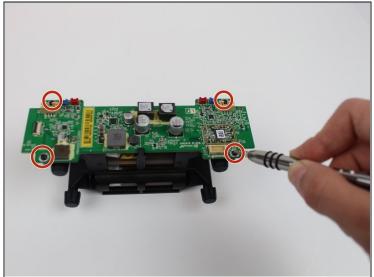

- Remove the motherboard and battery.
- Remove the four 3 mm screws from the motherboard using a 3 mm Hex screwdriver.

