

# **Dell XPS 13 L321X Screen Replacement**

if the screen broken/scratched and needs to be...

Written By: Molly Skinner




#### **INTRODUCTION**

if the screen broken/scratched and needs to be replaced here is the guide. (only screwdrivers required).


### TOOLS:

T4 Torx Screwdriver (1) iFixit Opening Tool (1) Phillips #1 Screwdriver (1) Phillips #00 Screwdriver (1)

#### Step 1 — Screen

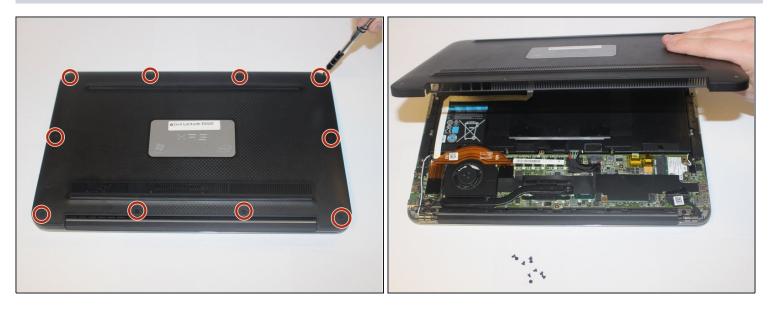

Remove ten 3mm screws from the back cover with a "T5" screwdriver.

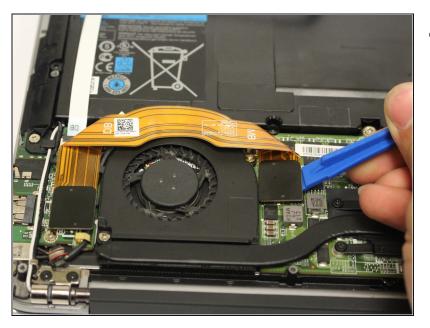


 Remove the ribbons from both sides with a plastic iFixit opening tool.

## Step 3





• Remove the black wire that connects the screen to the motherboard by pulling up with a plastic iFixit opening tool.

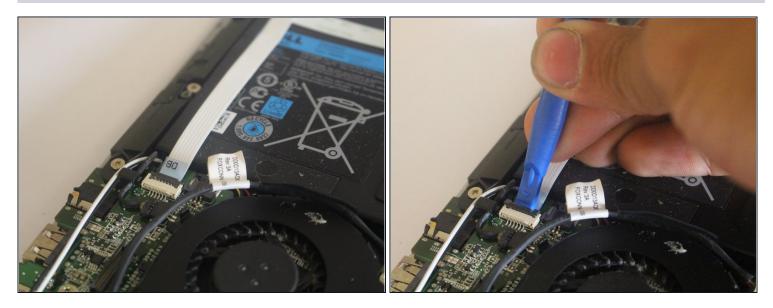


- Disconnect the ribbon cable with a plastic iFixit opening tool by lifting up the black clip and pulling the white ribbon off.
- Pull aside the ribbon cable.

#### Step 5




• Disconnect the wire that is connected to the wireless card with a plastic iFixit opening tool by lifting up slowly, then pulling the wires aside.

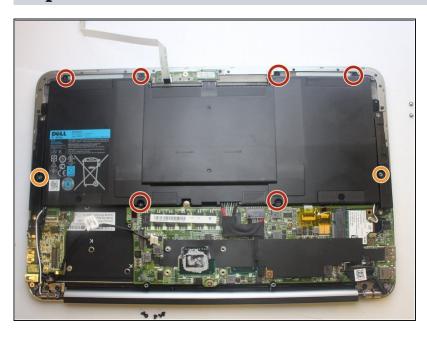

- Use a PH00 size screwdriver to remove the 8 screws that secure the battery.
- Six 3mm screws.
- Two 5mm screws.

## Step 7

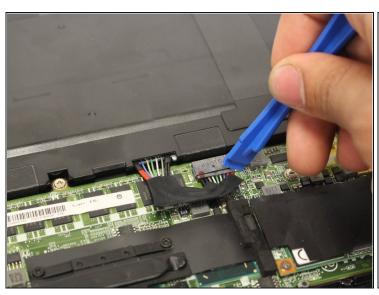



• Insert a plastic iFixit opening tool in between the port and the wires to remove the battery cable.









• After removing the battery, start to remove the wireless wire and making it through the other wires connected under the battery.

## Step 9

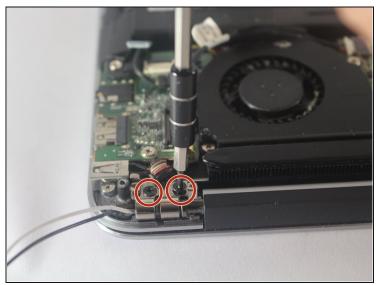



- Remove the screws with a PH1 size screwdriver.
- Each side of the brackets that are holding the screen down are going to have two 3mm screws in each side.

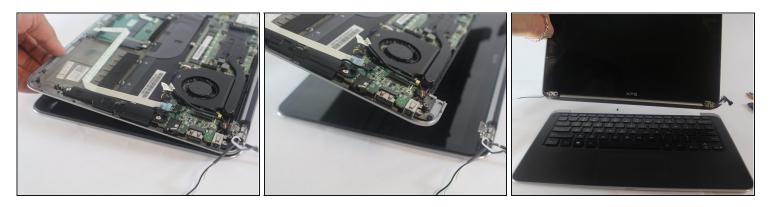

• Open the laptop by separating the screen from the actual laptop and take it apart.