



# Kodak Easyshare V1003 Memory Card Replacement

Remove and replace old/malfunctioning memory card for Kodak Easyshare V1003 digital camera.

Written By: Sarah Berry



## INTRODUCTION

This guide provides step-by-step instructions for removing and replacing the memory card. There are no tools required and no safety precautions needed.

## Step 1 — Memory Card



- Turn off camera by firmly pressing the power button that is located on the top of the camera.

## Step 2



- With your finger, slide the battery cover in the direction of the open arrow.

### Step 3



- Locate memory card slot and insert memory card by inserting the gold terminals first.
- Push memory card into memory card slot, until it clicks into place.

### Step 4



- Close the battery door.

To reassemble your device, follow these instructions in reverse order.