


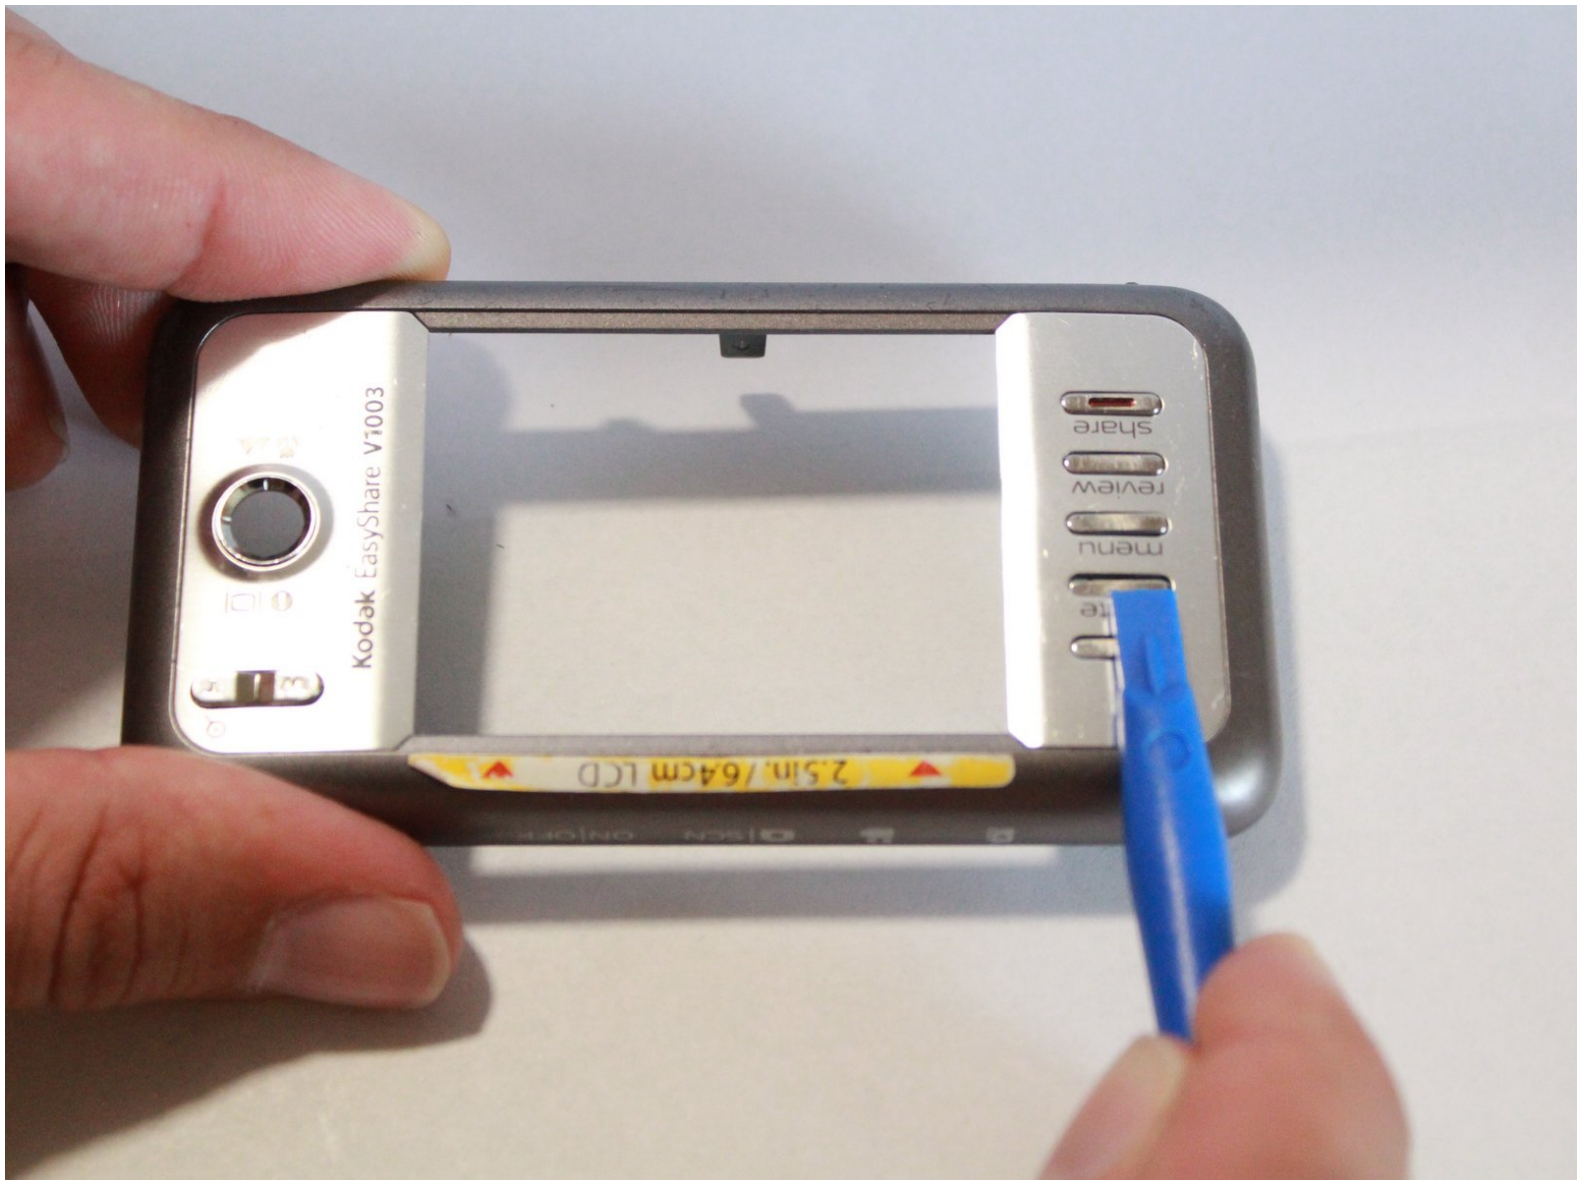

Kodak Easyshare V1003 Button Replacement

Use this guide to access and replace any buttons that are stuck on the Kodak EasyShare V1003.

Written By: Vanessa Soares



INTRODUCTION

This guide provides step-by-step instructions for removing and replacing the battery. There are two tools required and no safety precautions needed.

TOOLS:

- [JIS Driver Set](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Turn off camera by firmly pressing the power button that is located on the top of the camera.

Step 2



- Position camera with the bottom facing up.

Step 3



- With your finger, slide the battery cover in the direction of the open arrow.

Step 4



- Lift the battery cover up gently.

Step 5




- Gently push the battery down until a click is heard. Battery should release and be lifted out of slot.

Step 6 — Buttons




- Use a J00 screwdriver to remove the five exterior screws.

Step 7

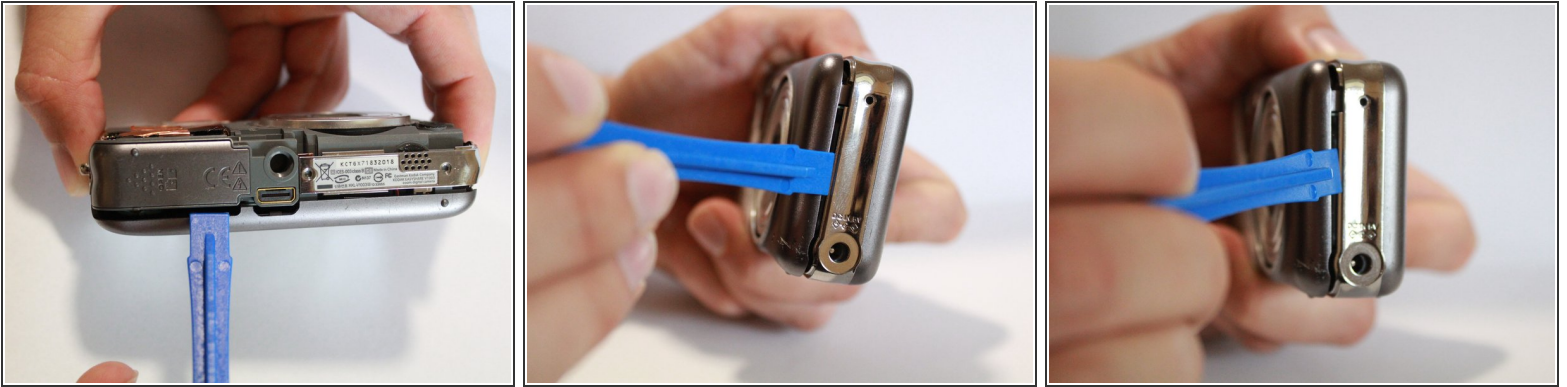

- Use a plastic opening tool to pry off the back casing.

Step 8

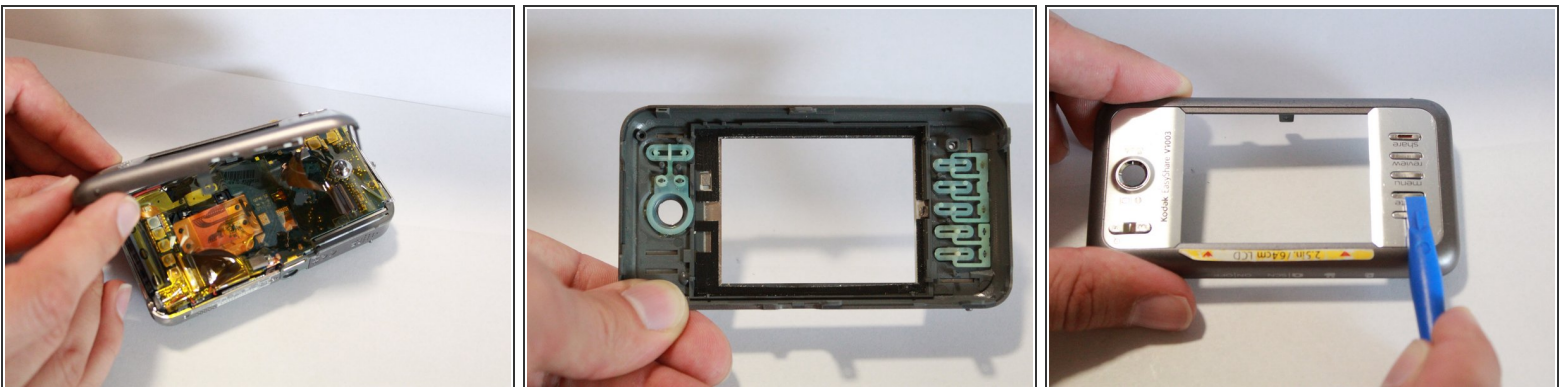

- Completely remove the back casing from the device.
- Using a plastic tool to remove the bottom.

To reassemble your device, follow these instructions in reverse order.