



# Acer Aspire 4743-6481 DVD Drive Replacement

This guide provides detailed instructions on how to remove and replace the DVD Drive from the Acer Aspire 4743-6481.

Written By: Filippo Santoro



## INTRODUCTION

If you are having trouble opening your DVD drive or reading CDs with it, use this guide to replace it with a new one.

---

### TOOLS:

- [Tweezers](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
-

## Step 1 — Battery



- Turn over the laptop to view the underside.

## Step 2



- Use tweezers (or a similar tool) to slide the orange push pin. To release the battery, push it to the left.

## Step 3



- You can lift the battery up and out now.

## Step 4 — DVD Drive



- Remove the 7.0 mm screw, circled in the picture, using a Phillips head screwdriver.

## Step 5



- Once the screw is removed, the DVD drive should easily slide out


## Step 6



- Remove the drive completely.



## Step 7

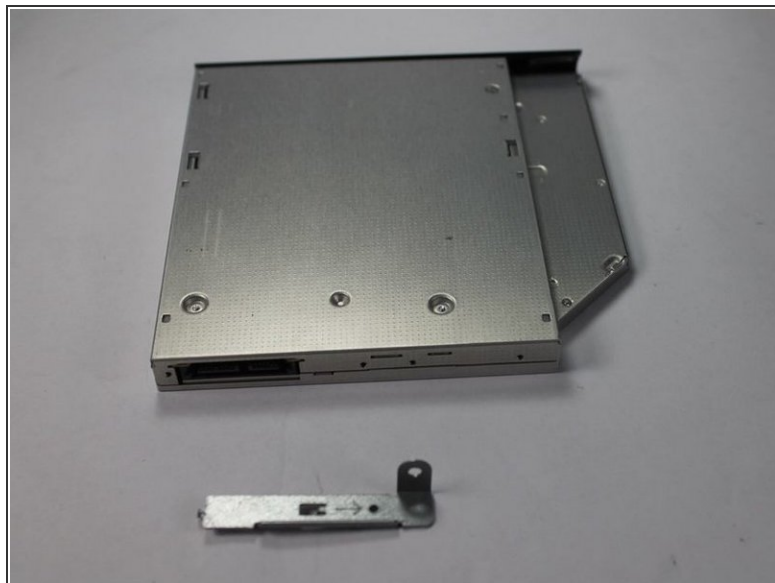

- Face the side of the DVD drive that connects to the laptop and remove the 3mm screw with a Phillips head screwdriver.
- ⓘ Put the screw and the bracket to the side as you may need it for your replacement.

To reassemble your device, follow these instructions in reverse order.