




Acer Aspire 4743-6481 Ram Card Replacement

This guide provides detailed instructions on how to remove and replace the RAM card of your Acer Aspire 4743-6481.

Written By: AL-Moatasem

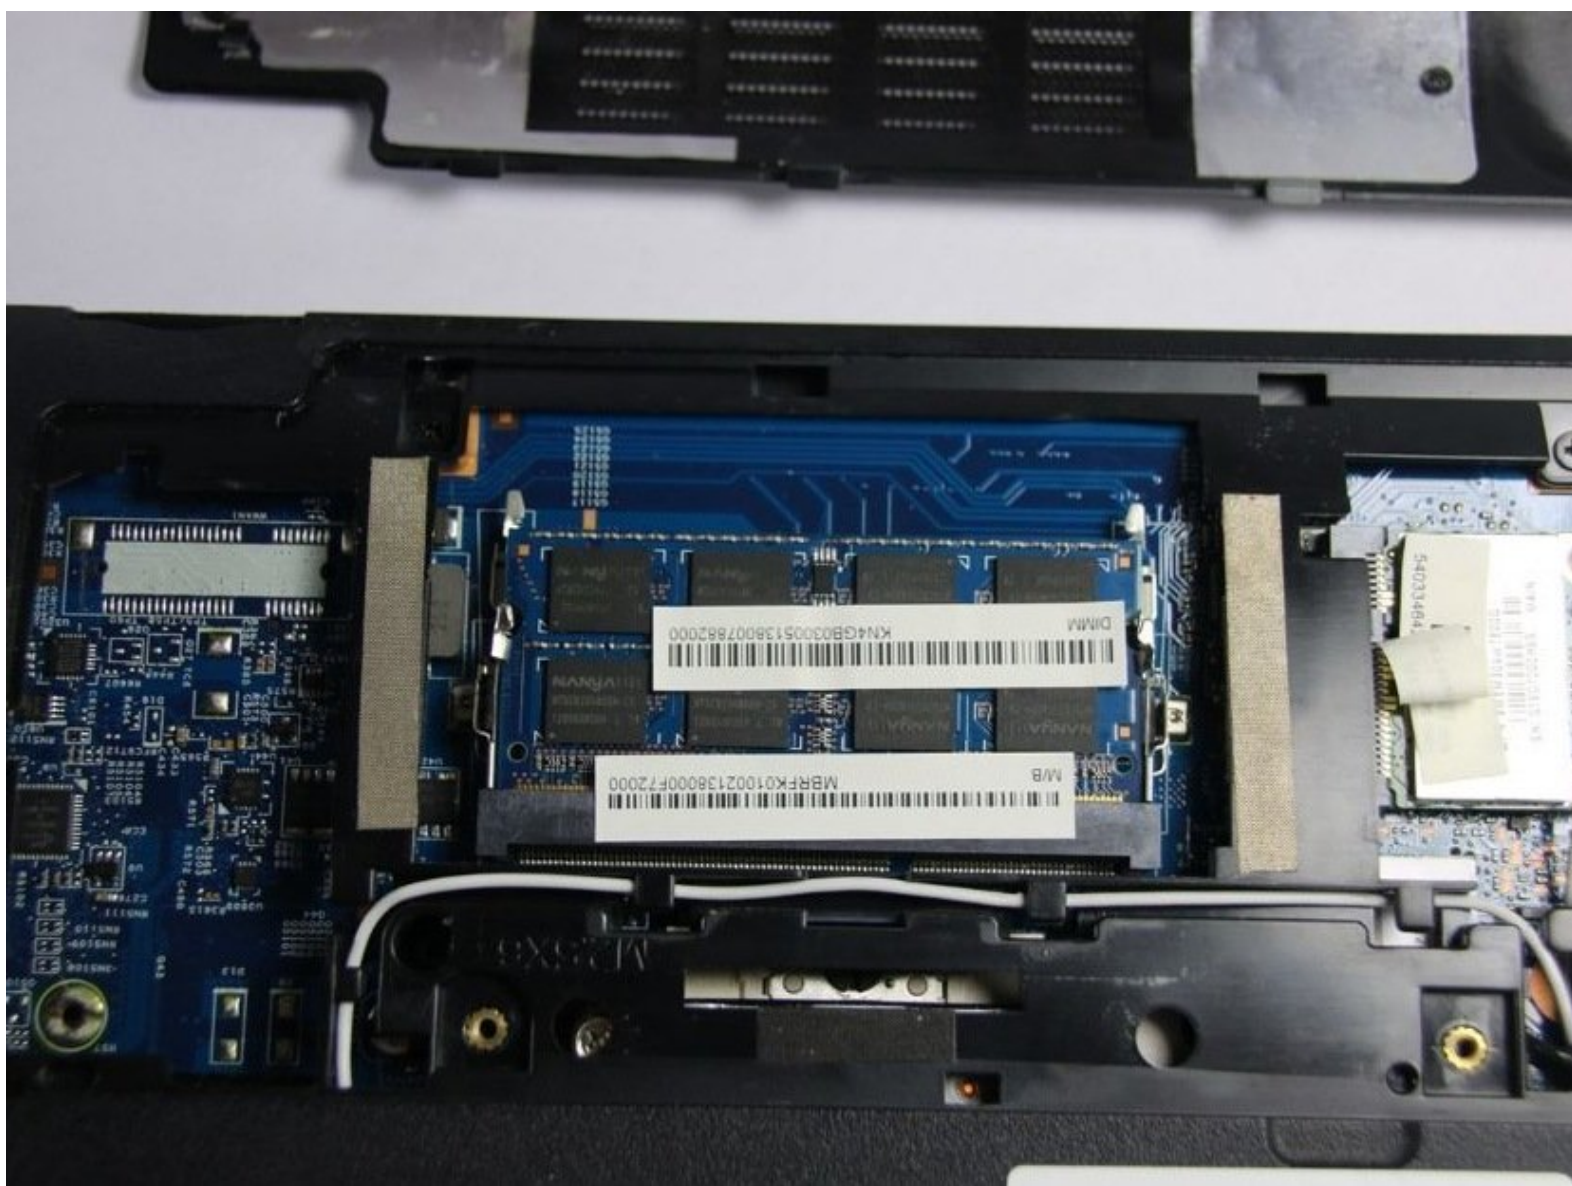

INTRODUCTION

This guide shows you how to replace the RAM card.



TOOLS:

- [Tweezers](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery



- Turn over the laptop to view the underside.

Step 2



- Use tweezers (or a similar tool) to slide the orange push pin. To release the battery, push it to the left.

Step 3



- You can lift the battery up and out now.

Step 4 — RAM Card




- Remove three 7.0 mm screws with a Phillips head screwdriver from the back panel to gain access to the RAM cards.

Step 5




- Place the device with the battery side facing up, as shown on the picture.
- After removing the back panel, you will see the RAM cards located to the right.

Step 6

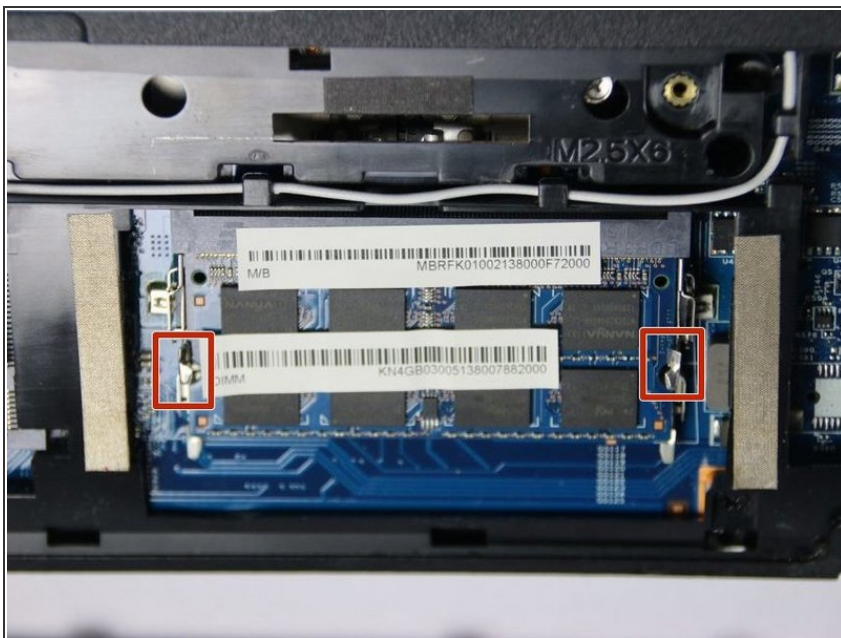

- You should notice a silver tab on each side of the RAM card. Push each tab away at the same time to detach the card.

Step 7

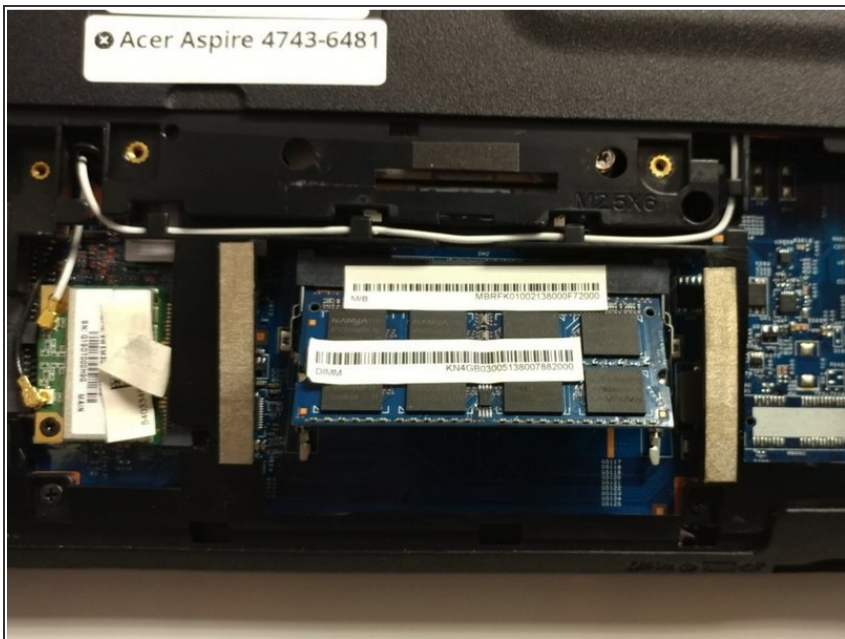

- If done successfully, the RAM should pop out and you can lift it out with no effort.

To reassemble your device, follow these instructions in reverse order.