




# Sony Handycam HDR-CX580V Recording Button Replacement

This guide will help you to remove the recording button in your Sony Handycam HDR-CX580V.

Written By: Derek Fritz

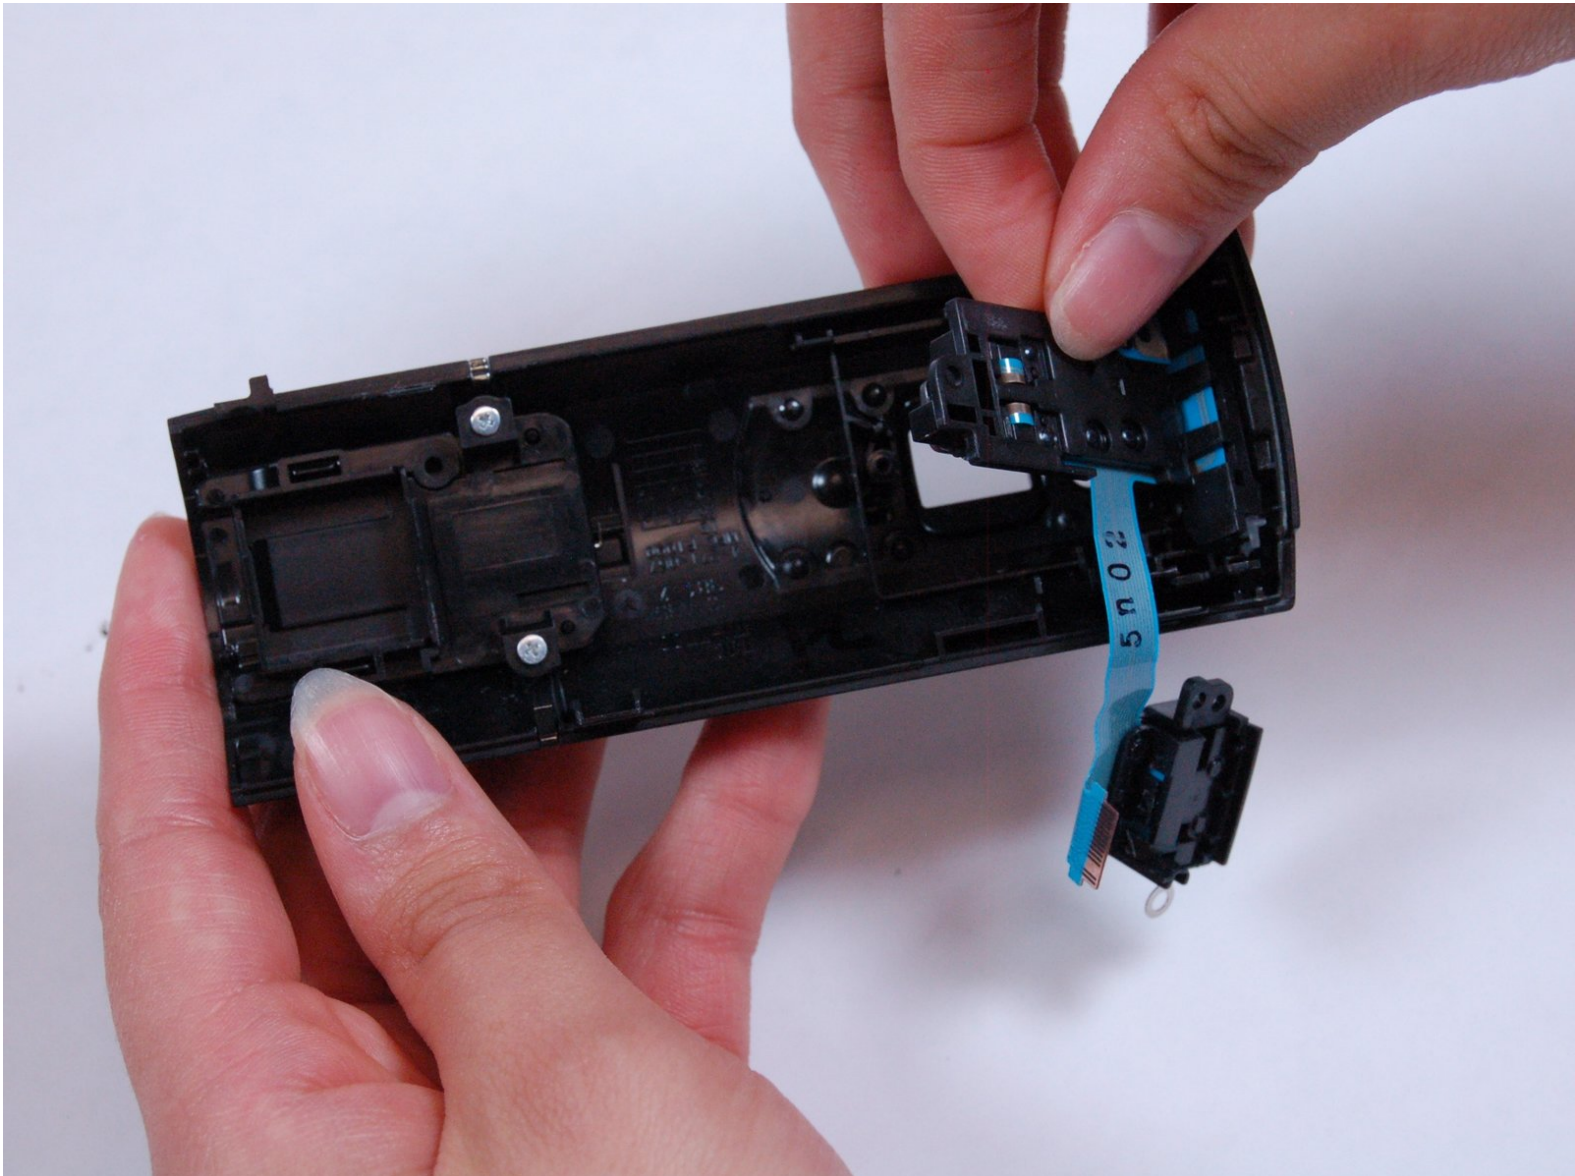

---

## INTRODUCTION

In this guide, you will go through the process of removing the camera's recording button, as well as its wiring. This involves removing a portion of the camera's shell, but can be accessed relatively easily.



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Battery



- Locate the slider labeled "BATT" and pull it back from the battery with your thumb.

## Step 2



- At this point, you should be able to remove the battery by simply lifting it from the camera.
- ⓘ The camera provided for guide-creation did not include a battery. However, the battery position should be the same.



## Step 3 — Recording Button



- Use the Phillips #00 head to remove the following 5.5mm screws on the left-hand side.

## Step 4



- Use the Phillips #00 head to remove the following 5.5mm screws on the empty battery socket.

## Step 5



- Use the Phillips #00 head to remove the following 5.5mm screws on the bottom.

## Step 6



- Fold back the hinging panel on the top of the camera located near the lens.
- Use the Phillips #00 head to remove the following 5.5mm screws on the top under the hinging panel.



## Step 7




- Slide back the cover for the DC and A/V ports on the right-hand side.
- Use the Phillips #00 head to remove the following 5.5mm screws underneath the cover and on the right-hand side.

## Step 8



- Use the plastic opener tool to loosen the casing on the bottom and the right-hand side.
- ⓘ At this point, the right-hand side should simply come off, although it will still be connected with internal wiring.
- ⚠ Be delicate with the wiring still attached to the side casing until you have access to removing them later.


## Step 9

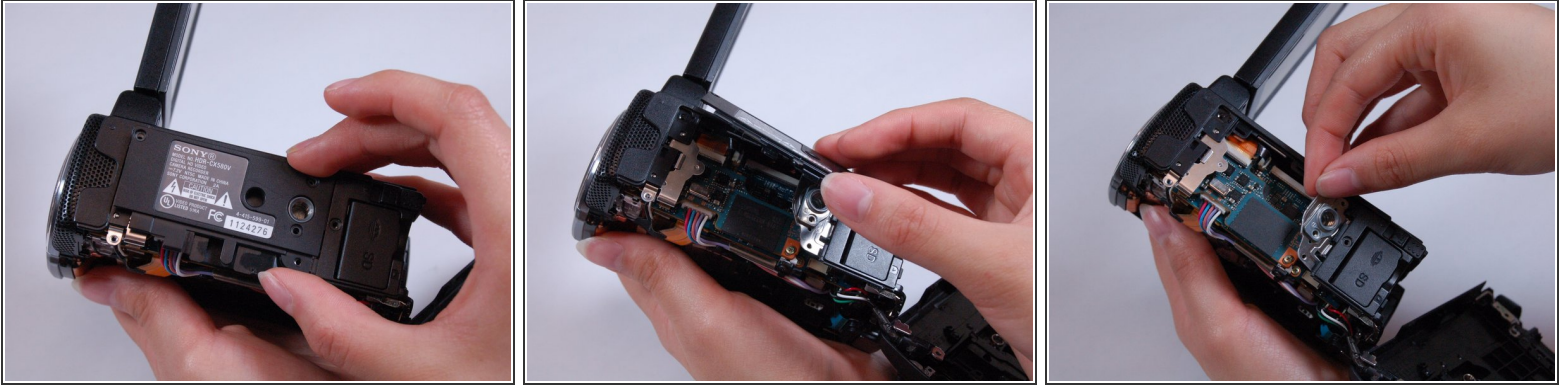

- Carefully remove the bottom casing with your fingers.

⚠ Be careful not to loose the small metal stand-mount pieces that lay underneath the casing.


## Step 10

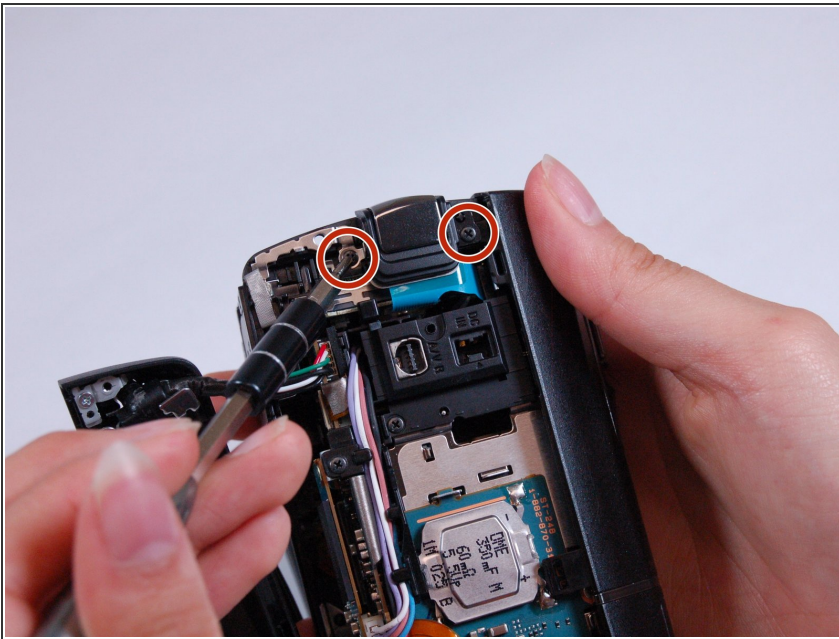

- Look at the right side of the camera (the side with the recording button) while holding back the detached casing.
- Use the Phillips #00 head to remove the following 5.5mm screws near the recording button.





## Step 11

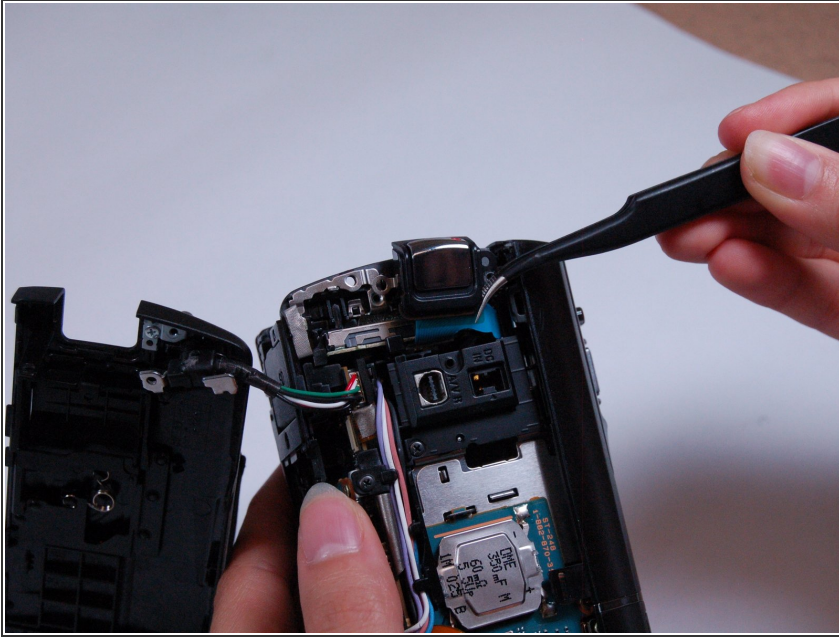

- Use the curved tweezers to carefully detach the blue ribbon cable connector from the body of the camera.
- ⓘ The recording button and its blue ribbon cable connector should become detached from the body, but remain connected to the top casing.


## Step 12

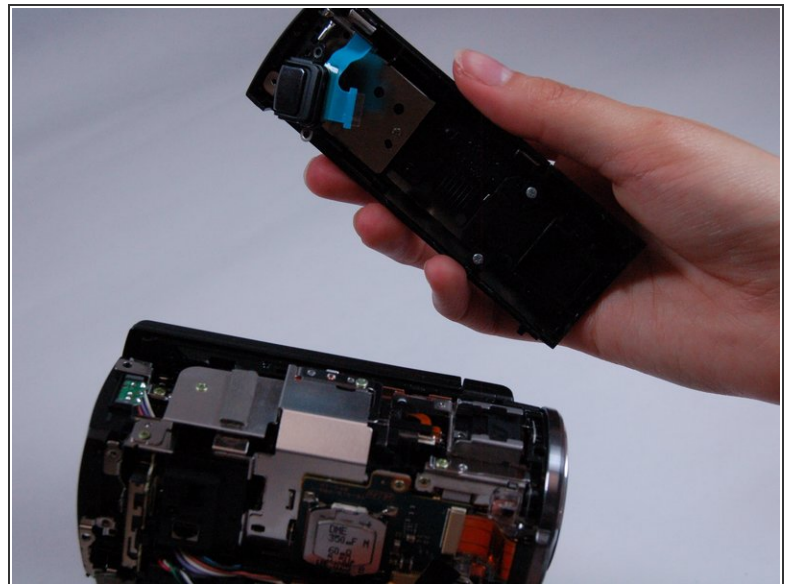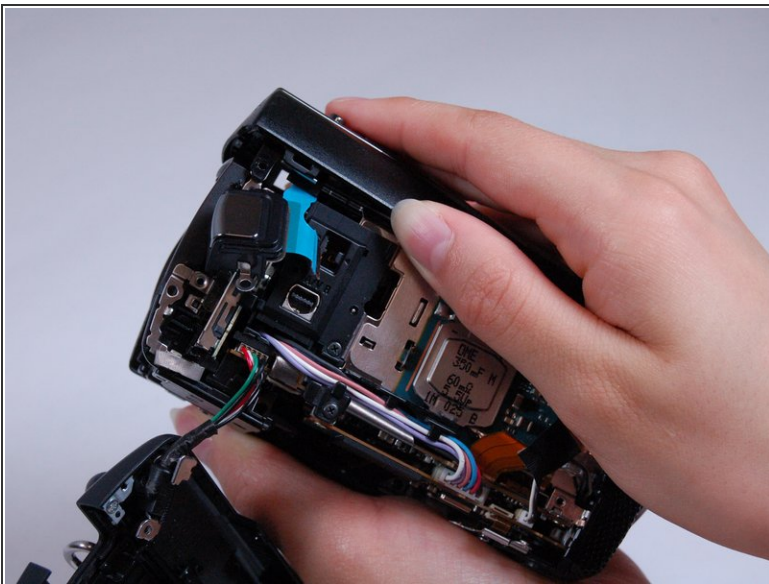

- Pull off the top casing by lightly grabbing either side and pulling towards the back of the camera.




## Step 13

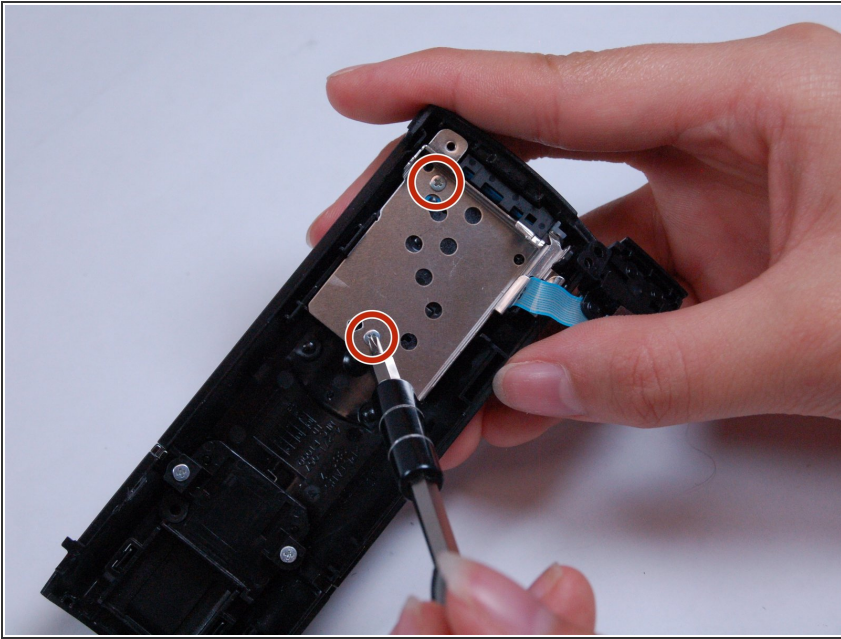


- Use the Phillips #00 head to remove the following 5.5mm screws on the inside of the top casing.

## Step 14

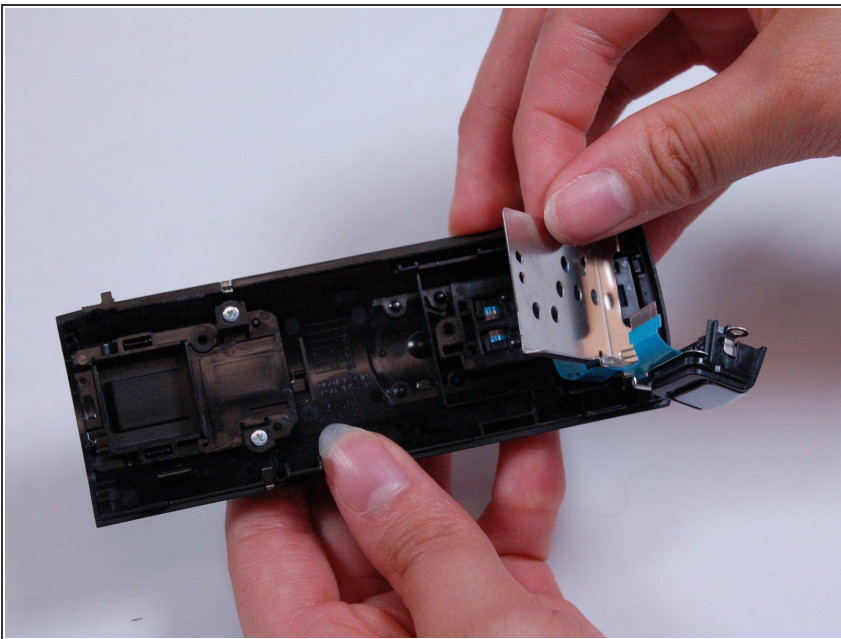

- Carefully remove the metal frame from the top casing.

## Step 15

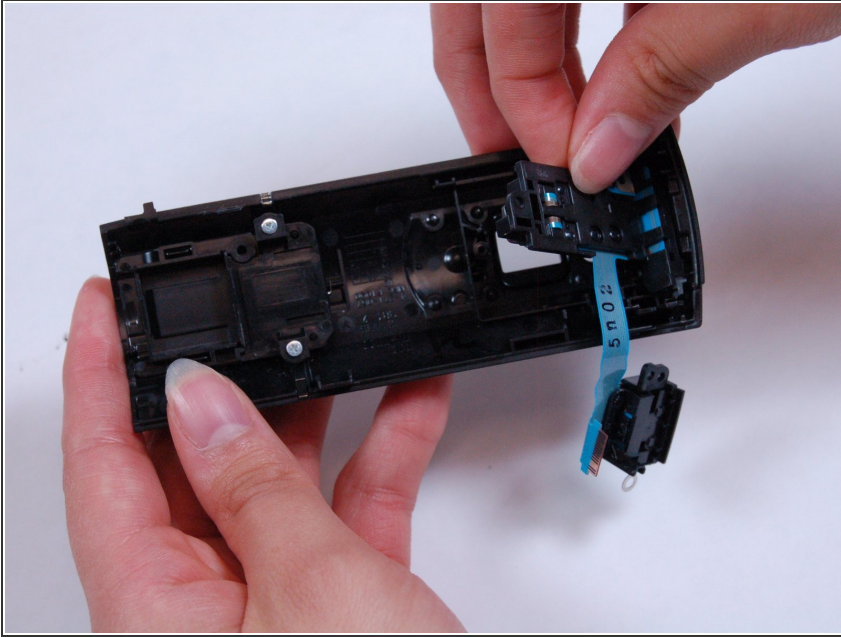

- You are now free to remove the recording button, as well as its connection strip.

To reassemble your device, follow these instructions in reverse order.