



Grille

This is a prerequisite for replacing the speakers. This details the grille removal for access to the speakers.

Written By: Travis Baker





TOOLS:

- [T10 Torx Screwdriver](#) (1)
-

Step 1 — Grille



- Remove the two screws holding the speaker grille in place.

Step 2



- Grip the sides of the device and push the speaker grille down and out.

Step 3



- Gently release the ribbon from its connector and remove the grille.

To reassemble your device, follow these instructions in reverse order.