



HP Photosmart 935 Batteries Replacement

This guide will instruct the user to replace...

Written By: Clay Young



INTRODUCTION


This guide will instruct the user to replace the batteries in the HP Photosmart 935 Digital Camera.

Step 1 — Batteries




- Flip the camera over so the bottom of the camera is facing you.

Step 2

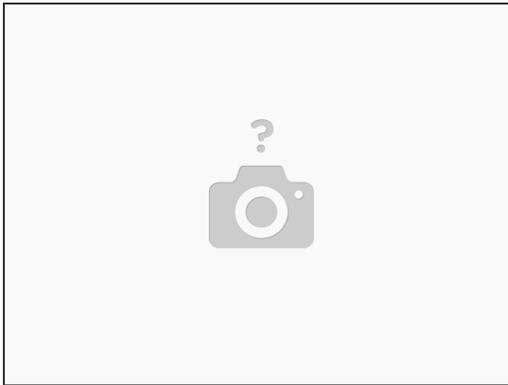

- Turn the mode dial to the OFF position.

Step 3

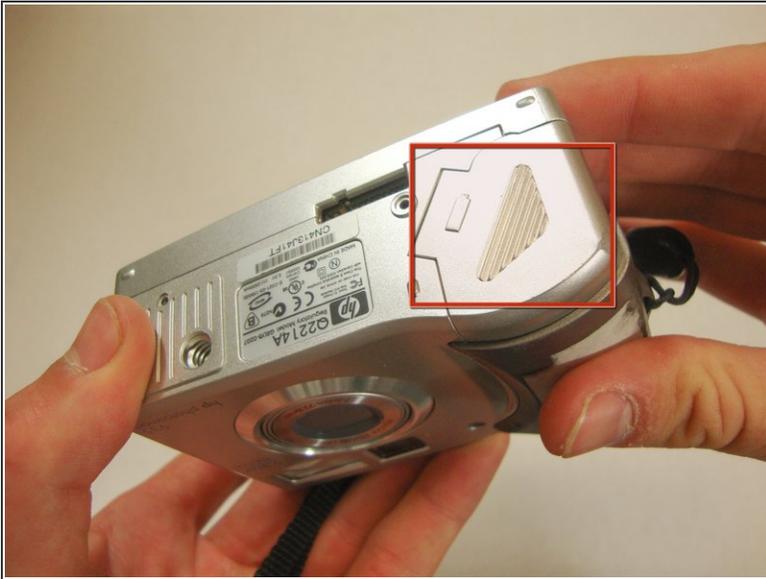

- Slide the bottom cover in the direction of the arrow to open it.

Step 4



- Pull out the batteries.

To reassemble your device, follow these instructions in reverse order.