



Google Pixel C Screen Replacement

This guide will provide step by step instructions to the removal of the screen from a Google Pixel C tablet.

Written By: Deborah Iwakiri



INTRODUCTION

This guide will outline how to replace a cracked, shattered, or faulty screen on a Google Pixel C.

TOOLS:


- [Heat Gun](#) (1)
 - [Metal Spudger Set](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Heavy-Duty Spudger](#) (1)
 - [Heavy-Duty Suction Cups \(Pair\)](#) (1)
-

Step 1 — Screen




- ⓘ Ensure that the device is completely powered down before beginning to take it apart
- Use a heat gun to melt the adhesive that holds the screen to the device
- Move the heat gun around the edge of the screen for approximately 1 minute, or until the screen can be lifted off in the next step.
- ⚠ Make sure not to heat the screen for too long because too much can damage other components inside the tablet.

Step 2

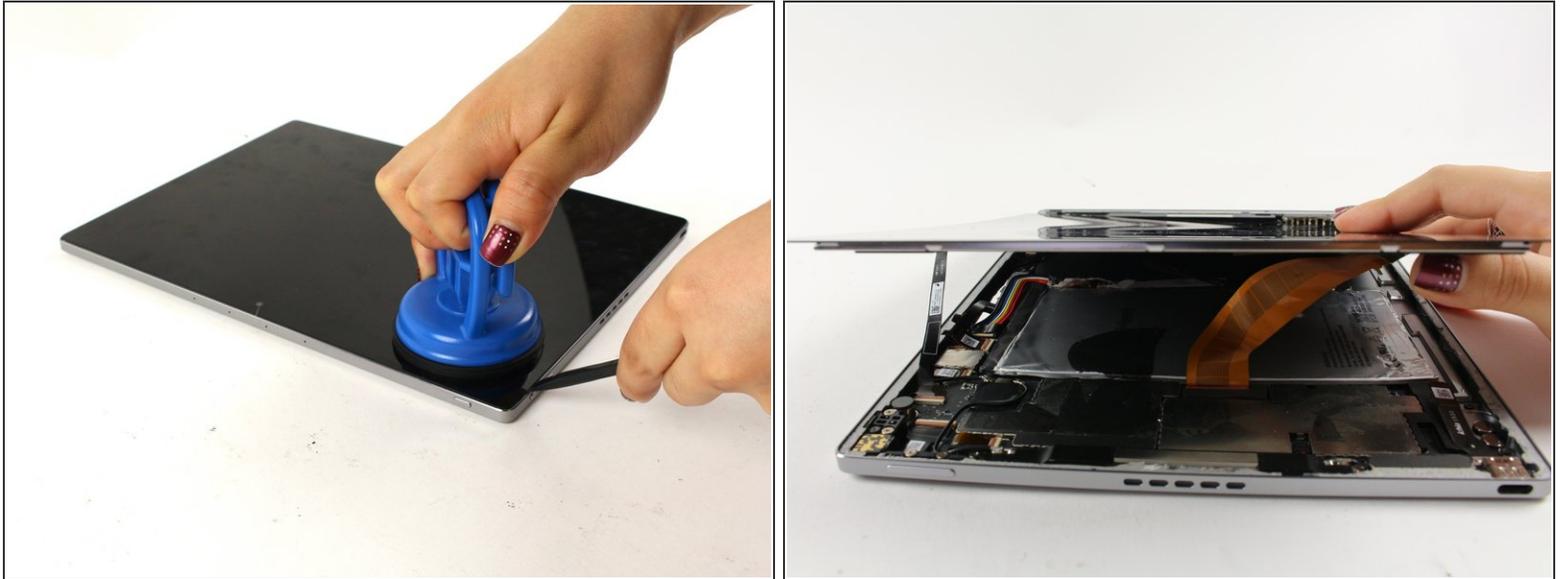

- Use a suction cup to assist in lifting the screen while prying around its edges with a plastic spudger.
 - If necessary use a metal spudger to pry the screen up, taking care not to scratch the device.
- ⚠** Be careful not to pull the screen too far off. It will still be attached to the device by a cable for the front facing camera and the wide display data cable.
- 🔗** Reattaching the screen will require adhesive to ensure that it stays in place.

Step 3

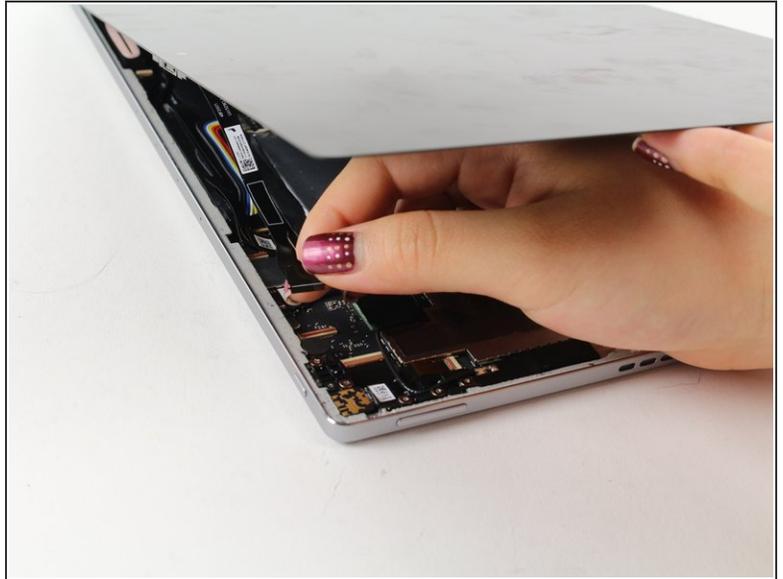

- Detach the cables for the camera by lifting the small flap using the tip of your fingernail or a spudger. Gently pull the ribbon cable out.

Step 4



- Follow the same removal procedure to detach the wide gold cable.
- ☞ When reattaching cables, it is helpful to use tweezers to slide the cable in before securing it down with the flap.
- ⓘ This device is missing a battery, so the device that you are working on may appear slightly different inside.

To reassemble your device, follow these instructions in reverse order.