


# Panasonic Lumix DMC-FX07 USB Port Replacement

Replace your USB port so you can download your pictures once again to your computer.

Written By: Karissa

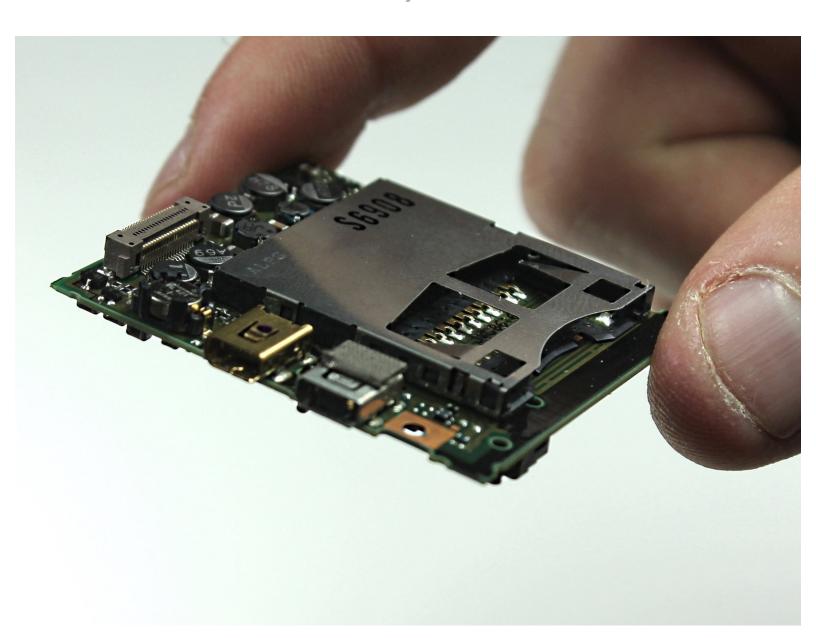

# **INTRODUCTION**

This guide will demonstrate how to install the USB Ports on your camera.



# **TOOLS:**

- Phillips #00 Screwdriver (1)
- Spudger (1)

# Step 1 — Battery



- Move the switch on the battery door to the Open position.
- The door will automatically swing open after you let it go.





- Push the small gray tab on the top right corner to the left. The battery will pop out slightly.
- Keep your finger clear of the battery when it pops out.

# Step 3 — Memory Card



- Push the memory card in and let go.
- The memory card will pop out slightly.
- Pull out the memory card.

#### Step 4 — Back Cover





- Unscrew the small screws on the sides of the camera.
- The screws on the left side(#00P, 4.7mm) are longer than the screw on the right side(#00P, 3.3mm).





- Unscrew the three small screws on the bottom(#00P, 3.3mm).
- (i) The bottom will fall off.







- Lift up the bottom back cover by prying the bottom edge with the spudger.
- Gently lift up the back cover with your hand from the bottom to the top.








- Lift the tabs on the ZIF connectors.
- The ribbon cables should easily come out of the ZIF connectors.

# Step 8 — Top Cover




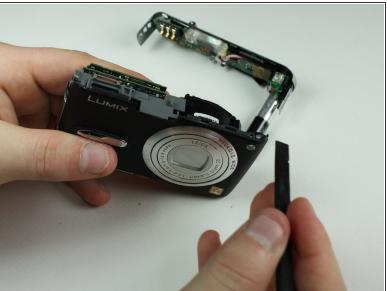


 Using the spudger, pry off the top cover by gliding the spudger along the entire edge between the top cover and the front cover.

⚠ Be careful not to damage the cylindrical capacitor on the circuit board under the top cover.

# Step 9 — Motherboard

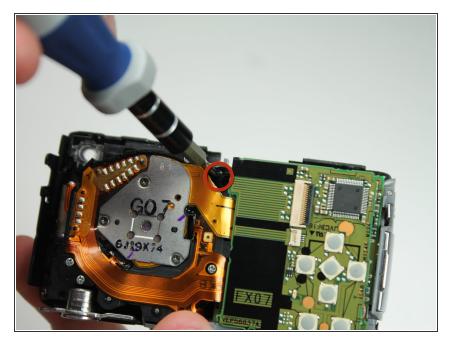


 Remove the small screw in the hole towards the top of the camera(#00P, 5.4mm).

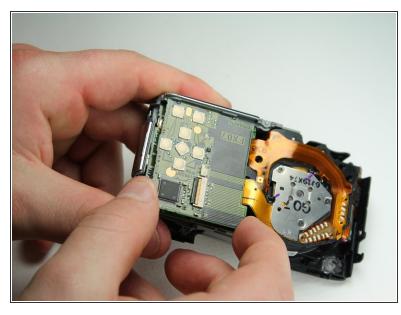



- Use the spudger to lift up the back logic board.
- Using your fingers, gently wiggle and pull off the back motherboard.
- (i) You will hear a click when you lift it up.

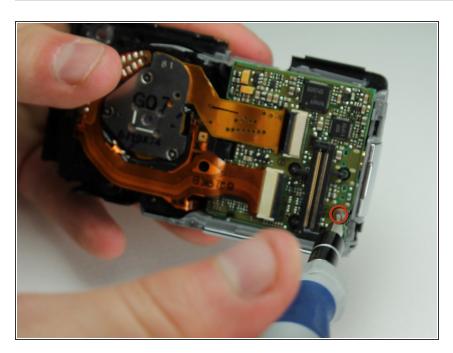

 Remove the small screw holding down the lower motherboard(#00P, 3.2mm).








- Use the spudger to lift the upper tab from the main housing.
- Gently lift the lower tab from the main body by prying it with your finger.
- Gently pull off the plastic motherboard housing sideways.







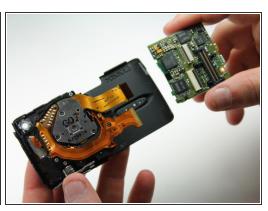

- Gently lift the tabs on the ZIF connectors connecting the lens to the front motherboard.
- (i) Once you lift the tabs the ribbons should fall right out and the front motherboard should be free.

# Step 14 — USB Port

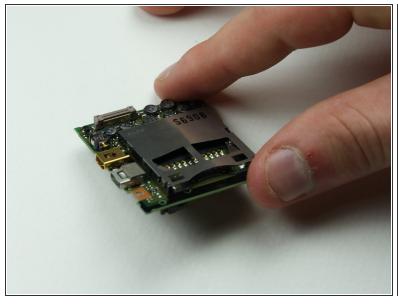

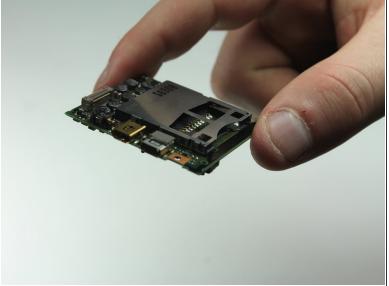

The USB port is hardwired into this motherboard.

To reassemble your device, follow these instructions in reverse order.