




# Nikon Coolpix 7900 LCD Screen Replacement

To detail the process for removing the LCD Screen.

Written By: Kaky Payne

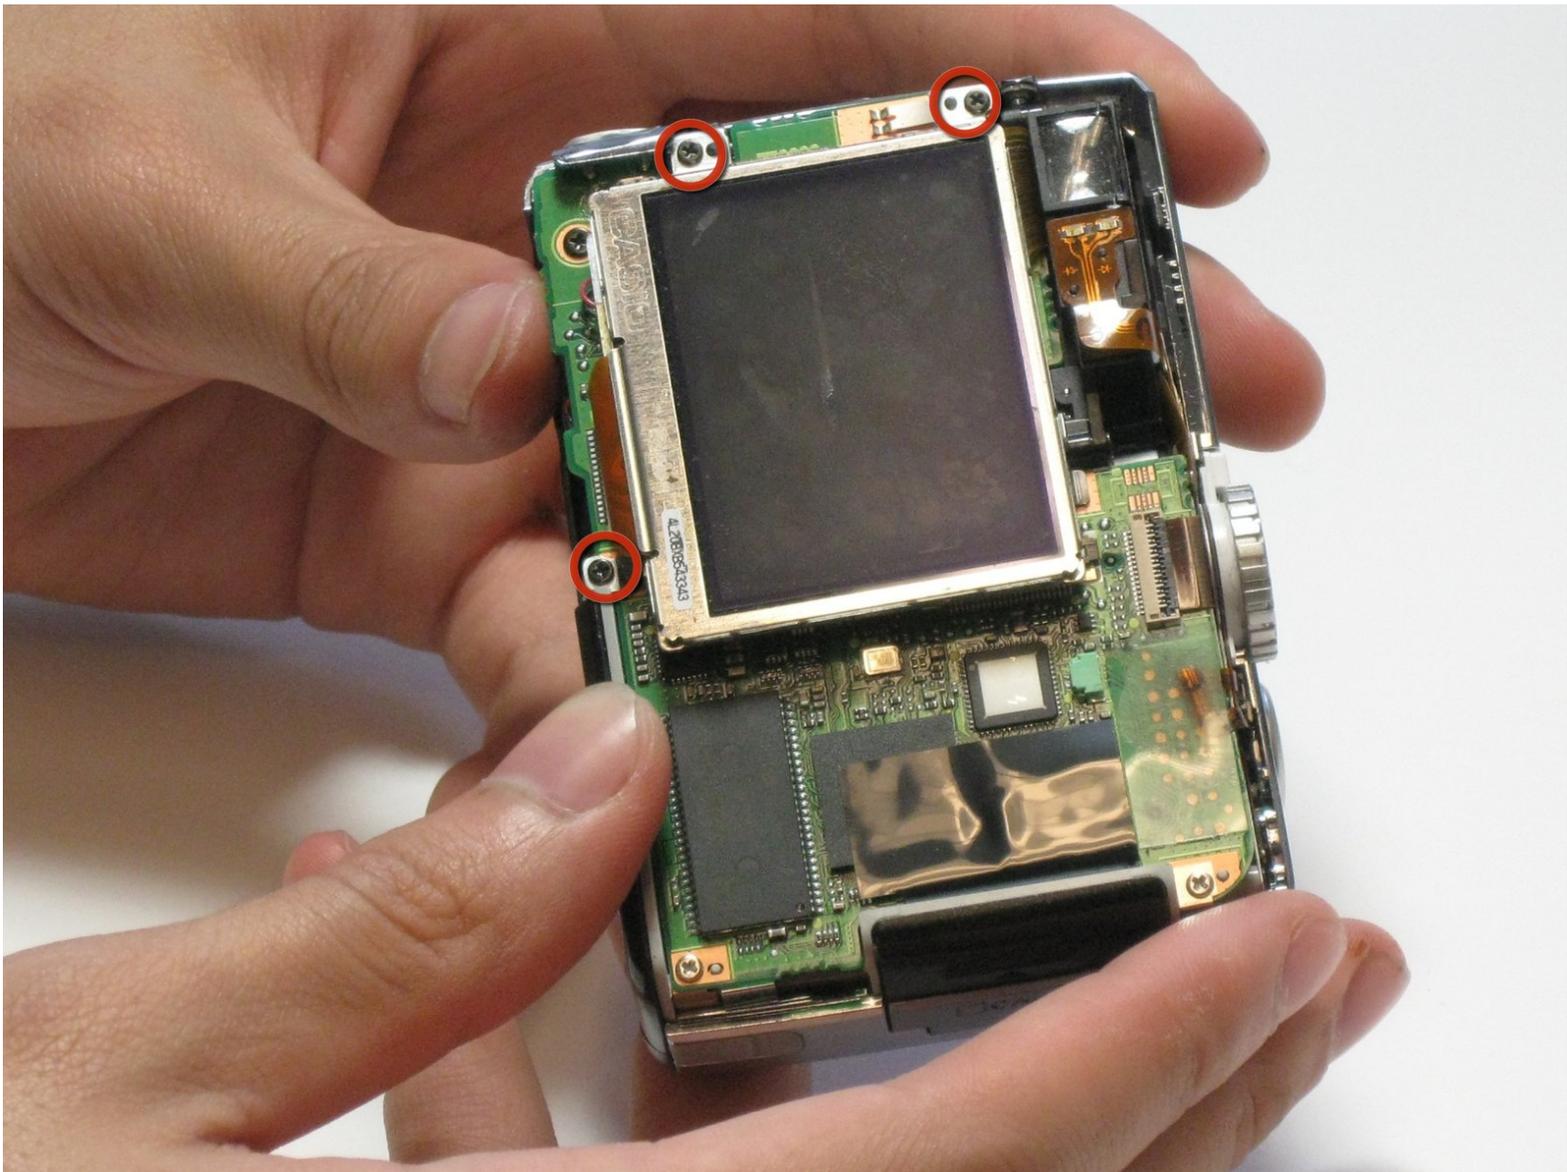

---

## INTRODUCTION

Use this guide to replace the LCD.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Back Cover



- Remove the four 3.0mm screws on the bottom of the camera.

## Step 2




- Remove the two 3.0mm screws on the left side of the camera near the memory card compartment.

### Step 3




- Remove the two 3.0mm screws on the right side of the camera.

### Step 4

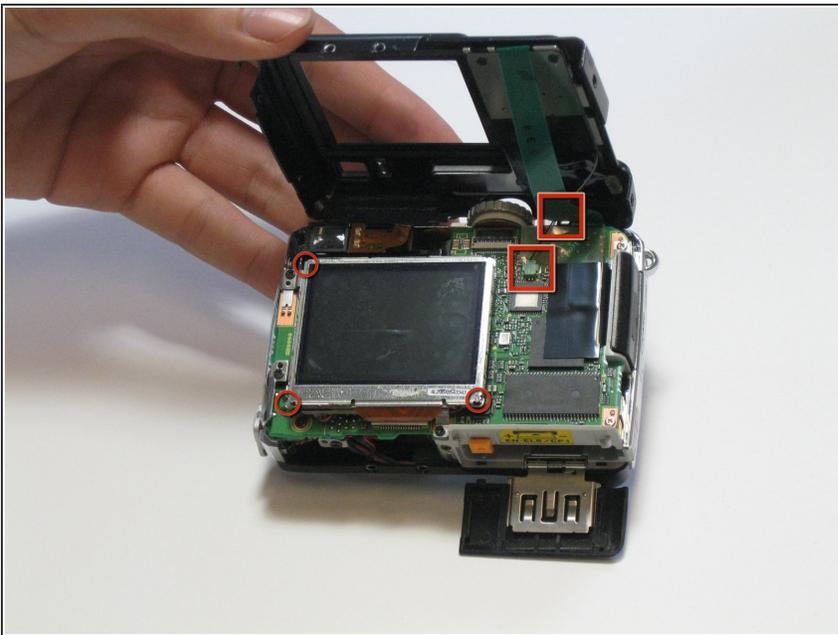


- Carefully open the back cover. Take care as there are connectors still attached.

## Step 5

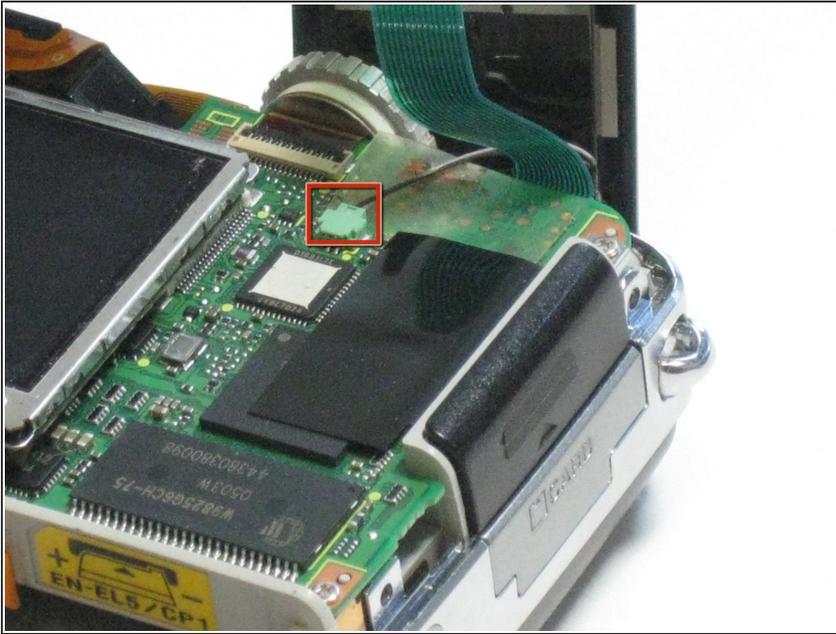


- Disconnect the cable by pulling the head upward along the green circuit board. If you only are changing the LCD, skip this step.

## Step 6

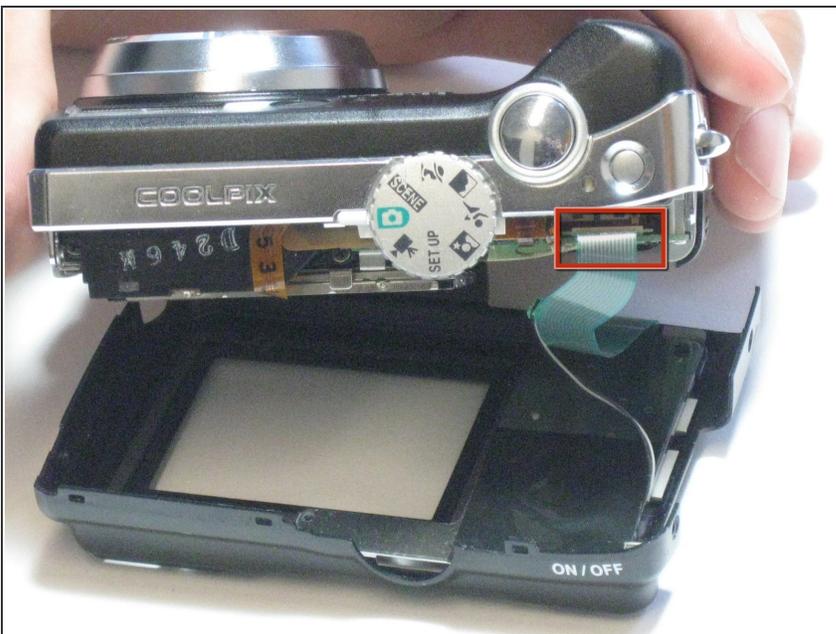


- Disconnect the ribbon cable by grabbing the two handles and pulling it directly out of the socket. If you are only changing LCD, skip this step.
- ⓘ The back cover will be disconnected from the camera

## Step 7 — LCD Screen

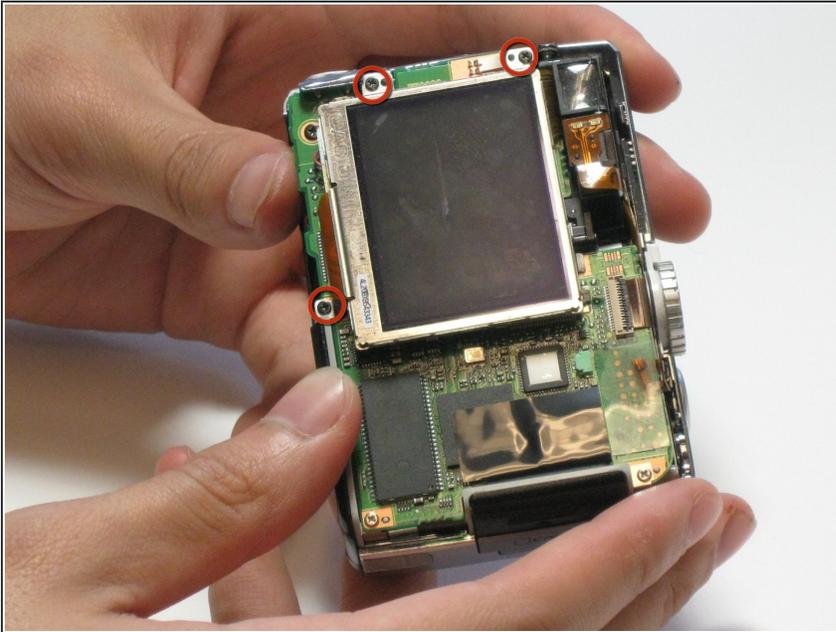

- First remove the three 2.5mm screws securing the LCD screen to the substrate. Make sure not to keep hold of the little metal connector by the top left screw!
- Carefully flip the screen down to reveal the back of the screen

## Step 8

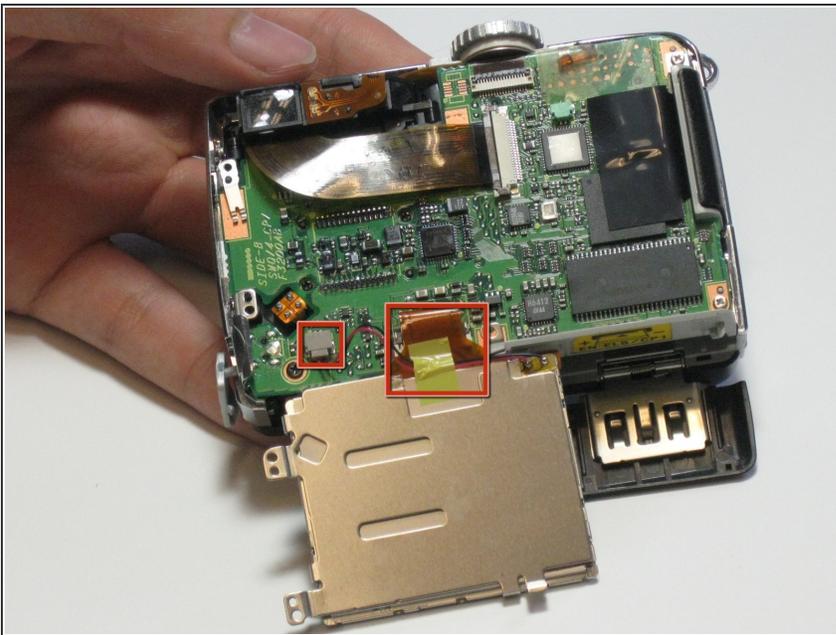

- Disconnect the ribbon cable and gray connector with red and black wires.
- Depending on your spare part, you may now need to carefully pry the screen back cover off. It is held by a double sided sticky tape on the inside. Be gentle!

To reassemble your device, follow these instructions in reverse order.