


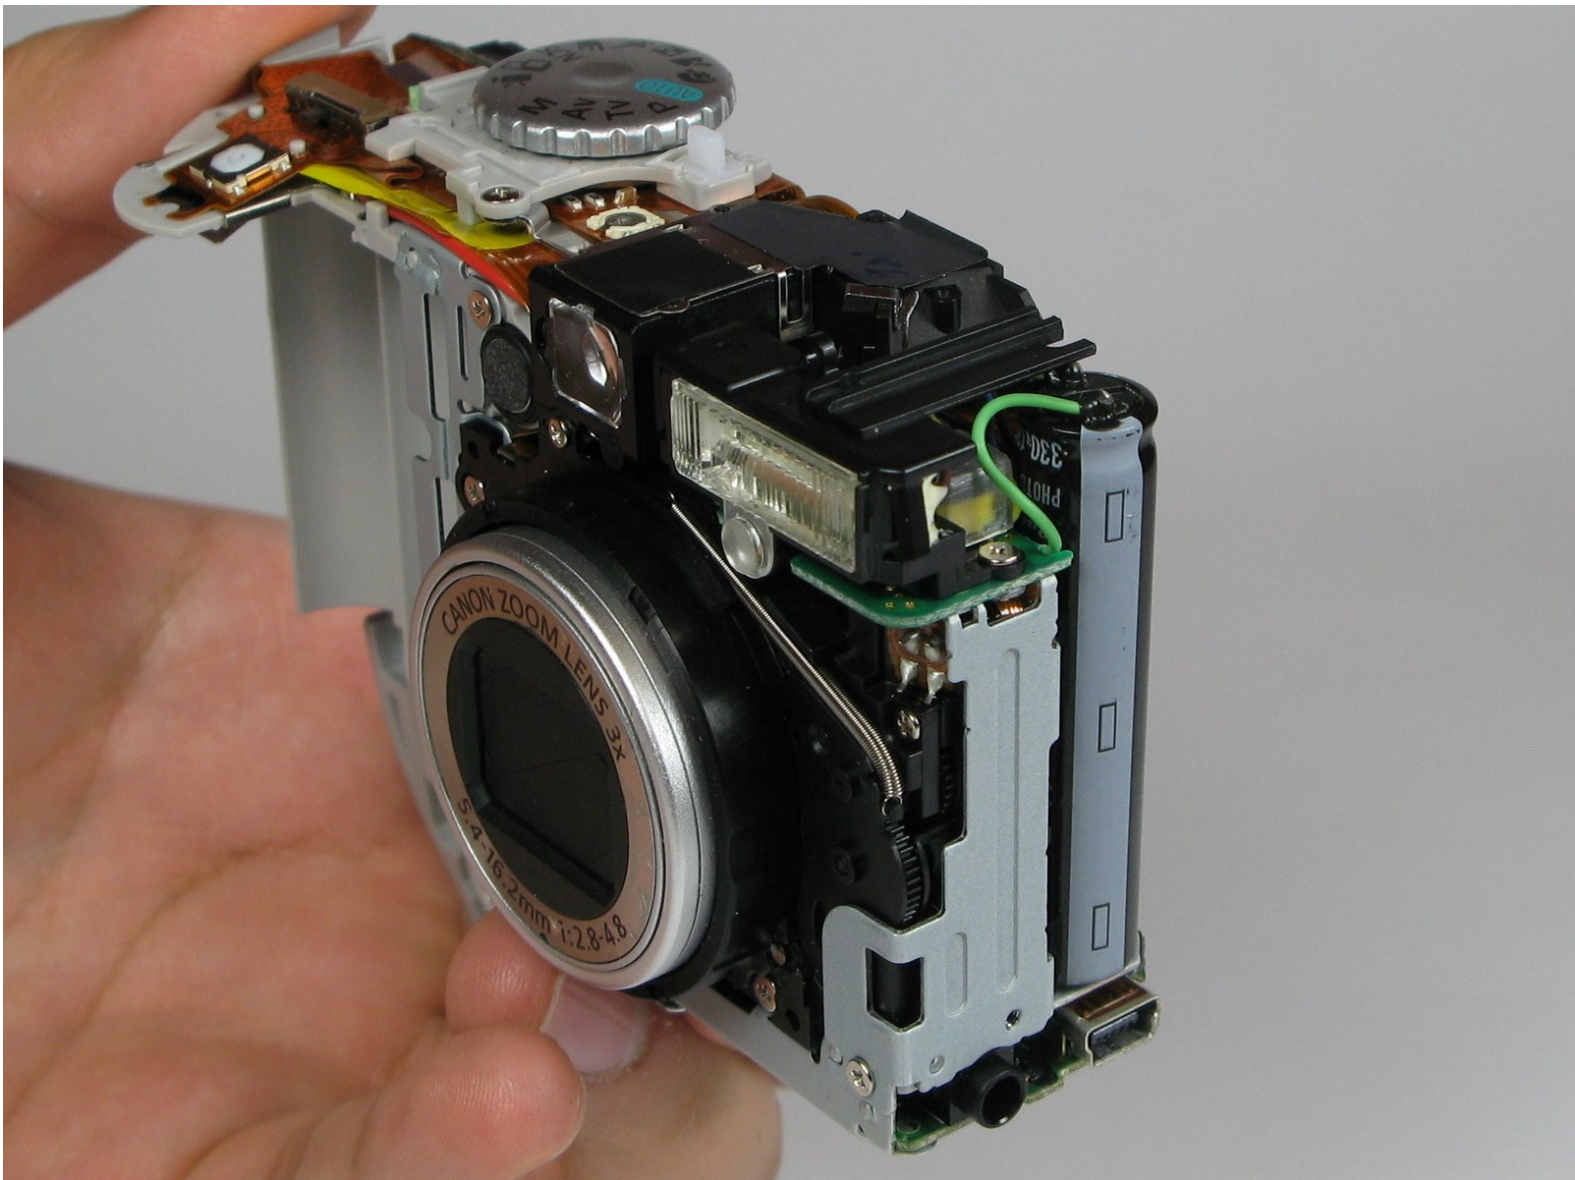

Canon PowerShot A75 Casing Replacement

This guide will walk you through the steps to take the casing off of your camera.

Written By: Andrew Elliott



INTRODUCTION

Use this guide to replace the Canon Powershot A75's casing.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Batteries





- Turn the camera over and locate the "BATT OPEN" sliding switch.

Step 2



- Slide the switch to the right.
 - ⓘ The battery cover should slide down and spring open.

Step 3

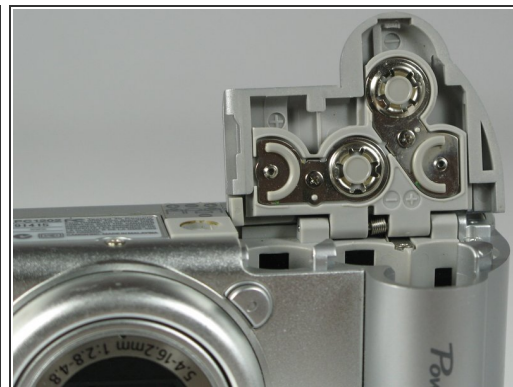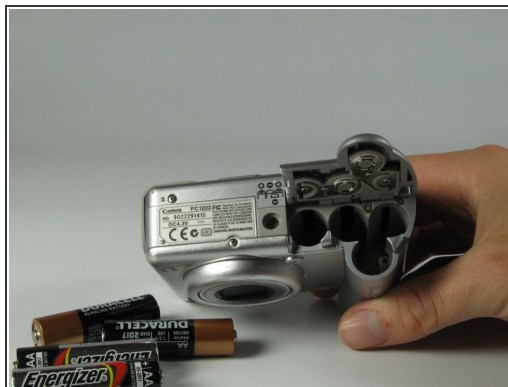

- Remove the 4 AA batteries.
 - ⓘ Watch for the orientation of the batteries as they slide out.
 - ☑ The battery orientation is shown under the battery flap itself and on a sticker next to the battery flap.

Step 4 — Casing




- Remove the three 2.5mm screws on the bottom of the camera.

Step 5




- Remove the 3.8mm screw underneath the flap that covers the A/V port.

Step 6

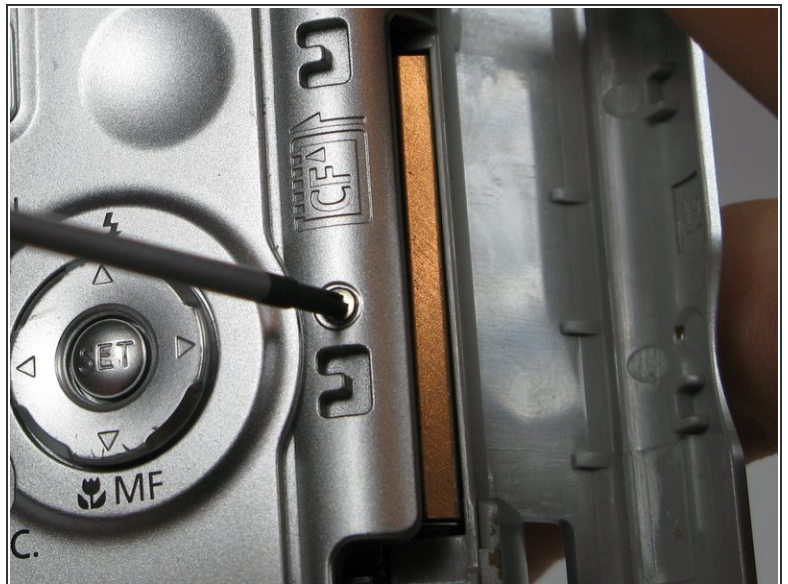


- Remove the 2.4mm screw located underneath the cover of the memory card slot.

Step 7

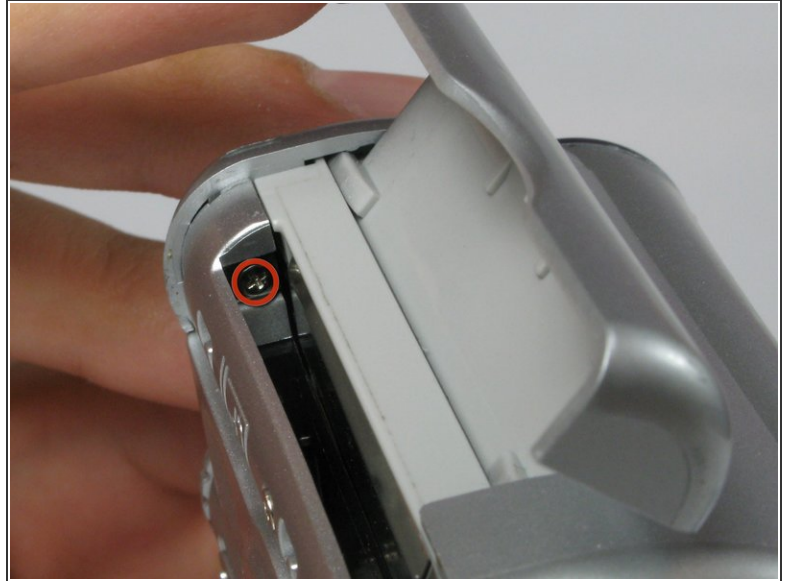

- Open the memory card slot by sliding it laterally until you hear a click.
- Remove the 5.9mm screw in the upper corner of the memory card slot.


Step 8

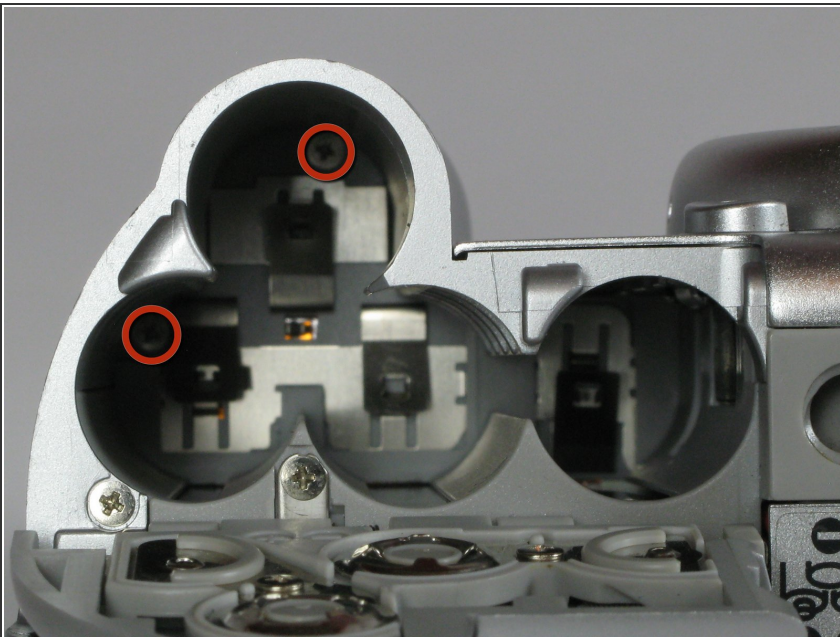

- Remove the two 4.1mm screws at the bottom of the battery flap.

Step 9




- Lift the shutter button and speaker part from the top of the camera.
 **DO NOT** pull the part too hard because there is a plug connecting the speaker to the camera.

Step 10



- Using a pair of tweezers, grab the plug that connects the speaker to the camera and gently pull it out.

Step 11

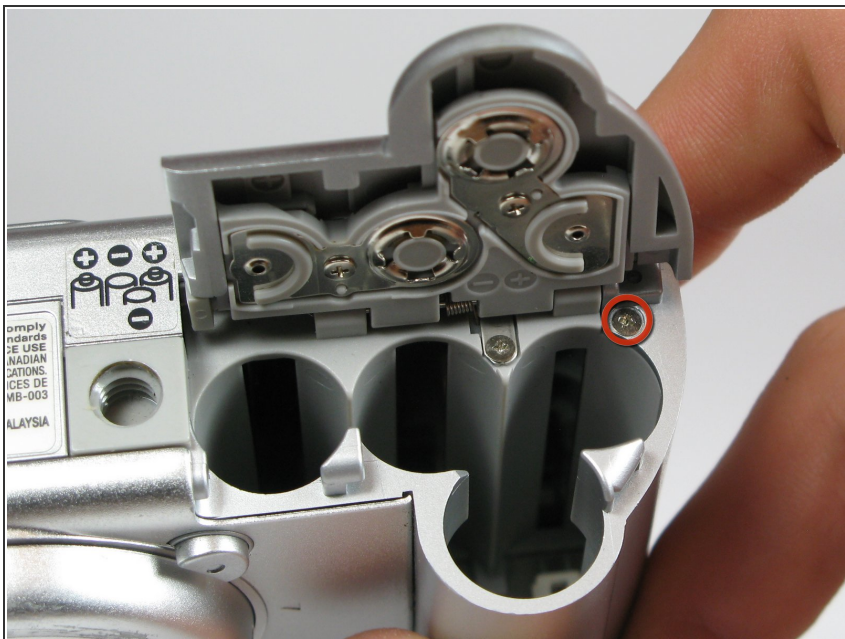

- Remove the rightmost 4.2mm screw underneath the battery cover, not the center screw.

Step 12




- Separate the back casing and front casing of the camera using your hands.
- ⓘ Pulling the two halves apart can be difficult, especially at the top. Use a moderate amount of force.

Step 13



- On the front of the camera, press the button on the lower left of the lens.
- Twist the outer lens casing counter-clockwise and slide it out.

Step 14

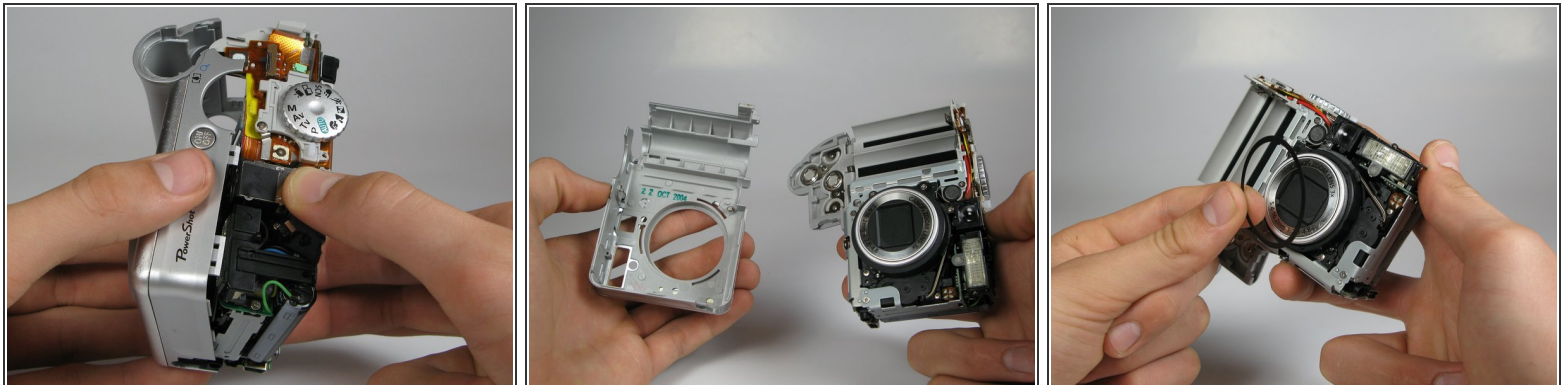

- Take off the front casing.
- ☑ There is a black rubber washer around the lens that comes out after you take the casing off. Make sure to replace it when putting the camera back together.

To reassemble your device, follow these instructions in reverse order.