



Sony RDR HX750 HX950 Disassembly

How to open Sony RDR HX.

Written By: Cafony



INTRODUCTION


This guide will show how to remove the hard drive and the optical drive for the Sony RDR HX.



TOOLS:




- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Remove cover

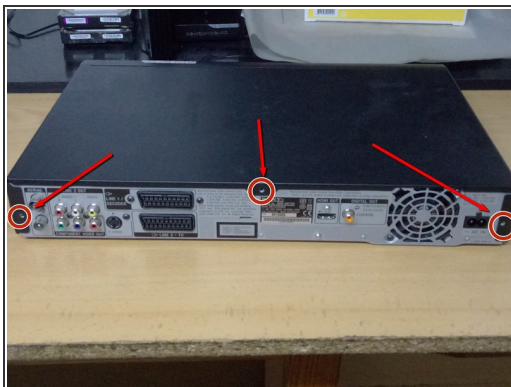


- Remove the screws from the back and sides of the top cover.

Step 2 — Remove Hard Disk

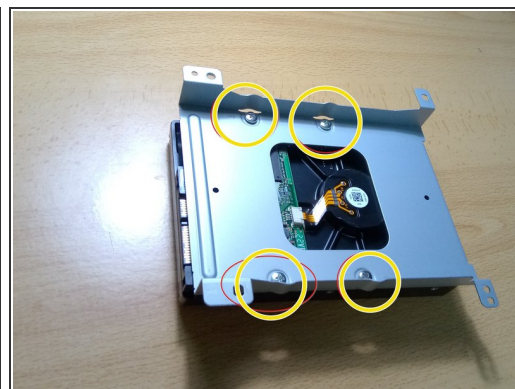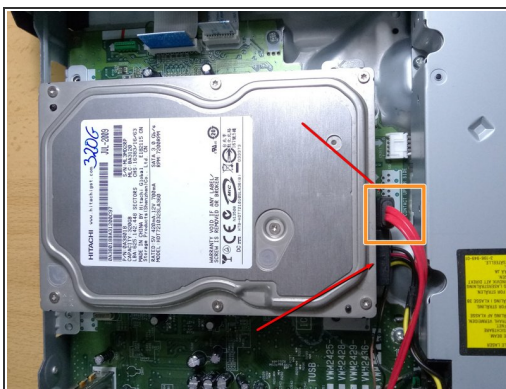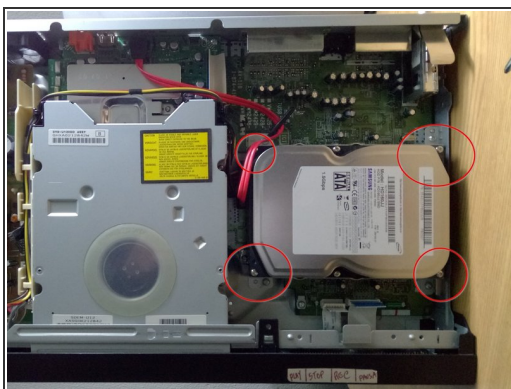


- Remove the four screws that secure the hard drive mounting bracket to the bottom of the unit.
- Unplug the two cables from the rear of the hard drive.
- Remove the four screws from the bottom of the hard drive mounting bracket.

Step 3 — Remove DVD player

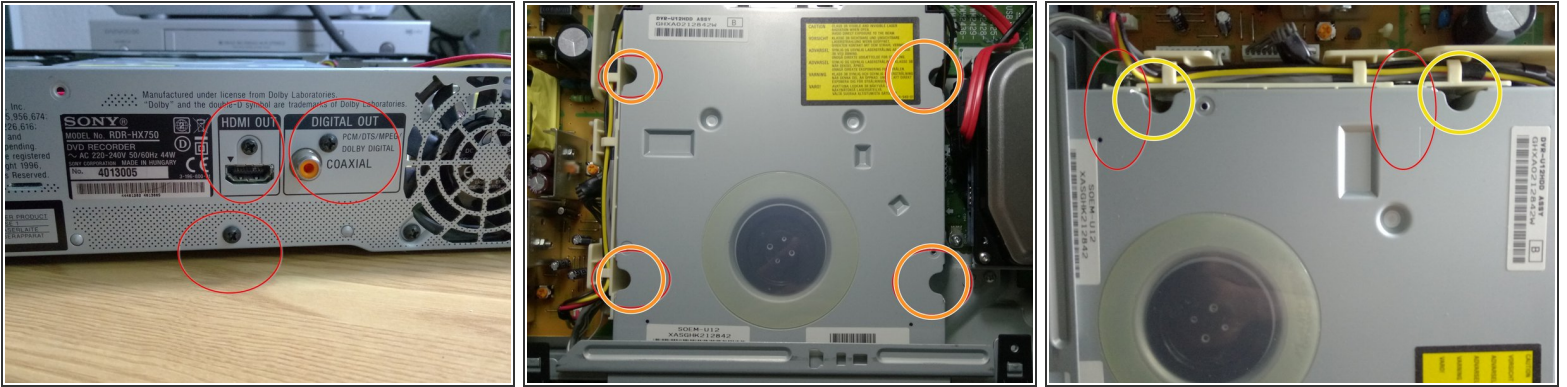


- Remove the screws from the back
- Remove the screws from the DVD cover
- Remove the screws from the plastic cable holder

Step 4 — Remove front Panel

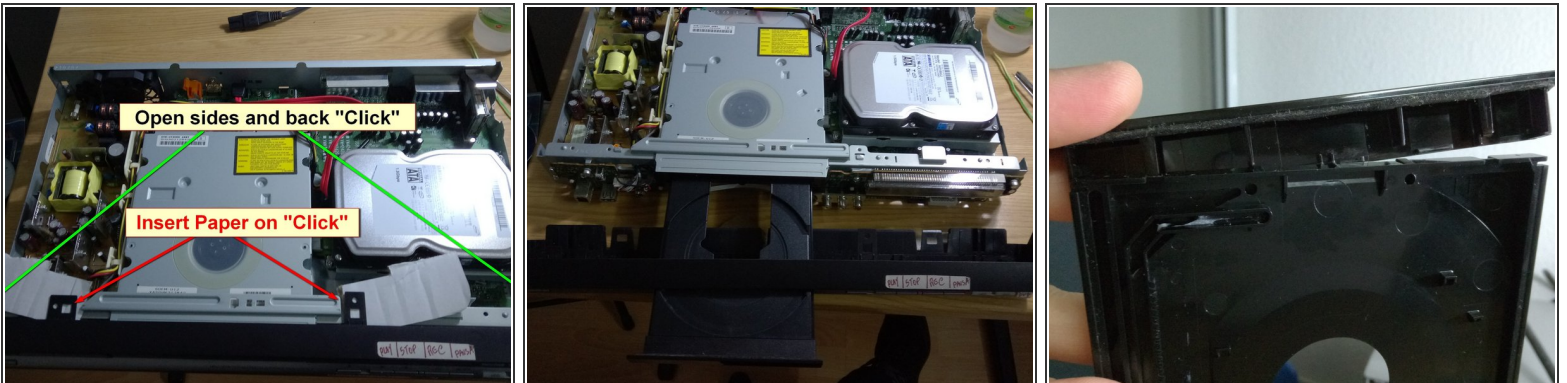

- Insert the paper under each "click" to remove the front panel.
- Once each "click" is loose, push the front panel gently.
- The table of the compact disk has a little plastic piece in front that goes up to come out with a "click"

Step 5 — Remove DVD block

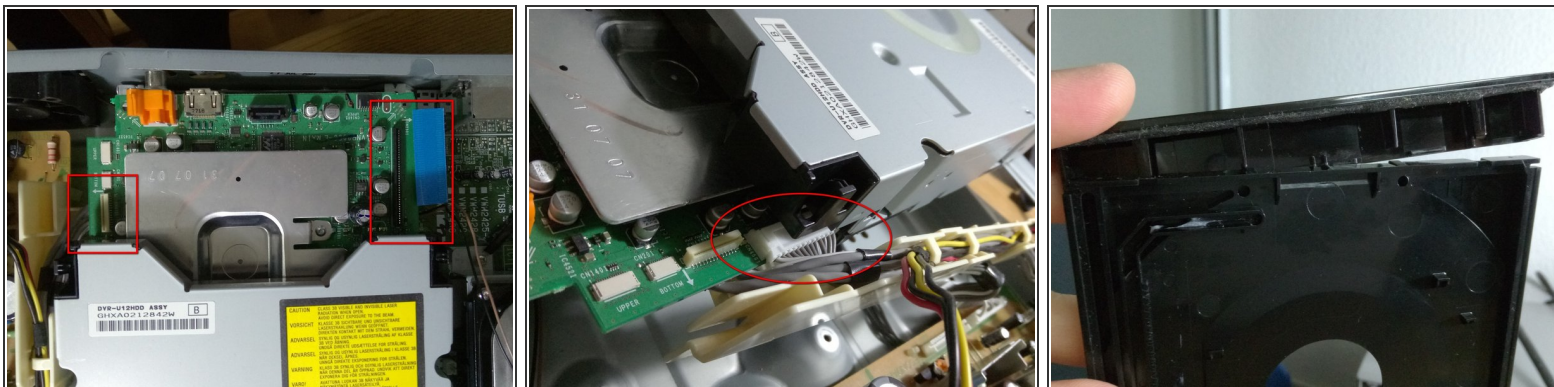


- Unplug the cables show in photo.
- Disconnect the cable hidden on the side.
- Remove the piece on the cd reader

Step 6 — Remove cover of dvd player



- Under the DVD block, remove the screws as shown.
- Remove the screws on the board.
- Now the laser can be accessed.

Step 7 — Sony RDR HX750 laser

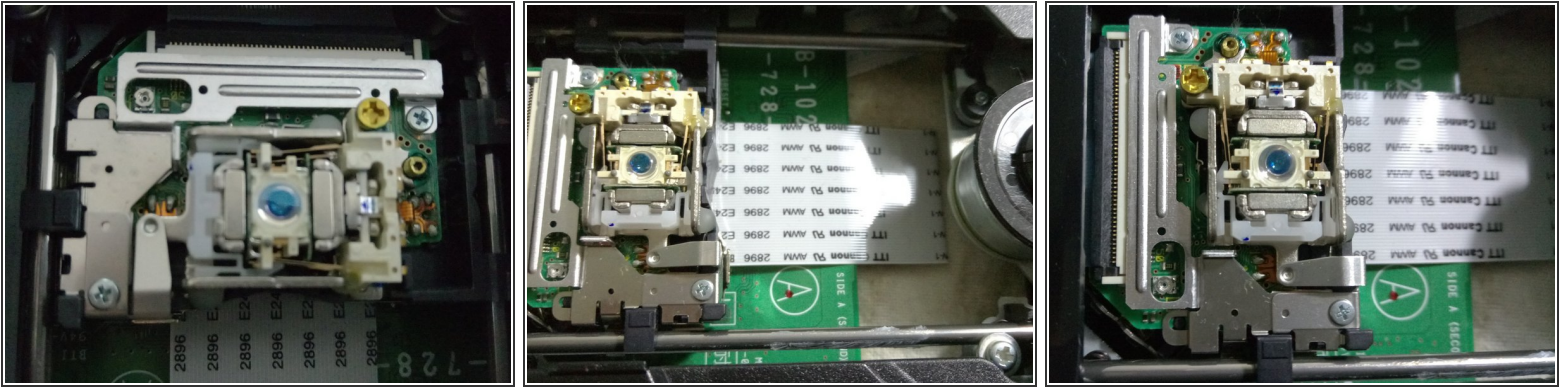

- Inserir instruções aqui.

To open this dvd recorder folow this tutorial