




# 2003-2007 Honda Accord Serpentine Belt Replacement

The serpentine drive belt should be replaced...

Written By: eCuration

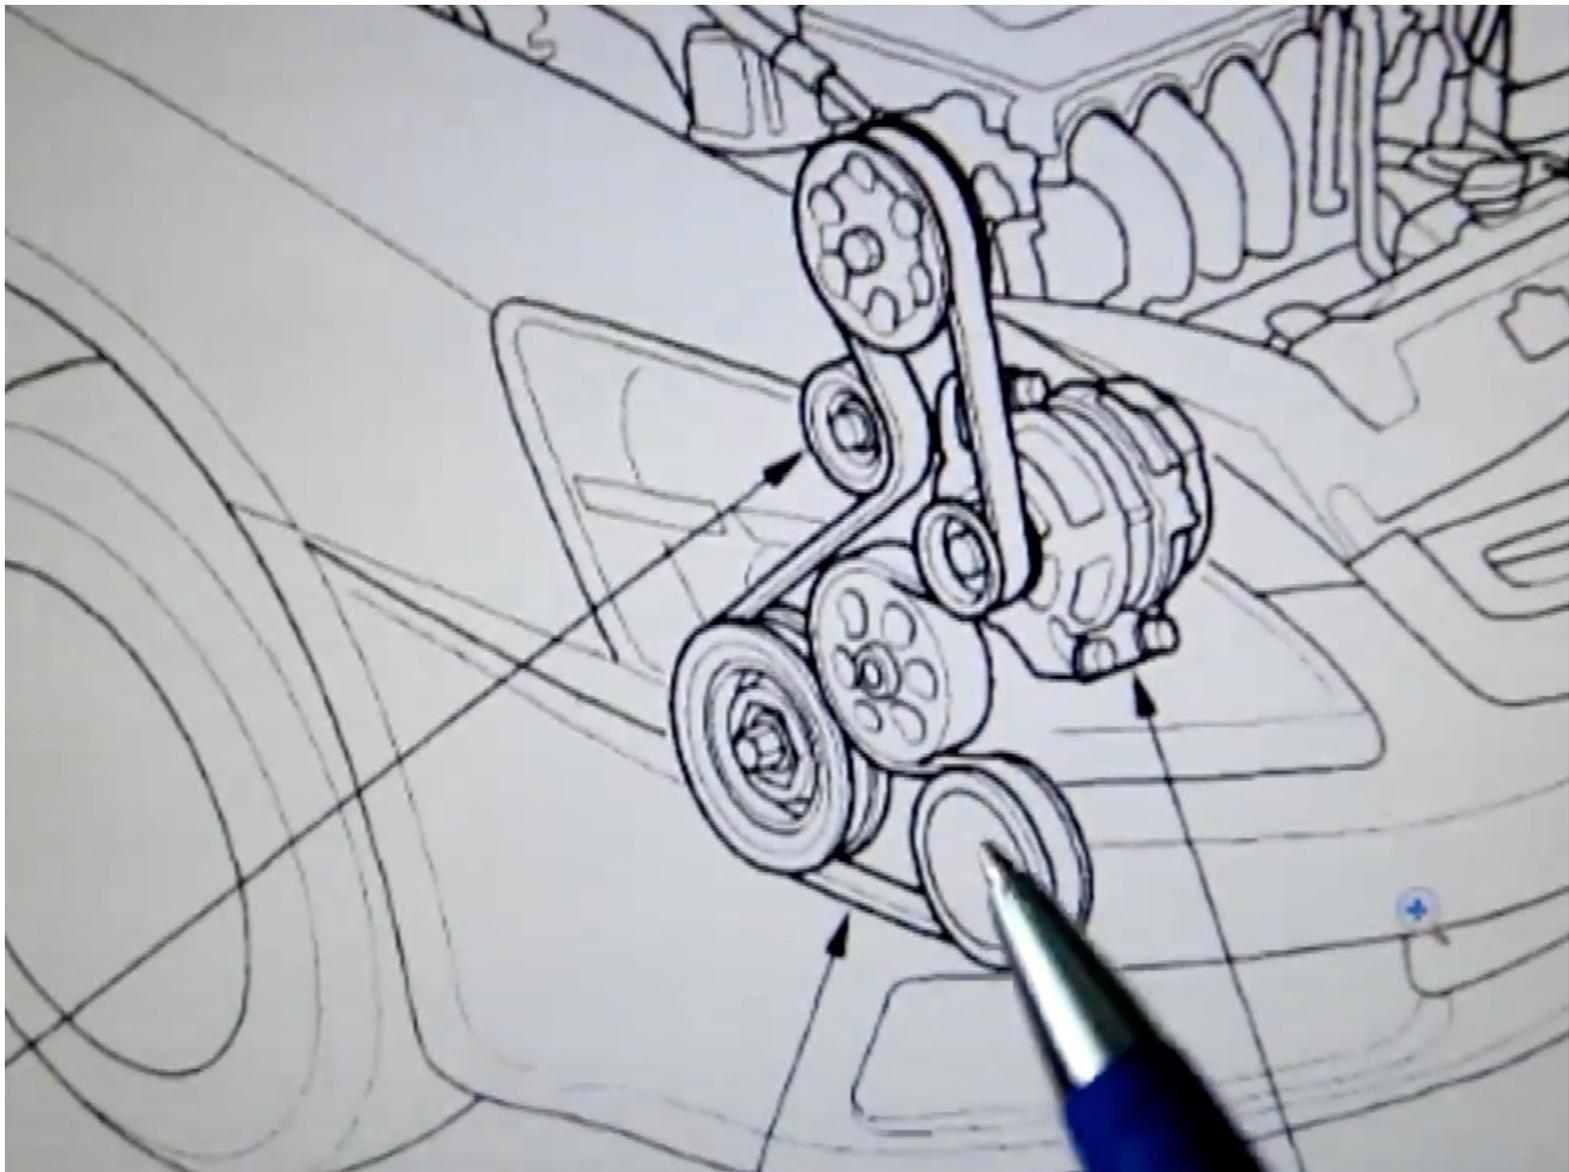

## INTRODUCTION

The serpentine drive belt should be replaced every 65,000-105,000 miles.

Follow this video tutorial by YouTuber [NutzAboutBolts](#) to replace the belt yourself.



### TOOLS:

- [14mm socket](#) (1)
- [Serpentine Belt Tool](#) (1)



### PARTS:

- [2003-2007 Honda Accord Serpentine Belt](#) (1)

To reassemble your device, follow these instructions in reverse order.