



Nikon Coolpix L16 LCD screen replacement

Coolpix L16 that got accidentally dropped. Not a very expensive camera but it meets the owners needs. Repair is cheaper than to replace the camera.

Written By: oldturkey03



INTRODUCTION

Use this guide to replace the LCD.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — LCD



- Clearly visible damage to the LCD. It did not even light up.
- Remove the screw from the right side.
- Remove the visible screw from the left side.

Step 2




- Open the USB A/C cover, there is one more screw that needs to be removed. That is why it is important to always remove all covers...
- Remove the three screws from the bottom.
- Start splitting the case from the battery compartment. I used an opening tool, but fingernails will be sufficient as well.

Step 3



- After the splitting of the case, the LCD is immediately visible.
- ⚠ Lift the LCD out of the frame by using your fingernail or an opening tool. Do not remove it yet, it is still connected.
- Flip the black clasp up by using fingernails or the opening tool. No big force is required. Remove the old LCD.

Step 4

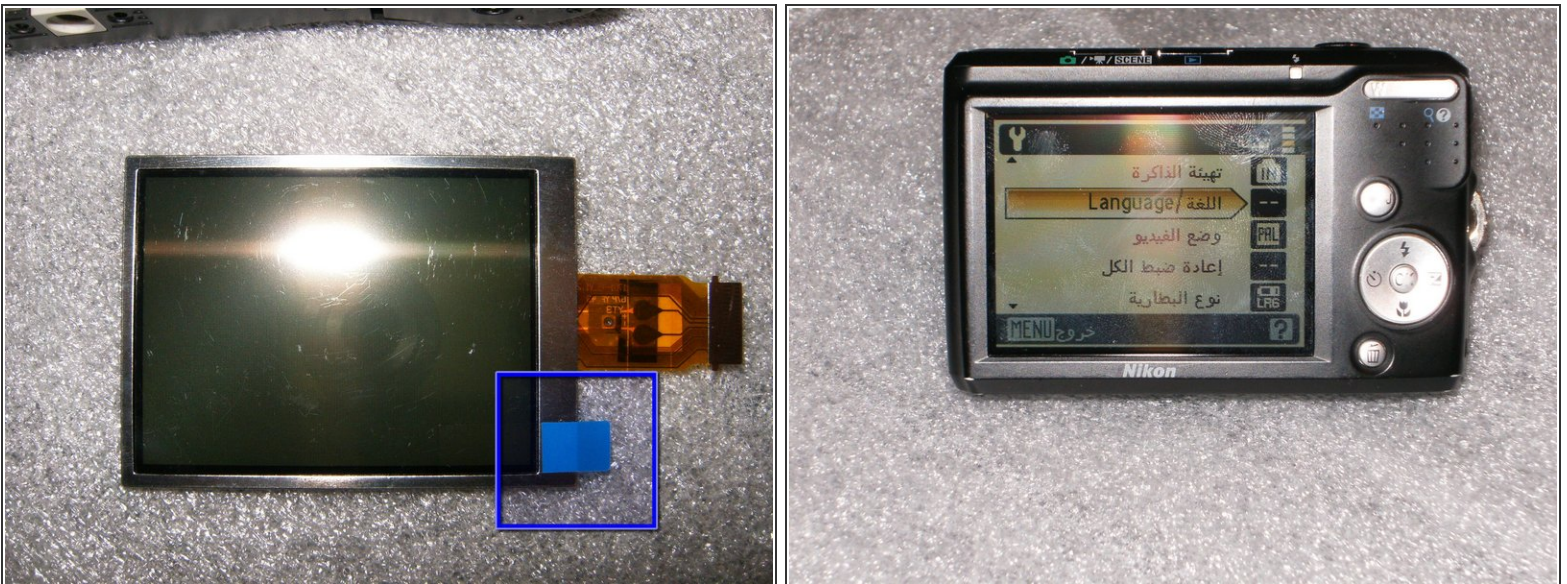

- Here is the new screen, note the blue tab. This is the screen protector, remove it after installation.
- Reassemble in reverse order. Hopefully your results will be the same as for me.

To reassemble your device, follow these instructions in reverse order.