



# Dell Optiplex GX620 Hard Drive

Dell optiplex GX620 Hard Drive Replacement

Written By: Padraic Hoselton





## PARTS:

- [1 TB 7200 RPM 3.5" Hard Drive](#) (1)
-

## Step 1 — How to unplug and discharge before repair



- Power down your PC and remove the power cord from the back.

## Step 2



- Press and hold the power button for about 10 seconds, then release.
- ⓘ This helps drain any remaining power stored in the capacitors, so that you can safely work on the internal components.

### Step 3 — Dell Optiplex GX620 Side Panel Disassembly



- With the computer standing upright, firmly pull on the tab at the back of the computer.
- When the side panel pops free, gently pull the panel away from the computer.
- ⓘ If you have trouble freeing the side panel from the case, you may need to pull the tab a bit harder.

### Step 4 — Disconnect hard drive.



- Remove the power and SATA data cables.
- SATA power
- SATA data

## Step 5 — Take hard drive out of the slot.



- Pull the two tabs on the hard drive and pull up

## Step 6 — Remove hard drive from slot enclosure.



- Now take the tray off of the hard drive.

To reassemble your device, follow these instructions in reverse order.