



Shark Rotator Powered Lift-Away Filter Replacement

This guide will help you remove your filter for replacement or cleaning.

Written By: Cameron Ngai



INTRODUCTION

Not replacing your vacuum's filters can lead to loss of suction. Use this guide to examine and/or replace your vacuum's filters for cleanliness or damages.



TOOLS:

- [Fingers](#) (1)
-

Step 1 — Filter




- Pull up on latch to release the canister.

Step 2





- Remove the canister to reveal the filter.

Step 3

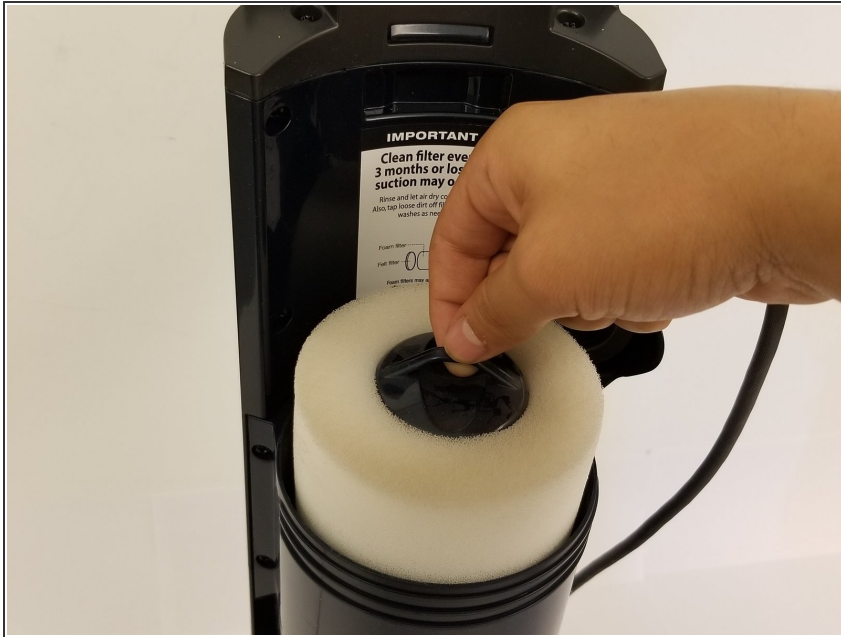

- Remove first filter.

Step 4

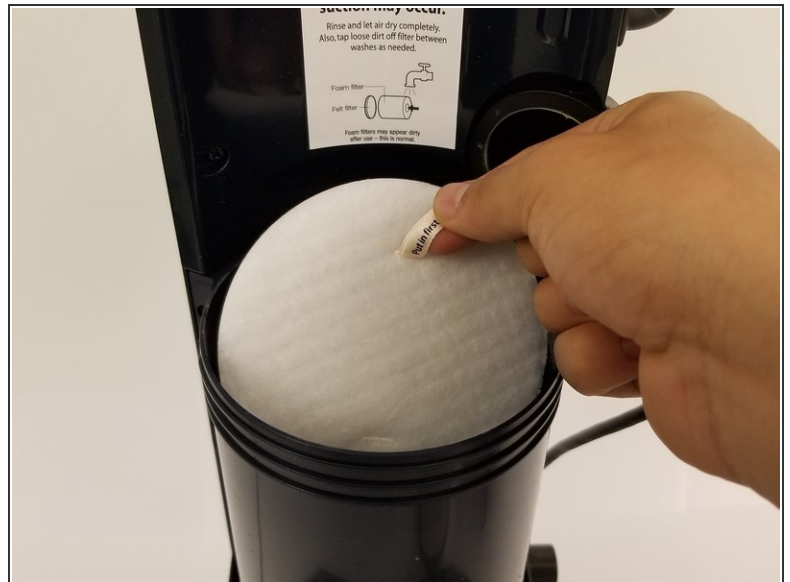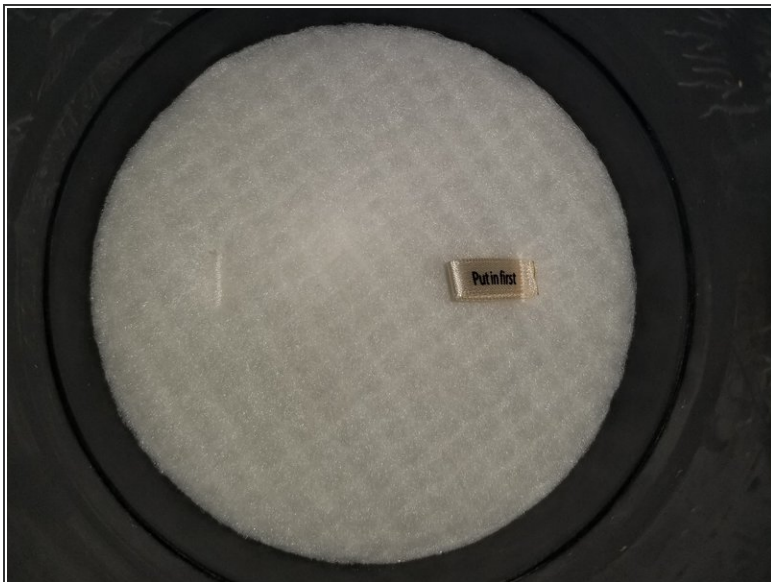

- Use the tag to pull out the second filter.

To reassemble your device, follow these instructions in reverse order.