



Shark Rotator Powered Lift-Away Suction Hose Replacement

This guide will help you replace the Shark Rotator Powered Lift-Away suction hose.

Written By: Junnior Rodriguez



INTRODUCTION

Are you experiencing a loss of suction? If so, an easy first step would be to check the vacuum's suction hose for any clogs, rips or separations, replace the suction hose assembly as necessary.



TOOLS:

- [Fingers](#) (1)
-

Step 1 — Remove the Top portion of the Suction Hose



- On the top portion of the suction hose, firmly press the tab.
- Next, pull the suction hose up to detach it.

Step 2 — Remove the Bottom portion of the Hose



- On the bottom portion of the suction hose, press the tab and pull the hose out.

To reassemble your device, follow these instructions in reverse order.