



Nikon D80 Rear LCD Screen Replacement

This guide details how to replace the rear LCD screen of the Nikon D80.

Written By: Sara Martin



INTRODUCTION

Potential damage could occur to the rear LCD screen which could affect performance. For safety purposes, please remove the battery before working with any electronic components.

TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [ESD Safe Tweezers Blunt Nose](#) (1)
-

Step 1 — Rear LCD Screen





- Using a Philips #00 screwdriver, remove the four 6.2mm from the left and right sides of the outer cover.

Step 2

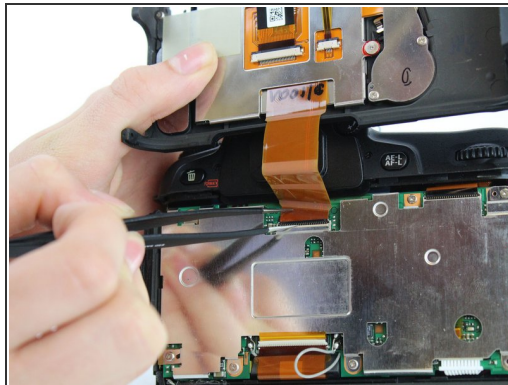



- Use tweezers to gently flip the small locking flap of the zero force insertion connector up.
- Pull the orange connector cable away from the main body of the camera using the tweezers.
- Remove the back cover.

Step 3

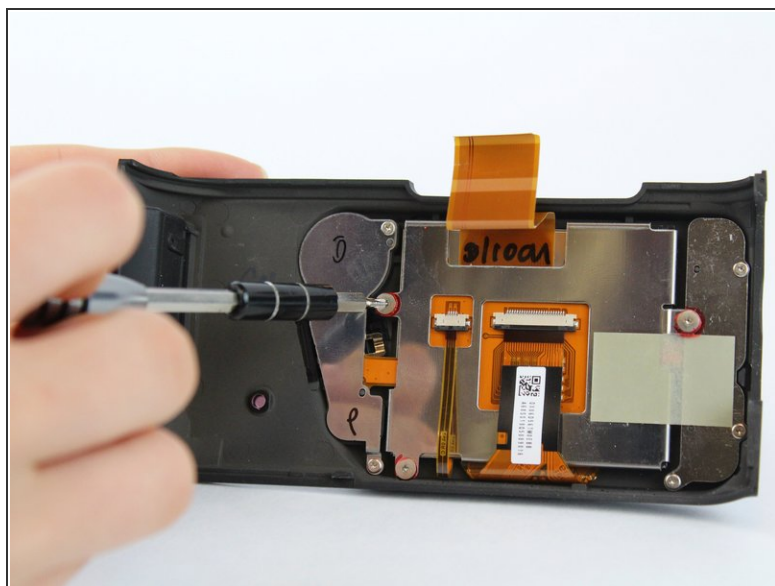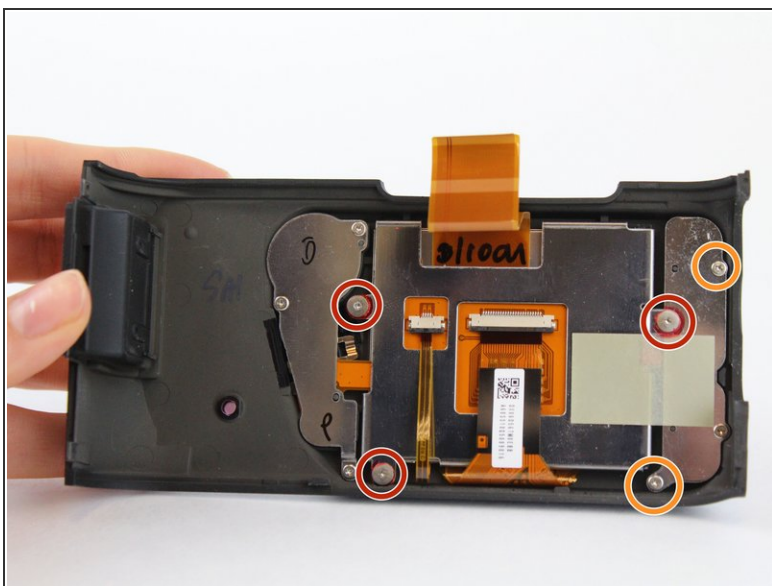



- Using a Philips #00 screwdriver, remove the three 4.3 mm screws by rotating screwdriver to the left.
- Use the Phillips #00 screwdriver to remove the two 3.4 mm screws.

Step 4

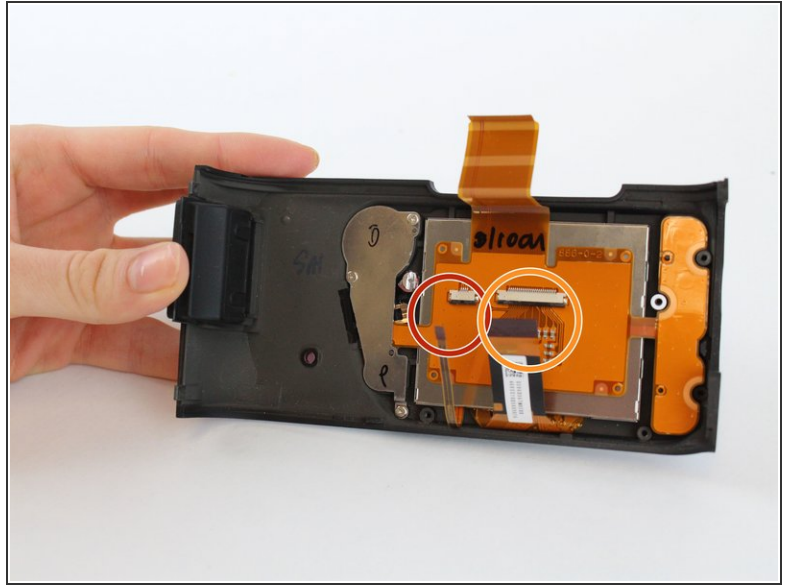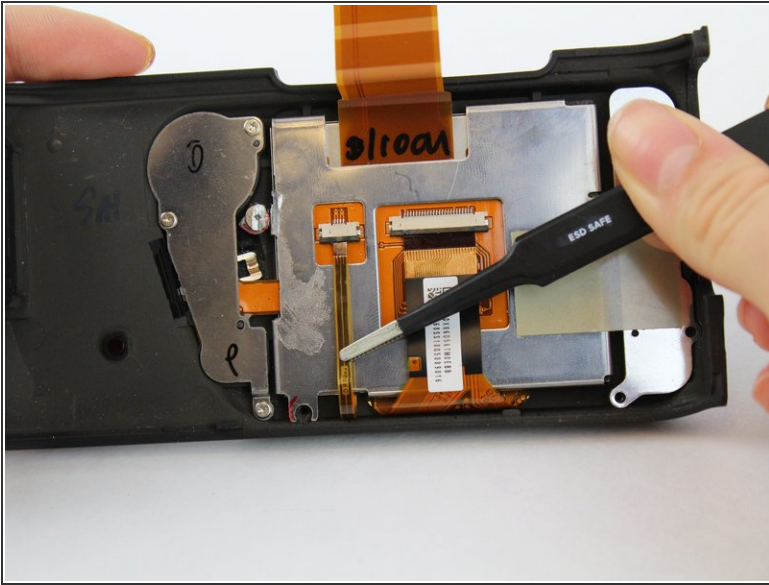

- Using blunt tweezers, gently flip the small locking flap of the zero force insertion connector up for both connectors.
- Use blunt tweezers to pull the left ribbon connector out of the zero insertion force connector.
- Using the same tweezers, pull the right ribbon connector out of the zero insertion force connector.

Step 5

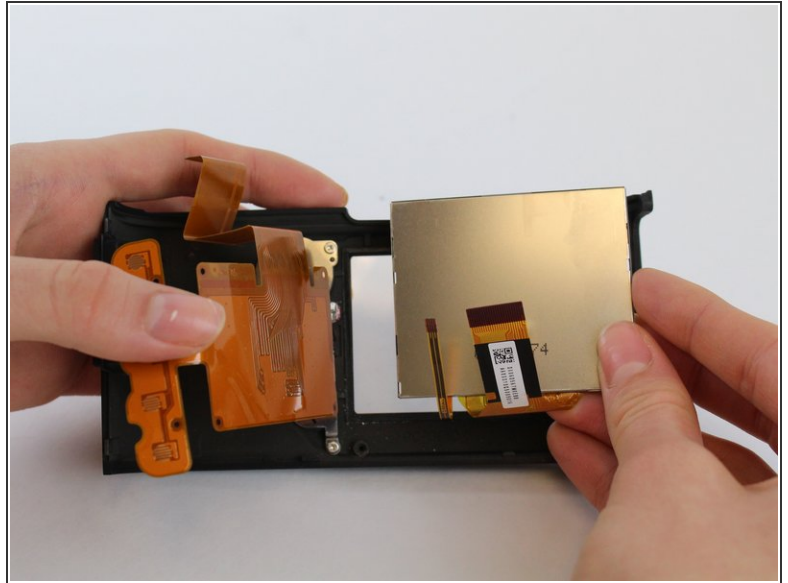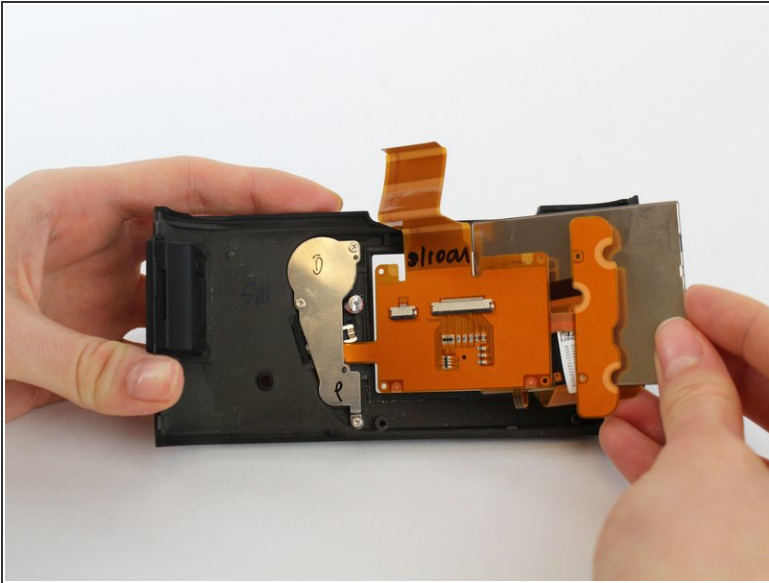

- Slide out the LCD screen by pulling towards the right.
- Remove the LCD screen.
- ⓘ The buttons beside the screen fall out easily. Remember where they were and put them back when finished with the screen.

To reassemble your device, follow these instructions in reverse order.