




Sony Cyber-shot DSC-W690 Navigation Buttons Circuit board Replacement

This guide will show you how to remove and install new buttons.


Written By: Will Norris

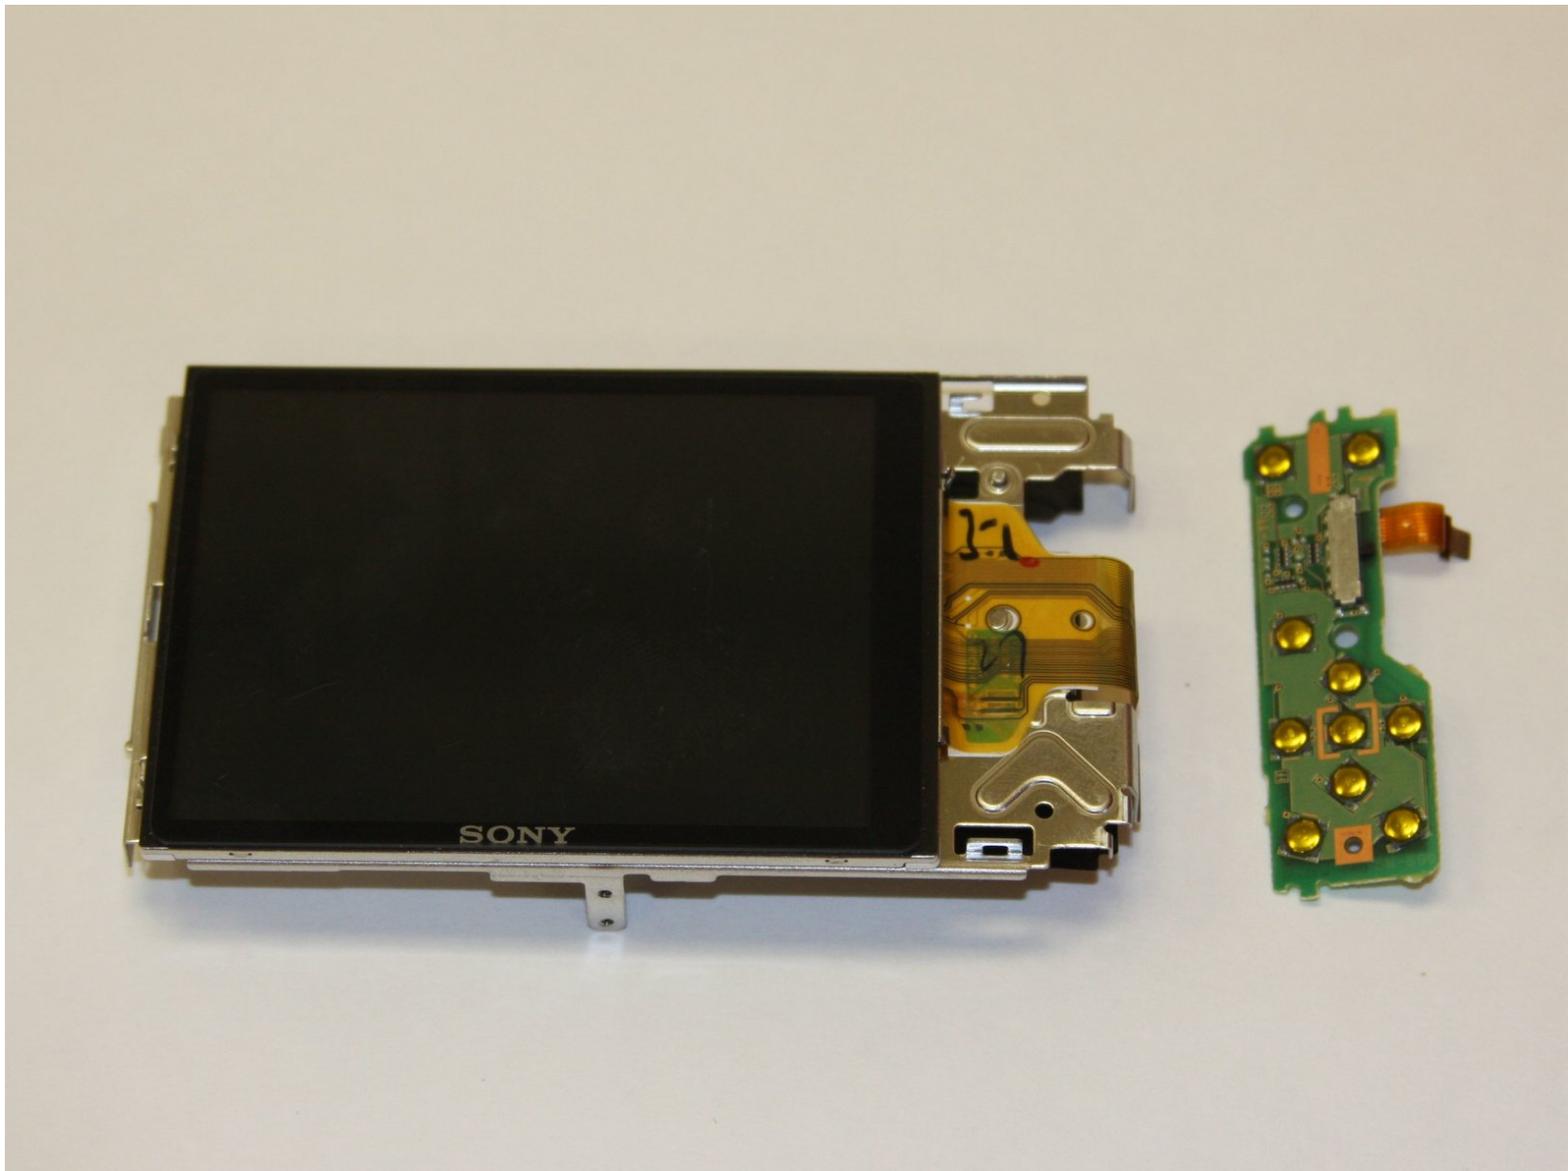

 **TOOLS:**


- Phillips #00 Screwdriver (1)
 - Spudger (1)
-

Step 1 — Battery

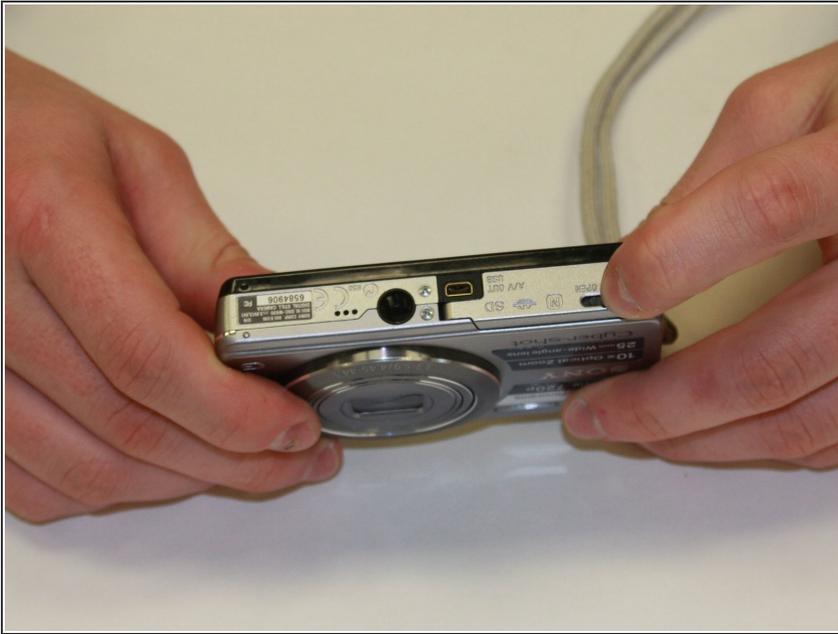



- Open the battery door.

Step 2

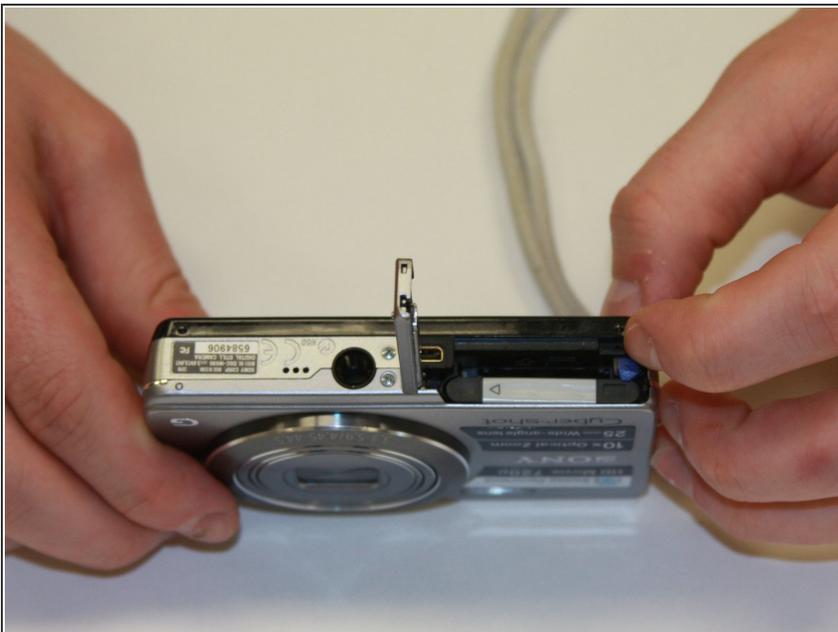

- Open the battery lock to release the battery.

Step 3

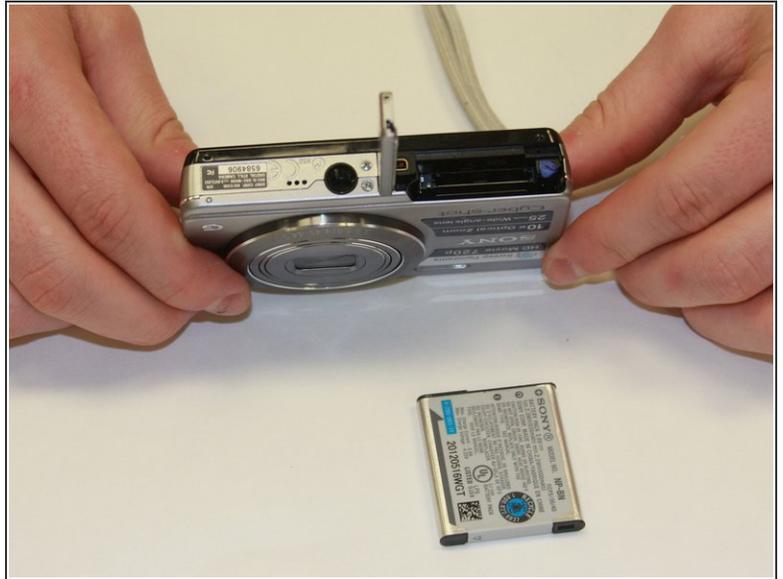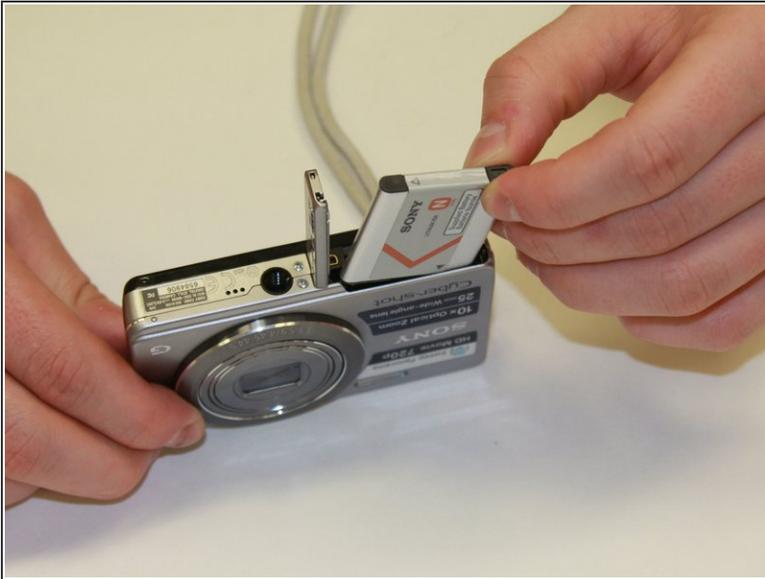


- Remove the battery.

Step 4 — Front and Back Case



- Remove the wrist strap

Step 5

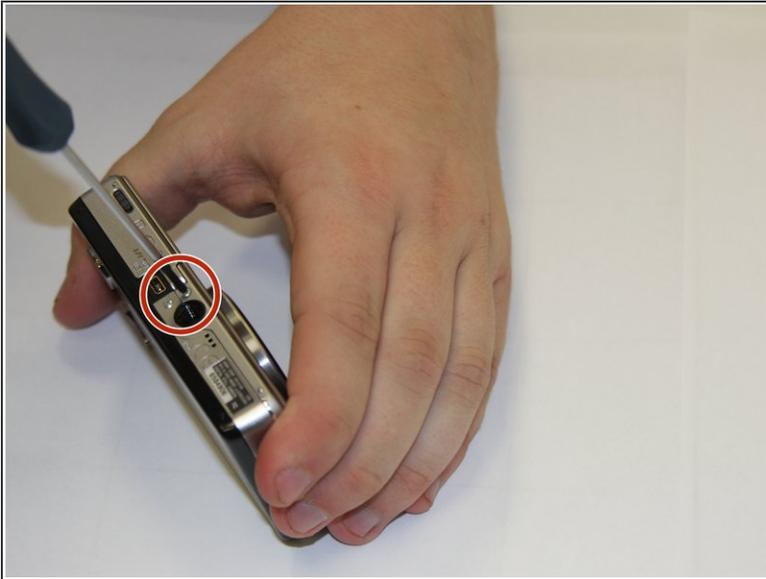


- Remove all 6 3mm outside screws

Step 6




- Carefully pry the case apart.

Step 7 — Navigation Buttons Circuit board

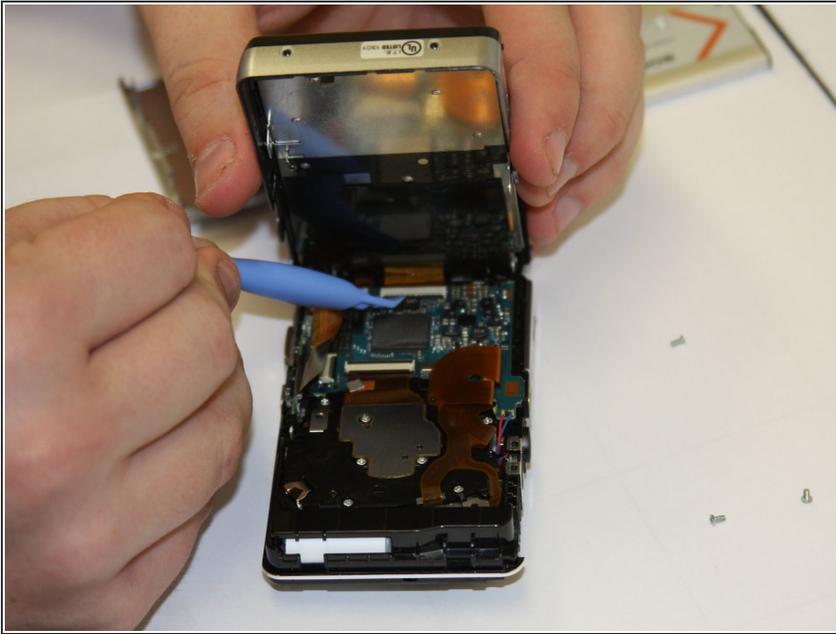


- Use spudger to delicately open wire contact.

Step 8

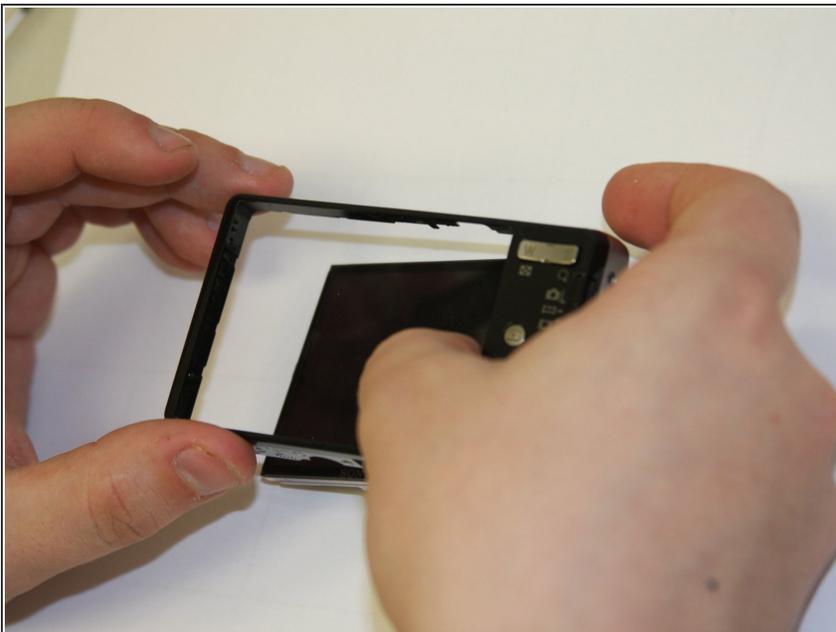

- Gently push LCD screen out of back case.

Step 9

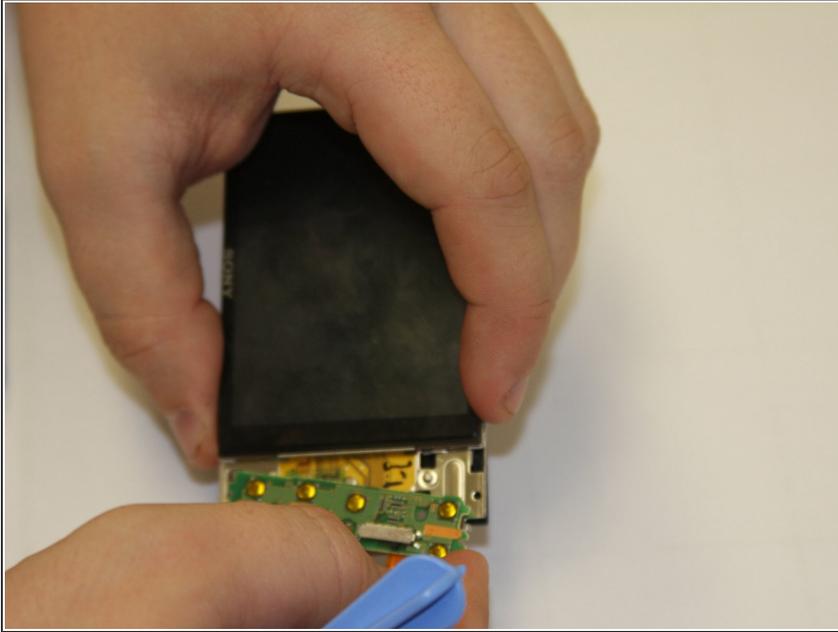

- Remove and replace the button circuit board.

To reassemble your device, follow these instructions in reverse order.