




Lenovo Yoga 3 14 Ram Replacement

This guide is to show how to replace the RAM in the Lenovo Yoga 3 laptop/tablet.

Written By: Matthew Victores

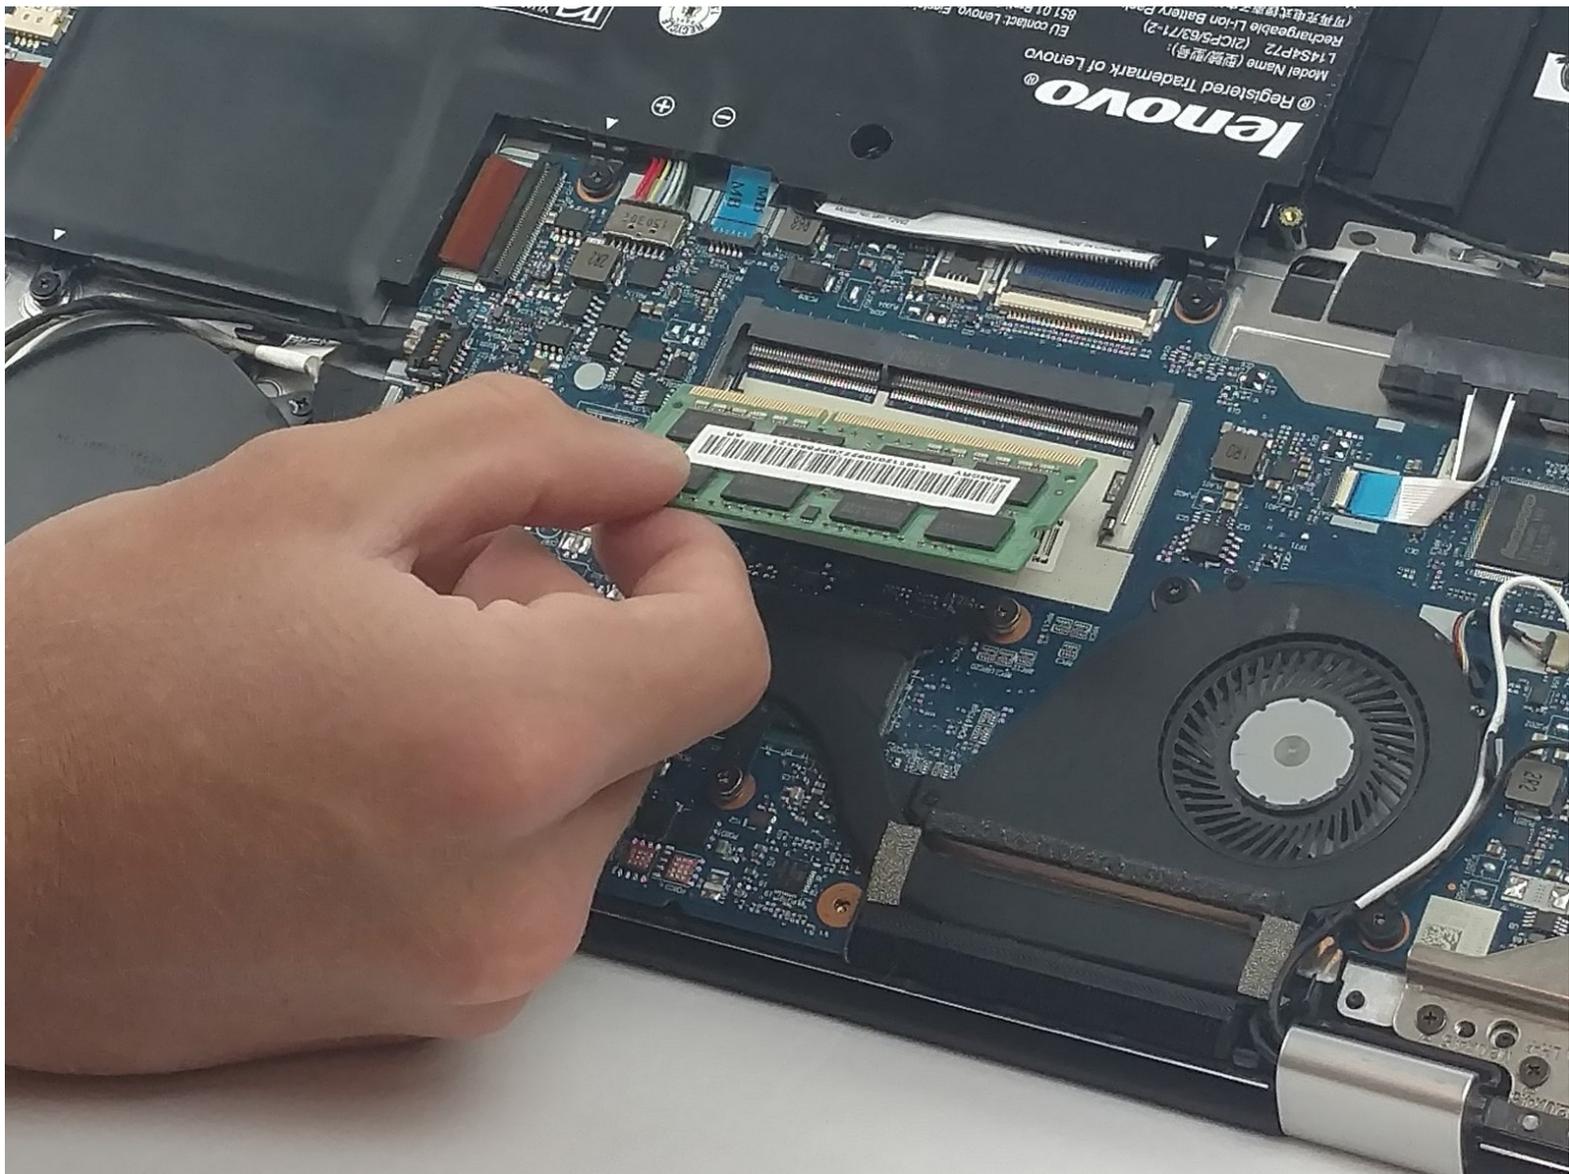

INTRODUCTION

If you need to replace your RAM card for any reason, this guide will show the steps you need for replacement.

TOOLS:

- [T5 Torx Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Back Case





- Remove the eleven 6mm T5 Torx screws from the back case.

Step 2





- Insert the plastic opening tool into the long side of the case backing and slide it the entire length of the laptop.
- Gently lift the backing off the laptop.

Step 3 — Ram

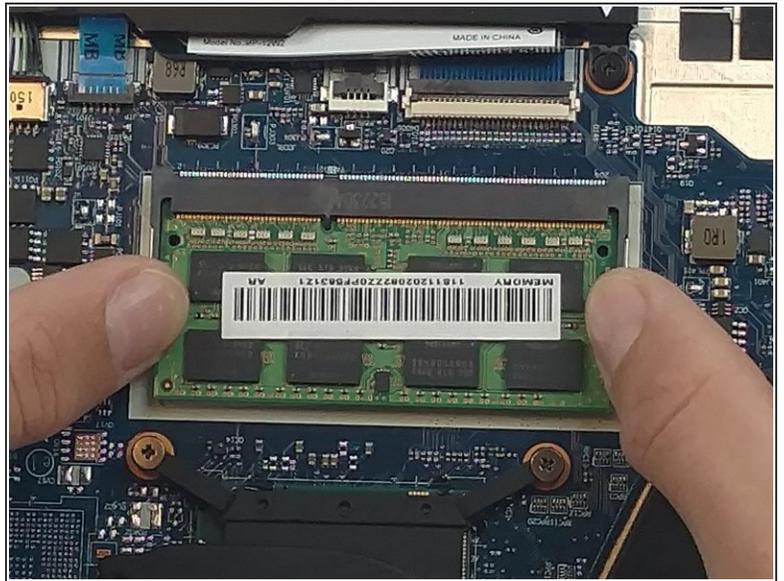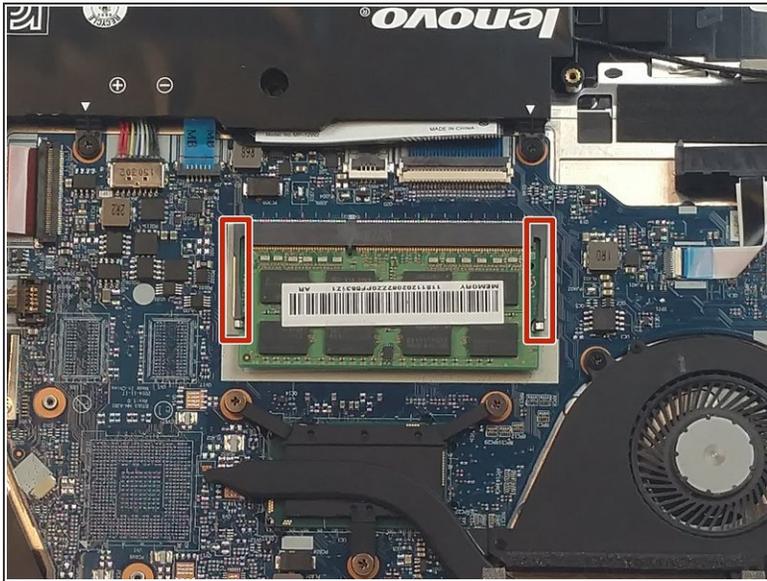

- Using your thumbs, gently push the two clips away from the RAM.

Step 4

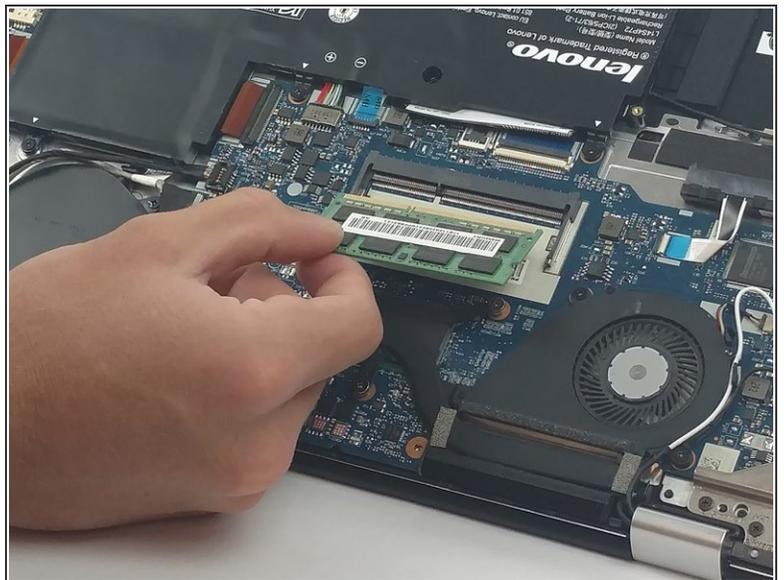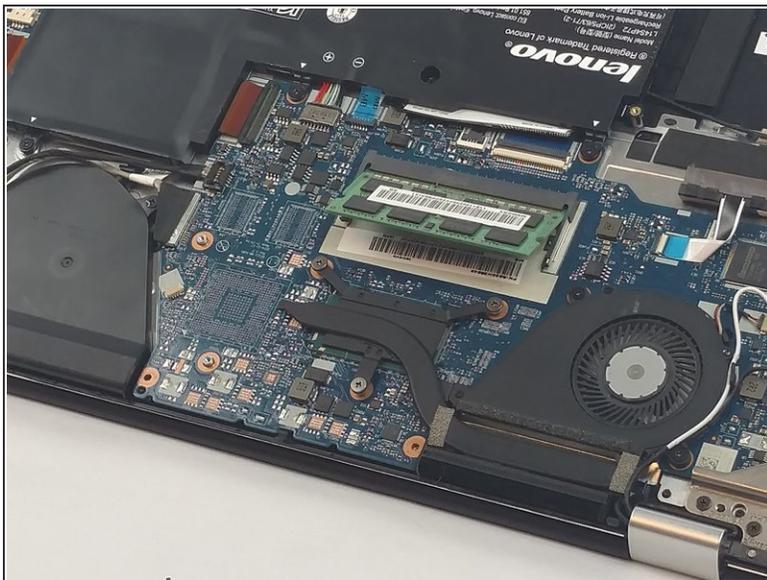

- After the clips are moved, the RAM will simply pop up.
- Gently remove the ram.

To reassemble your device, follow these instructions in reverse order.