



# Lenovo Yoga 3 Pro Wireless Card Replacement

This guide will show you how to replace the...

Written By: Aaron Rice



# INTRODUCTION

This guide will show you how to replace the wifi card. As an extra precaution, the battery should be removed first before proceeding with the rest of the device.

## TOOLS:

Phillips #0 Screwdriver (1)

T5 Torx Screwdriver (1)

## Step 1 — Back Panel




- Flip the laptop so that the back panel is facing up.
- Remove the ten 4.0mm T6 Torx screws from the back of the laptop.

## Step 2




- Gently lift the back cover off of the laptop.

## Step 3 — Battery

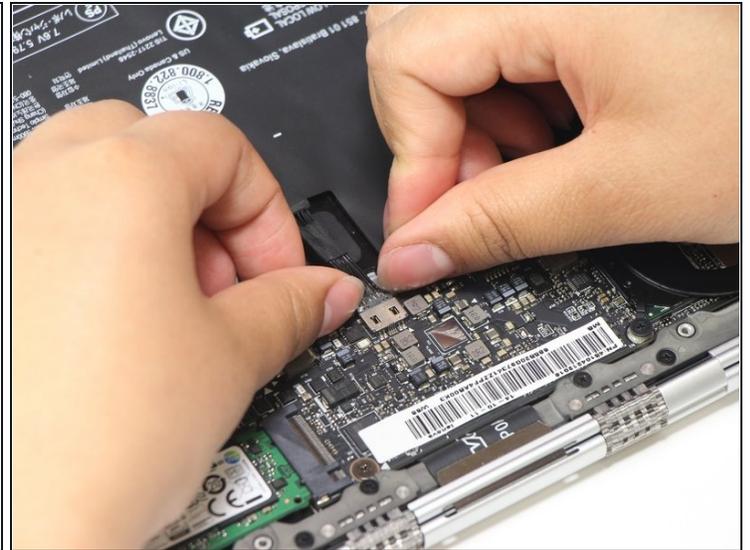

- Push the black battery cable towards the battery to disconnect it.

## Step 4

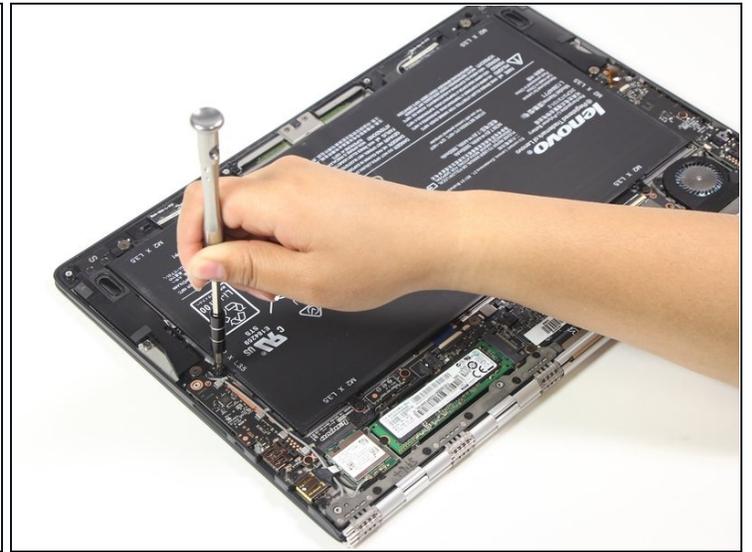


- Remove the six #0 3.8mm Phillips screws from the battery.

## Step 5




- Gently lift the battery out of the laptop chassis.

## Step 6 — Wireless Card

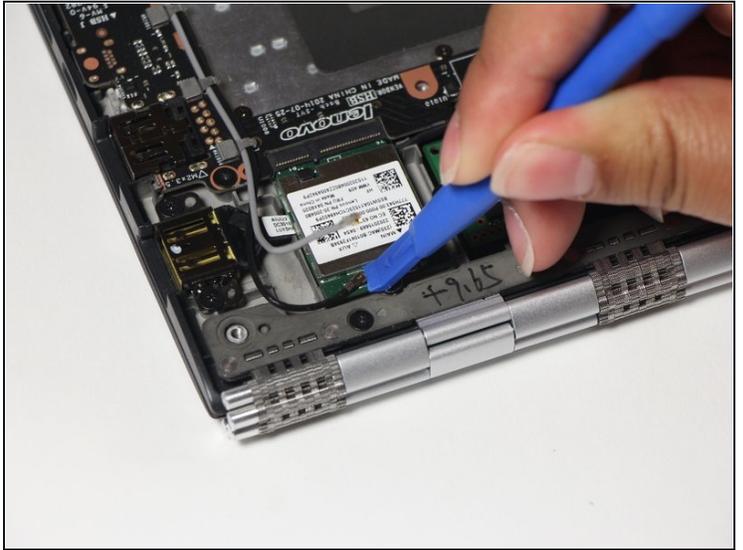


- Using the plastic opening tool, gently pry the grey wire off the wifi card.
- Pry the black wire off the wifi card.

## Step 7

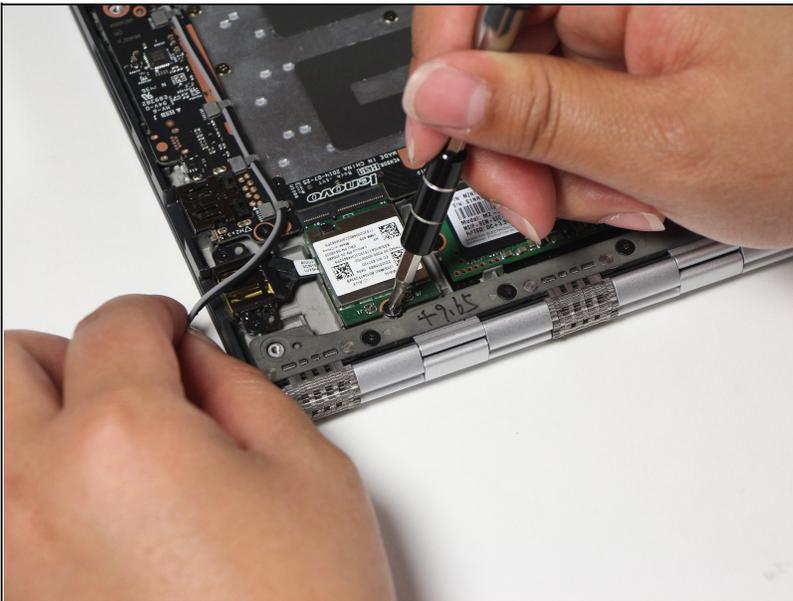

- Remove the one #0 2.9mm Phillips screw from the base of the wifi card.

## Step 8

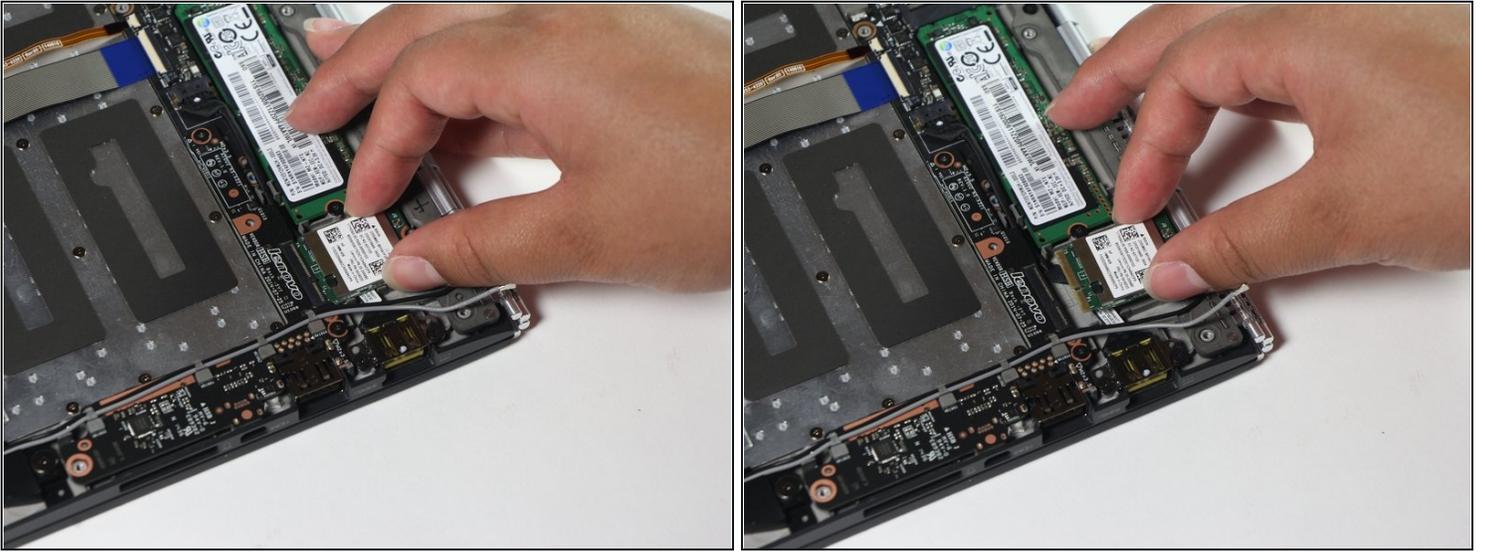

- Gently lift and pull the wifi card out.

---

To reassemble your device, follow these instructions in reverse order.