




# Toshiba Satellite C55-A5140 Keyboard Replacement

Replacement of an unresponsive or damaged laptop keyboard

Written By: Cameron Chapman

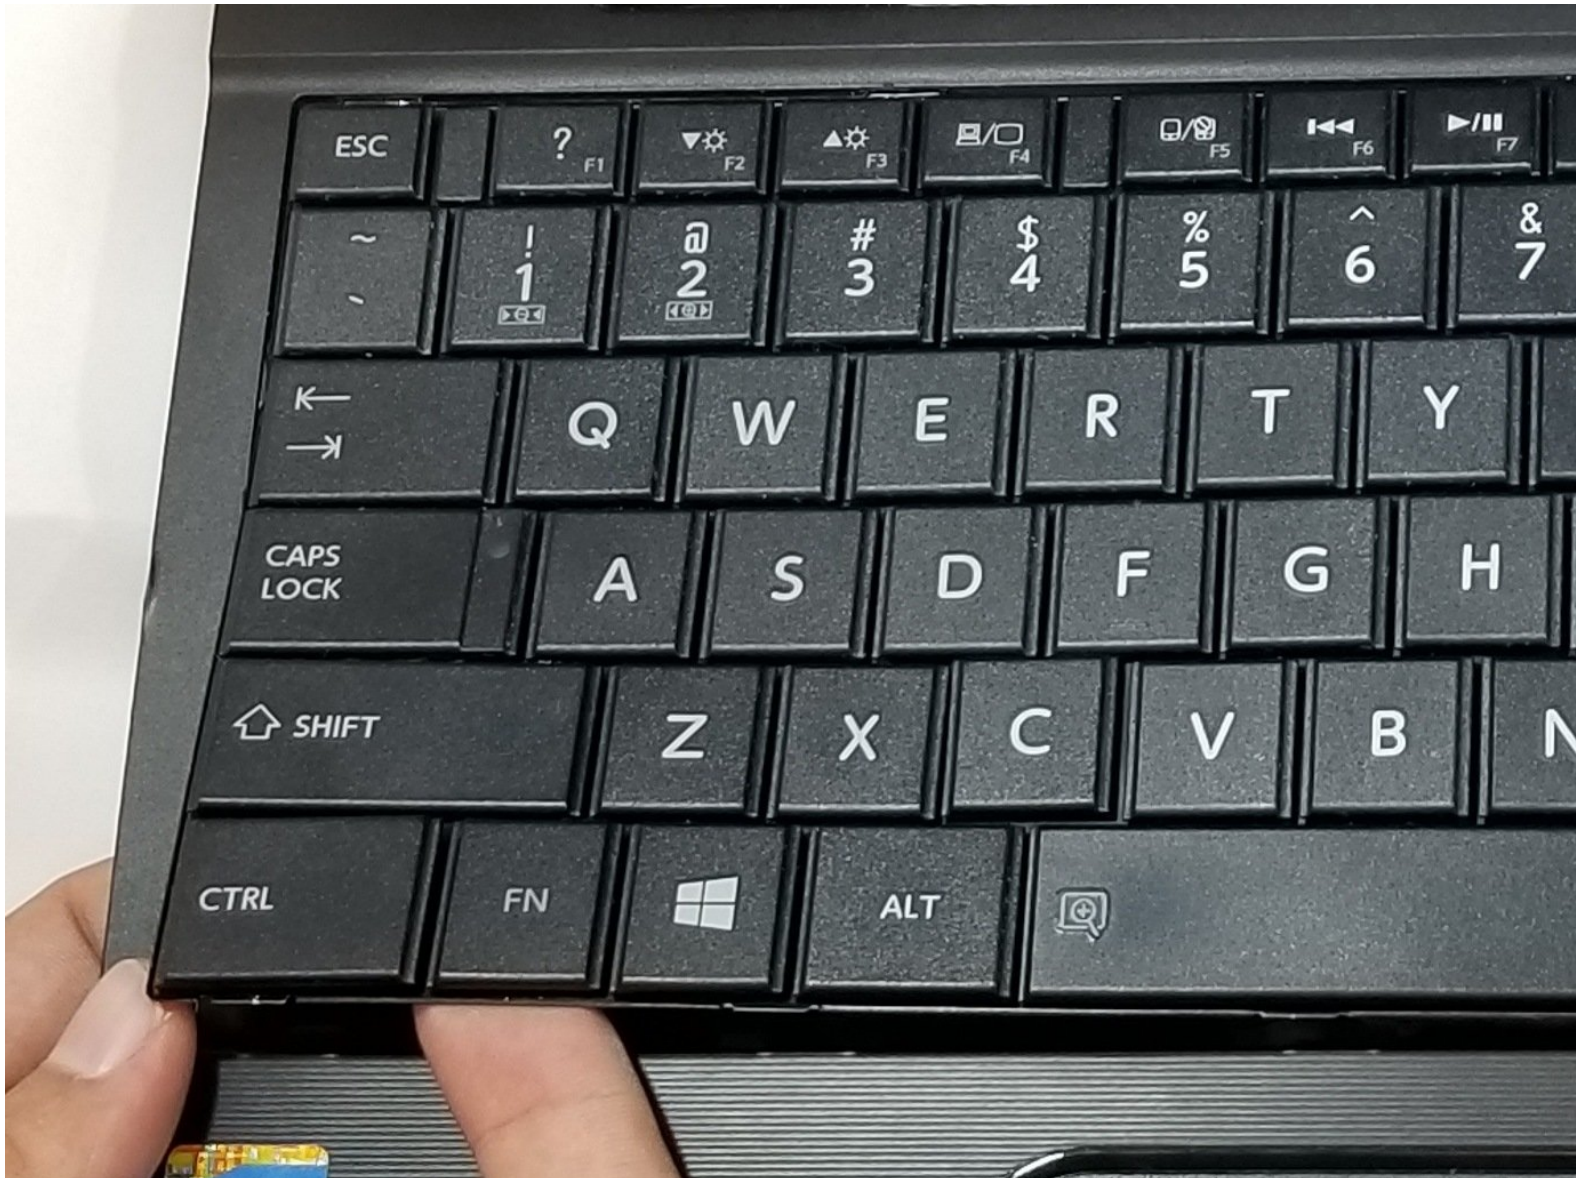

---

## INTRODUCTION


It is common for a laptop keyboard to stop working properly. This can be because factory defect, dirt and grime, liquid, or wear and tear. Before attempting to remove the keyboard make sure you have a replacement keyboard available. Once the existing keyboard is removed from the laptop, it can no longer be reinstalled.



### TOOLS:


- [iFixit Opening Tools](#) (1)
-

## Step 1 — Keyboard

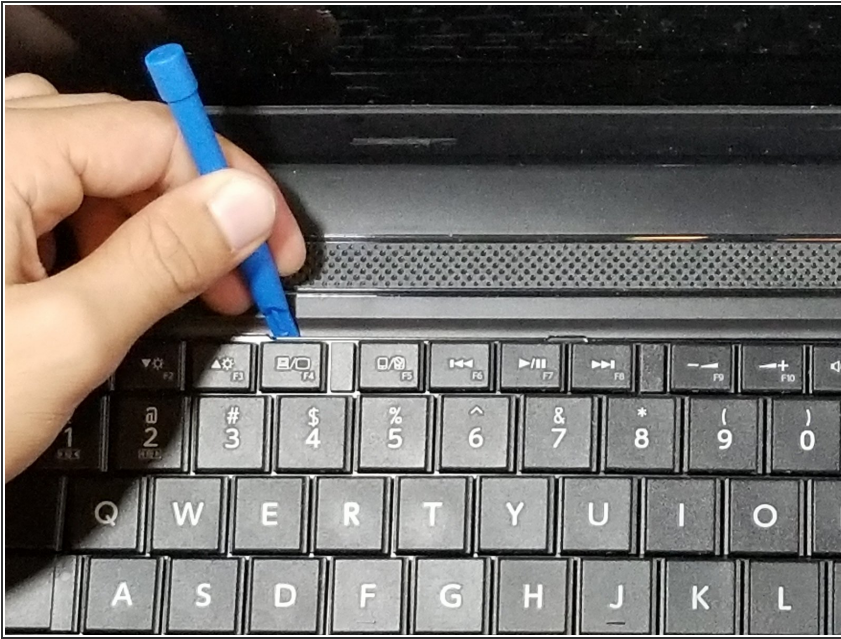

- Make sure that the device is unplugged, completely off, and that the device is not warm to the touch.
  - Working from left to right, use plastic opening tool to lift keyboard up and out of recessed holding tray.
  - Continue to pry around the entire keyboard until it is loose enough to easily slide your fingers underneath the corners of the keyboard.
- ⓘ Once existing keyboard is removed, it can no longer be reinstalled. Be sure to have new keyboard available for installation.
- ⓘ Keyboard will make a snapping sound as it is freed from tray.

## Step 2

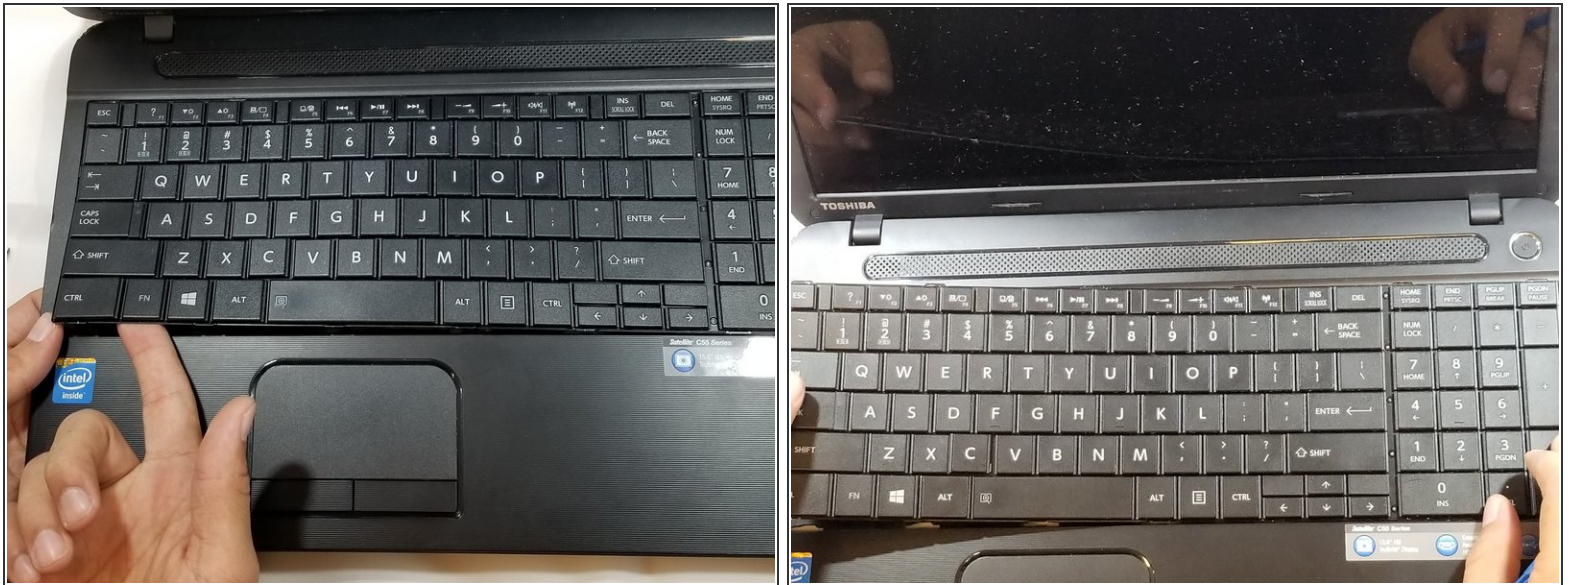

- Using hands, gently pull keyboard out of device.

To reassemble your device, use tabs on new keyboard to snap into keyboard tray