


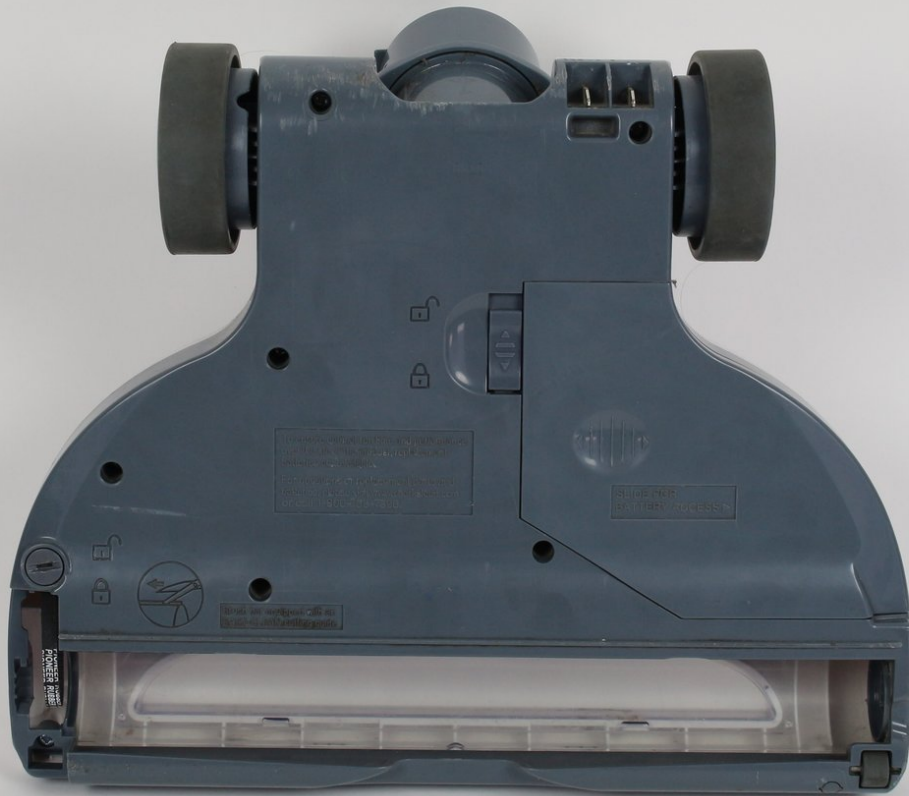

Shark Navigator Freestyle SV1106 Battery Pack Replacement

Steps to replace the battery pack for the Shark Navigator Freestyle SV1106.

Written By: Zachary Liu



INTRODUCTION


Replace the battery when the vacuum does not turn on even after charging.



PARTS:


- [Shark Navigator Freestyle Replacement Battery](#) (1)
-

Step 1 — Battery Pack

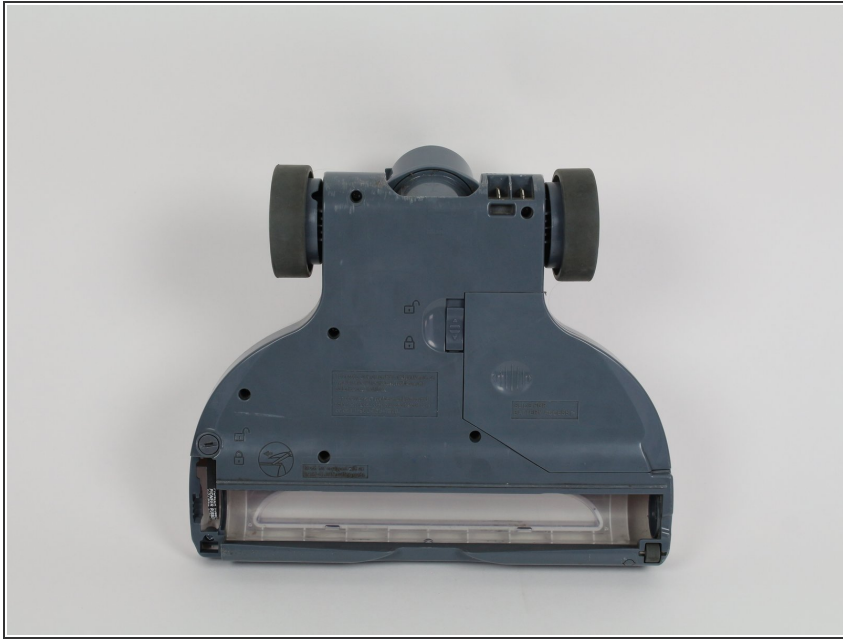


- Turn the device over to reveal the bottom of the motorized brush head.

Step 2

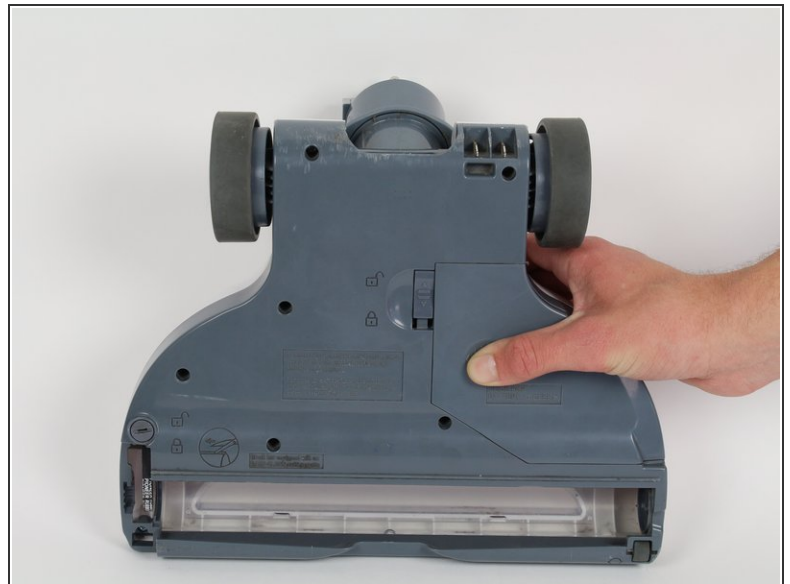



- Slide the latch next to the panel upwards into the unlocked position.

Step 3

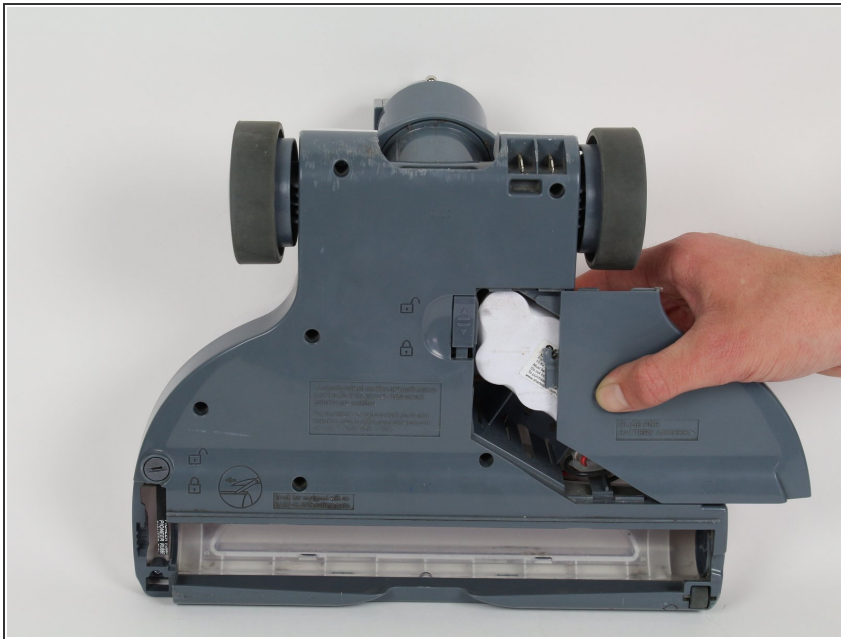



- Slide the panel to the right to reveal the battery.

Step 4

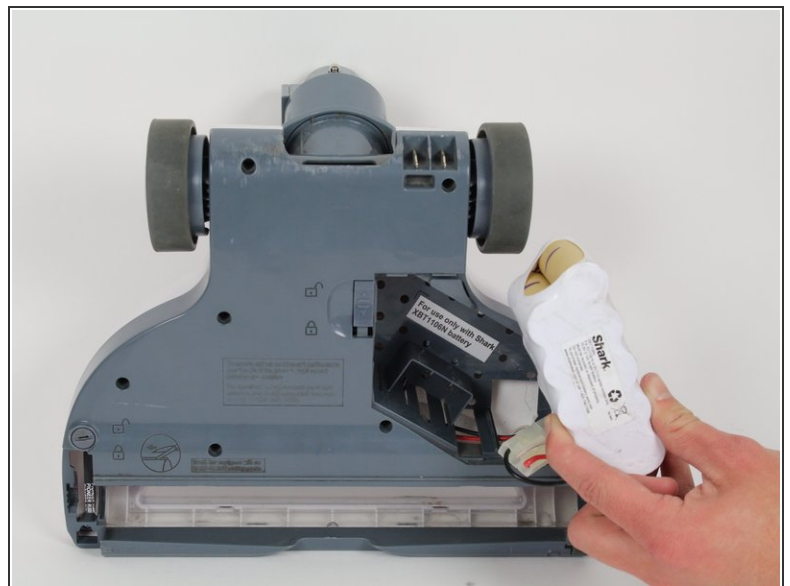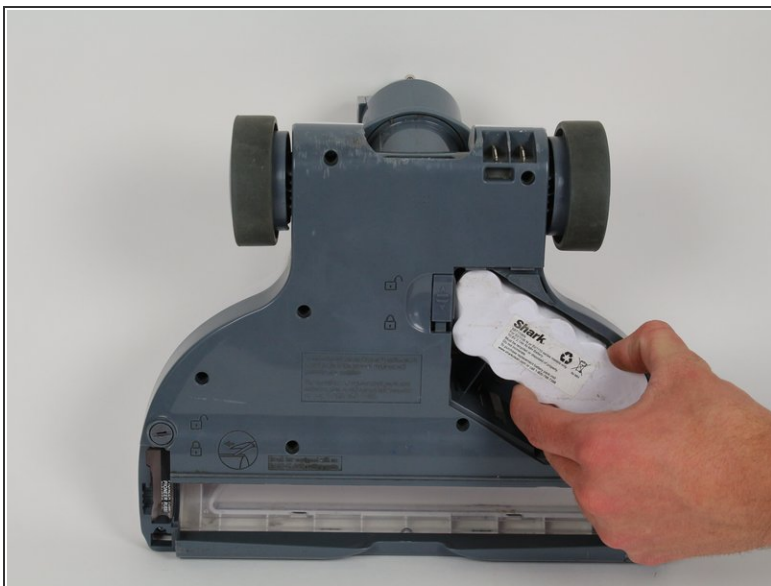

- Pull the battery from the vacuum.

Step 5

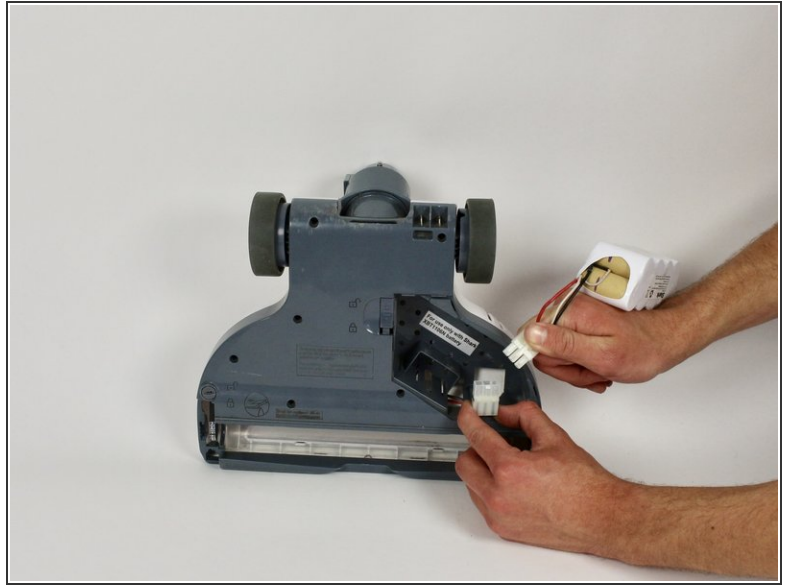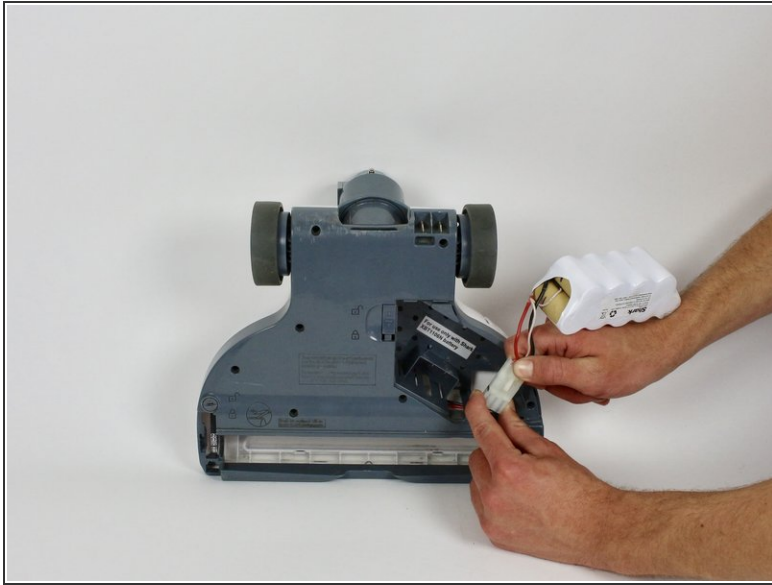

- Disconnect the battery from the vacuum by pinching the white latch and pulling the two pieces apart.

To reassemble your device, follow these instructions in reverse order.