



Dell Inspiron 15-3543 Hard Drive Replacement

Replace your hard drive so that your computer stops freezing, crashing, and/or making a grinding, screeching, or humming sound.

Written By: Brianna Blackburn



INTRODUCTION

Is the hard drive in your Dell Inspiron 15-3543 failing, or has it already failed? If so, here is the guide to fix the problem by simply replacing your disk drive. All you need is the standard #0 Phillips Screwdriver head in order to remove the two screws involved with this replacement.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Hard Drive





- Flip the device over so the bottom is facing up.
- Using a #0 Phillips screwdriver, remove the 2.0mm screw from the back of laptop beside the vents.

Step 2

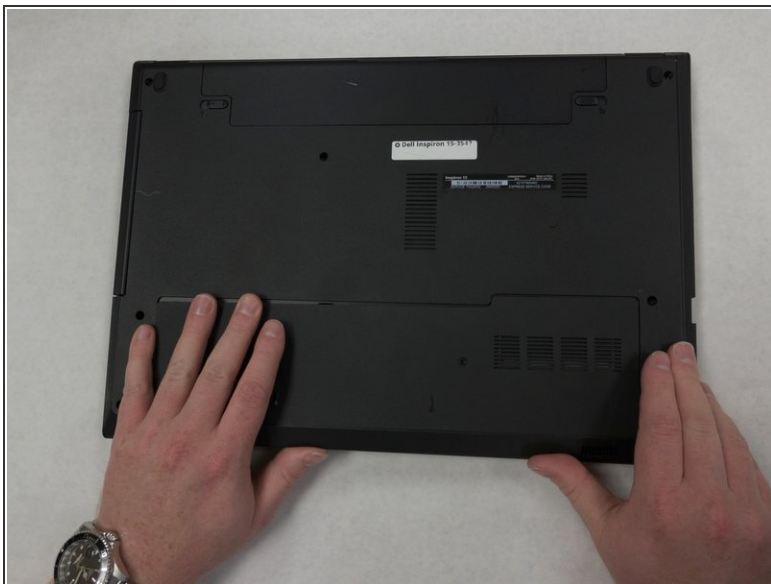



- Slide the panel off by placing your hands on top and, while using a little force, sliding your hands down.

Step 3

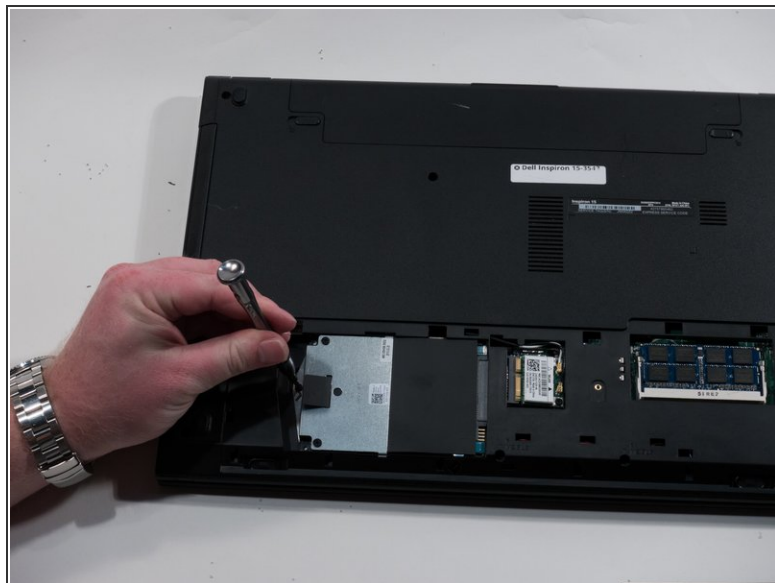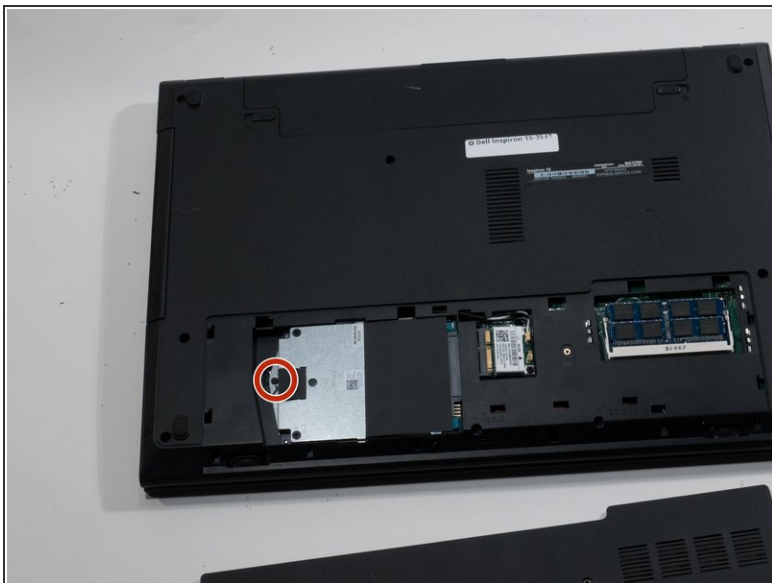

- Using a #0 Phillips screwdriver, remove the 2.0mm screw beside the black pull tab on the hard drive to the bottom left of the device.

Step 4

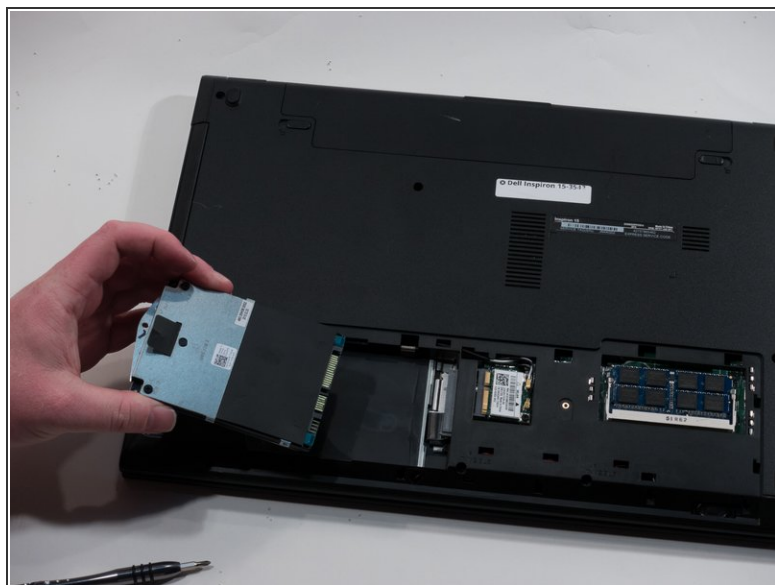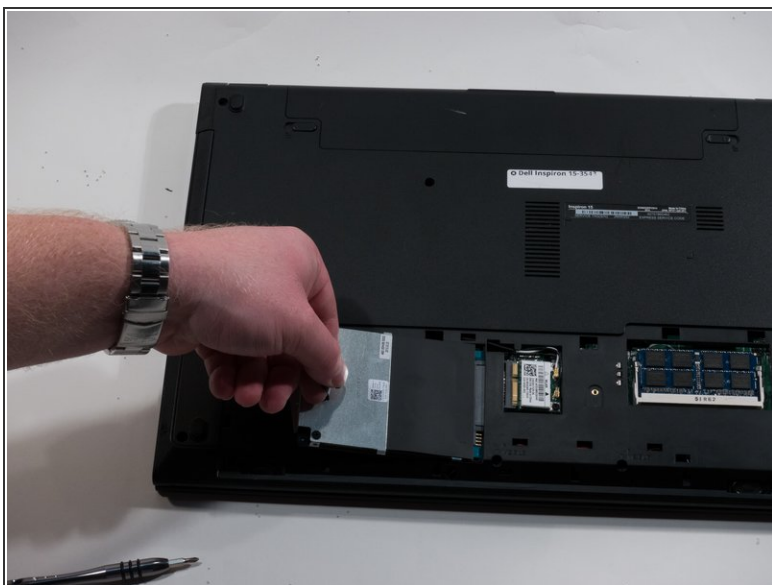

- Pull the black tab up and to the left to completely remove the hard drive.

To reassemble your device, follow these instructions in reverse order.