




# Mad Catz Street Fighter IV FightPad Circuit Board Replacement

Circuit Board removal.

Written By: Jefferson Hsu

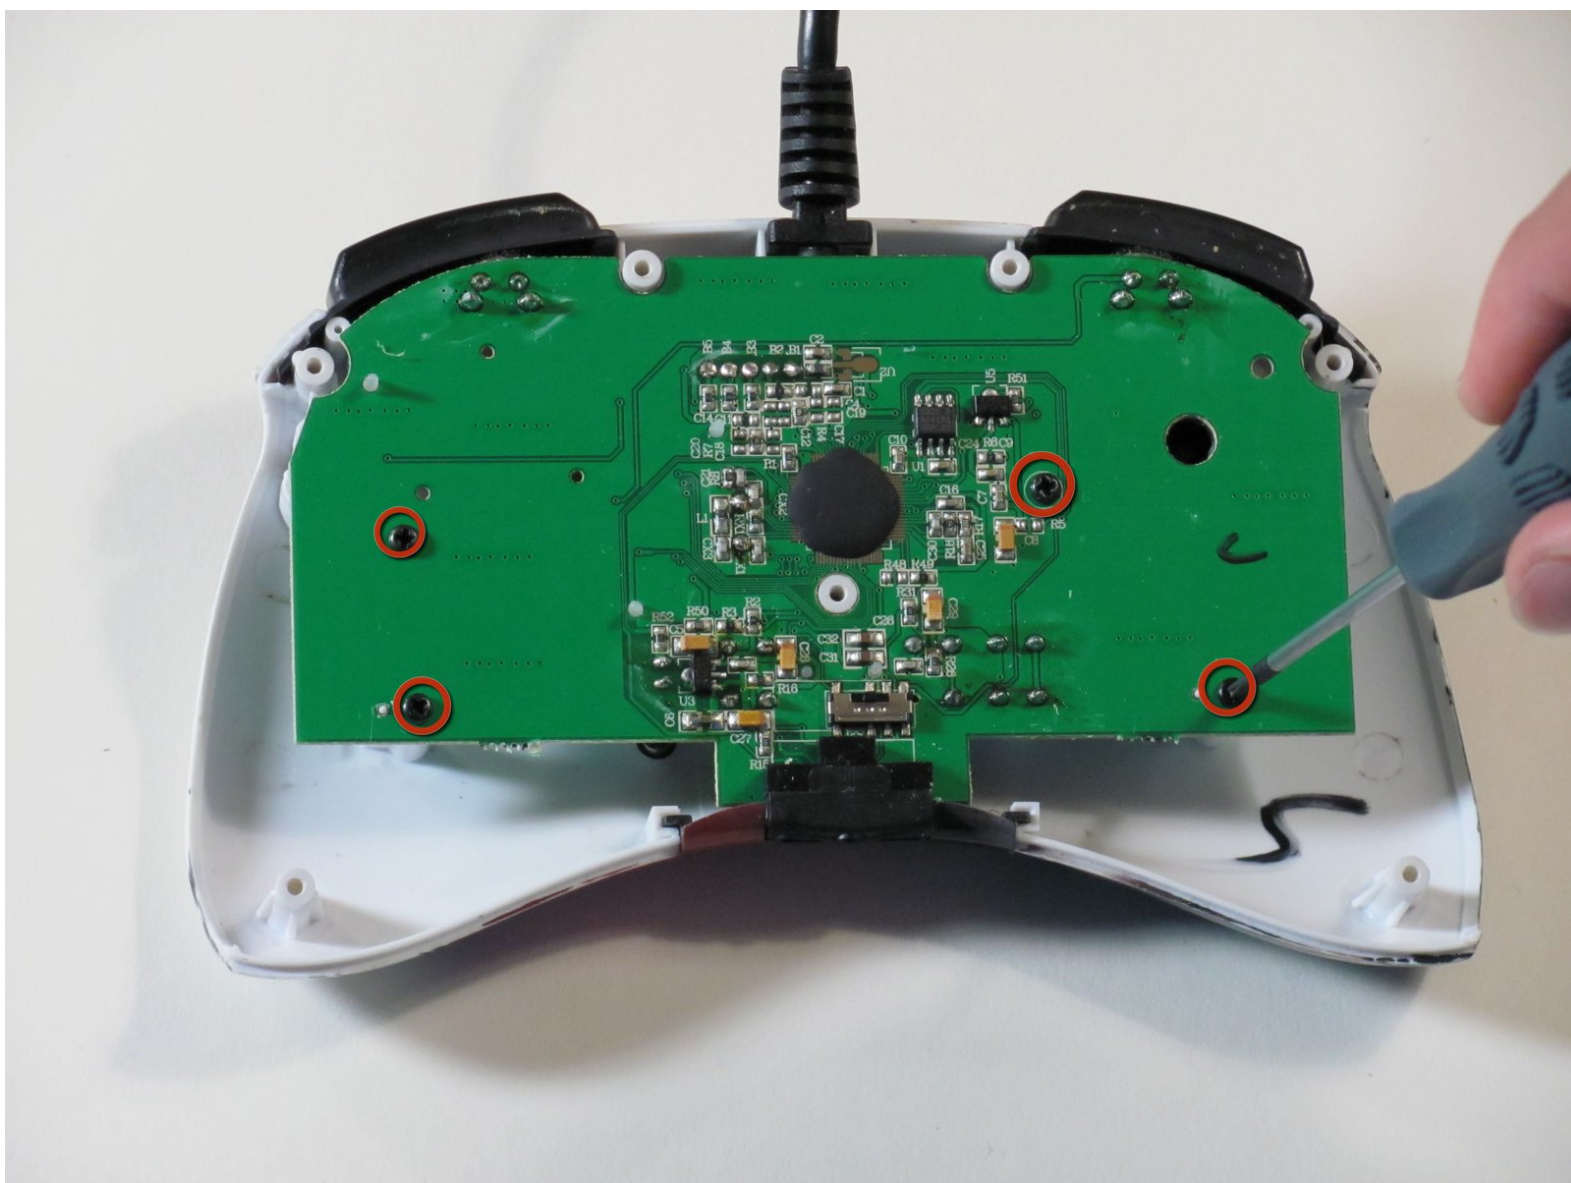

---

## INTRODUCTION

Use this as a guide to remove the motherboard so you can access the FightPad's buttons and directional pad.

---

### TOOLS:

- [Tweezers](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Rear and Side Case



- Use tweezers to completely remove the sticker from the rear of controller.


## Step 2



- Find the seven 8.3 mm Phillips screws on the rear of the controller and remove them.





### Step 3

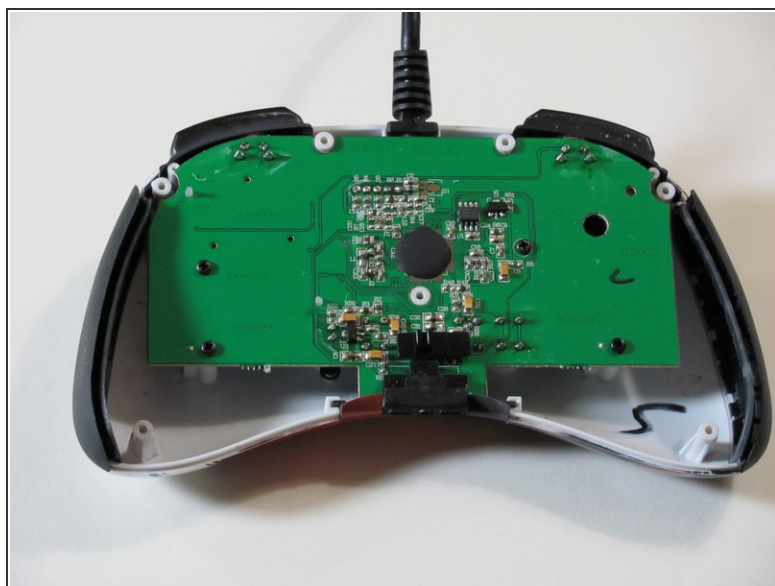



- Use a plastic opening tool to separate the rear and front casing by inserting it in-between the two cases.
- Use the plastic opening tool to pry the two cases apart.

### Step 4

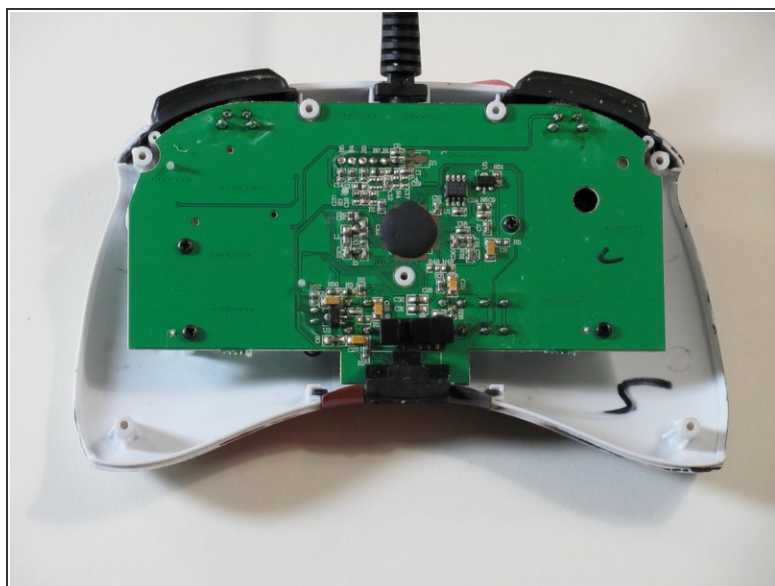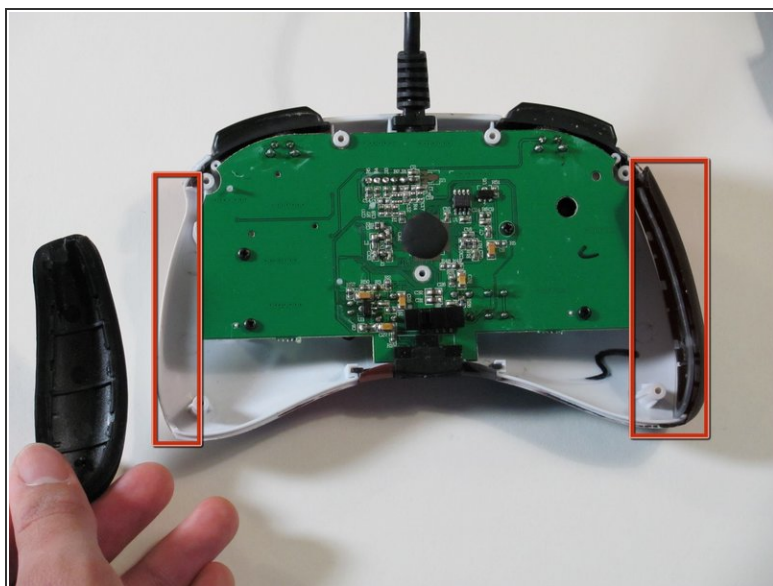


- Remove the two rubber side grips.

## Step 5 — RS-DP-LS Switch

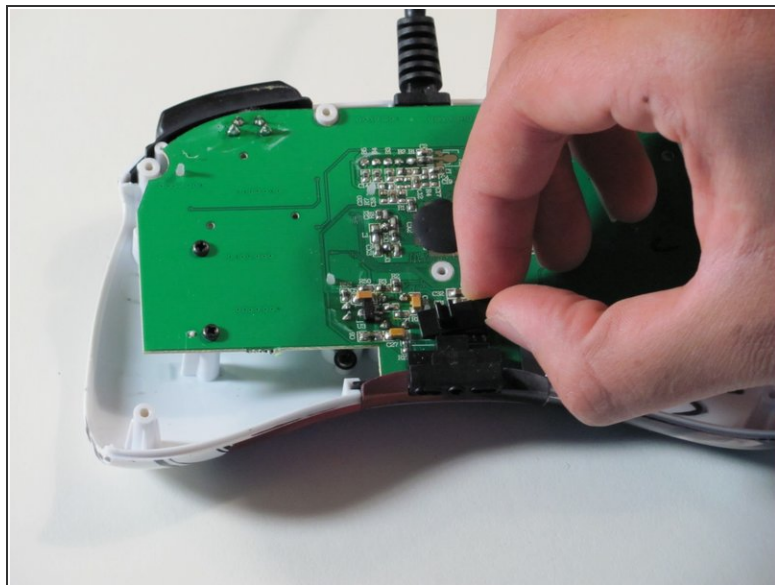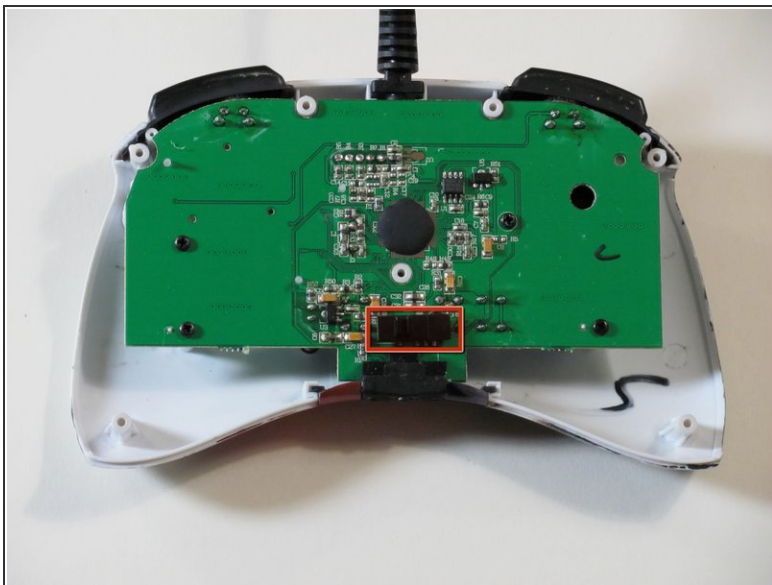


- Locate RS-DP-LS switch.
- Pull upwards on the switch to remove it.

## Step 6 — Circuit Board

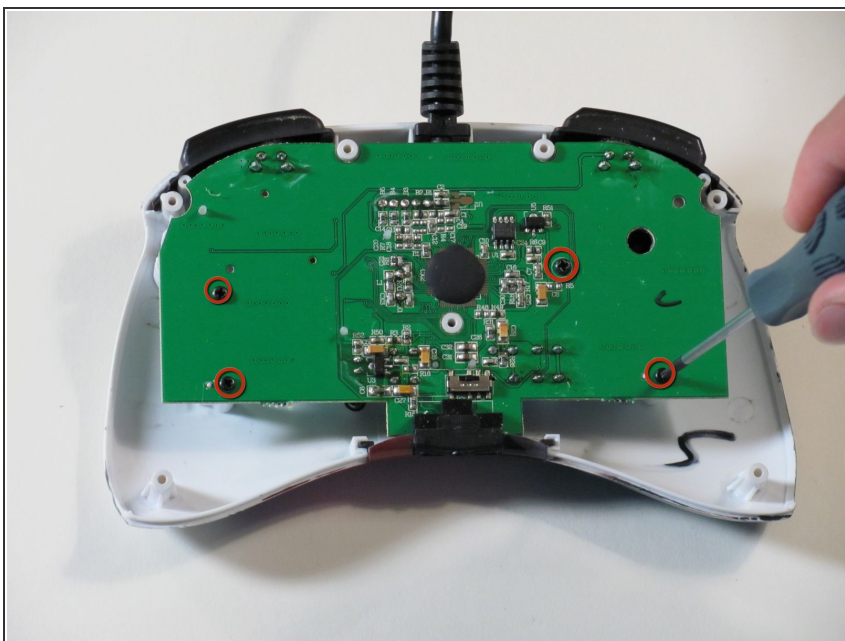

- Locate the four 8.3 mm Phillips screws on the circuit board and remove them.

## Step 7

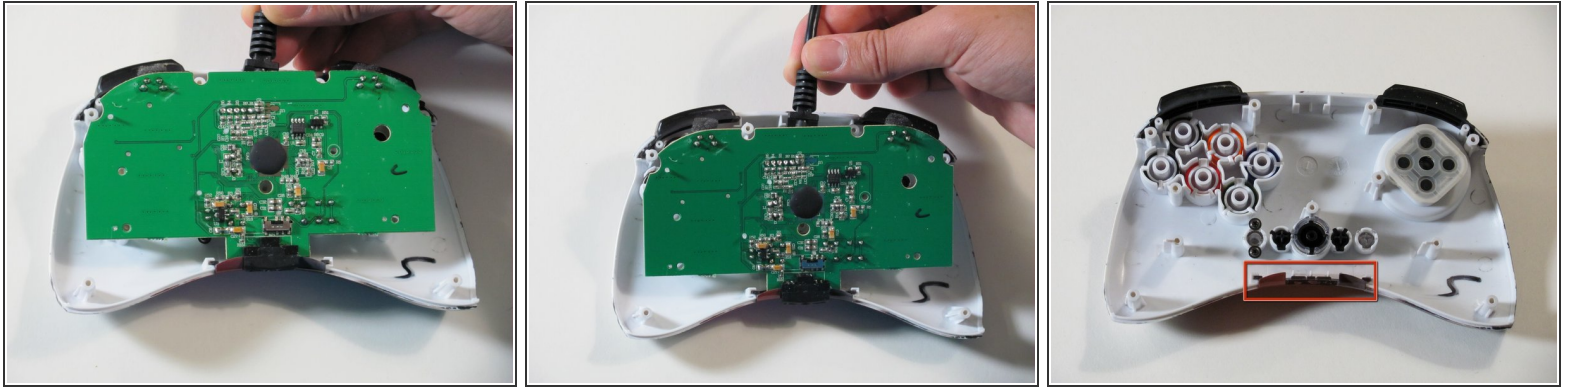

- Hold the controller cable at the area just before it meets the controller and slowly lift upwards to slide it out of its plastic slot and remove the circuit board.

**⚠ Be careful with the wires connected to the circuit board itself as they are thin and delicate.**

- ☑ When reassembling the controller, make sure that the bottom plastic piece is fully inserted into its slot before replacing the circuit board.

To reassemble your device, follow these instructions in reverse order.