



Fender Frontman 15r Fuse Replacement

How to replace a blown fuse on the amp.

Written By: Stephen Figueira



INTRODUCTION

If the fuse is blown, the amp will not turn on and a new fuse need to be installed.




TOOLS:

- [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)
 - [Spudger](#) (1)
-


Step 1 — Fuse



 Be sure to unplug the device before proceeding.

- Insert any tool with a small, flat end (such as a spudger, flathead screwdriver or plastic opening tool) into the groove in the bottom of the power input and wedge the plastic slot out from the amp.
- There will be two compartments (one enclosed, one exposed) each containing a fuse. The exposed fuse is the active fuse and the enclosed one is a spare.

Step 2

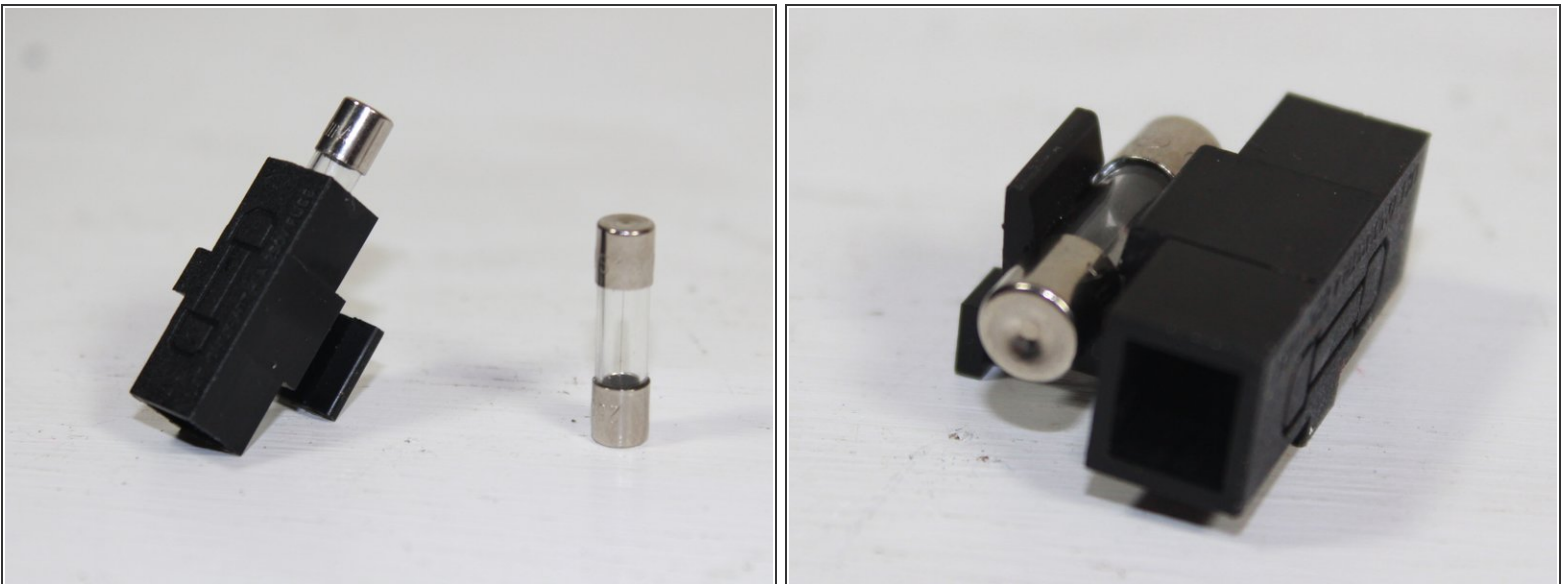

- Remove the blown exposed fuse and replace it with the enclosed fuse. If there is not an extra enclosed fuse, a new fuse must be ordered and inserted into the exposed slot.

To reassemble your device, follow these instructions in reverse order.