





Cherry Stream 3.0 Key Replacement

Repair/insert a key on cherry stream 3.0

Written By: Albertere Zweitausend

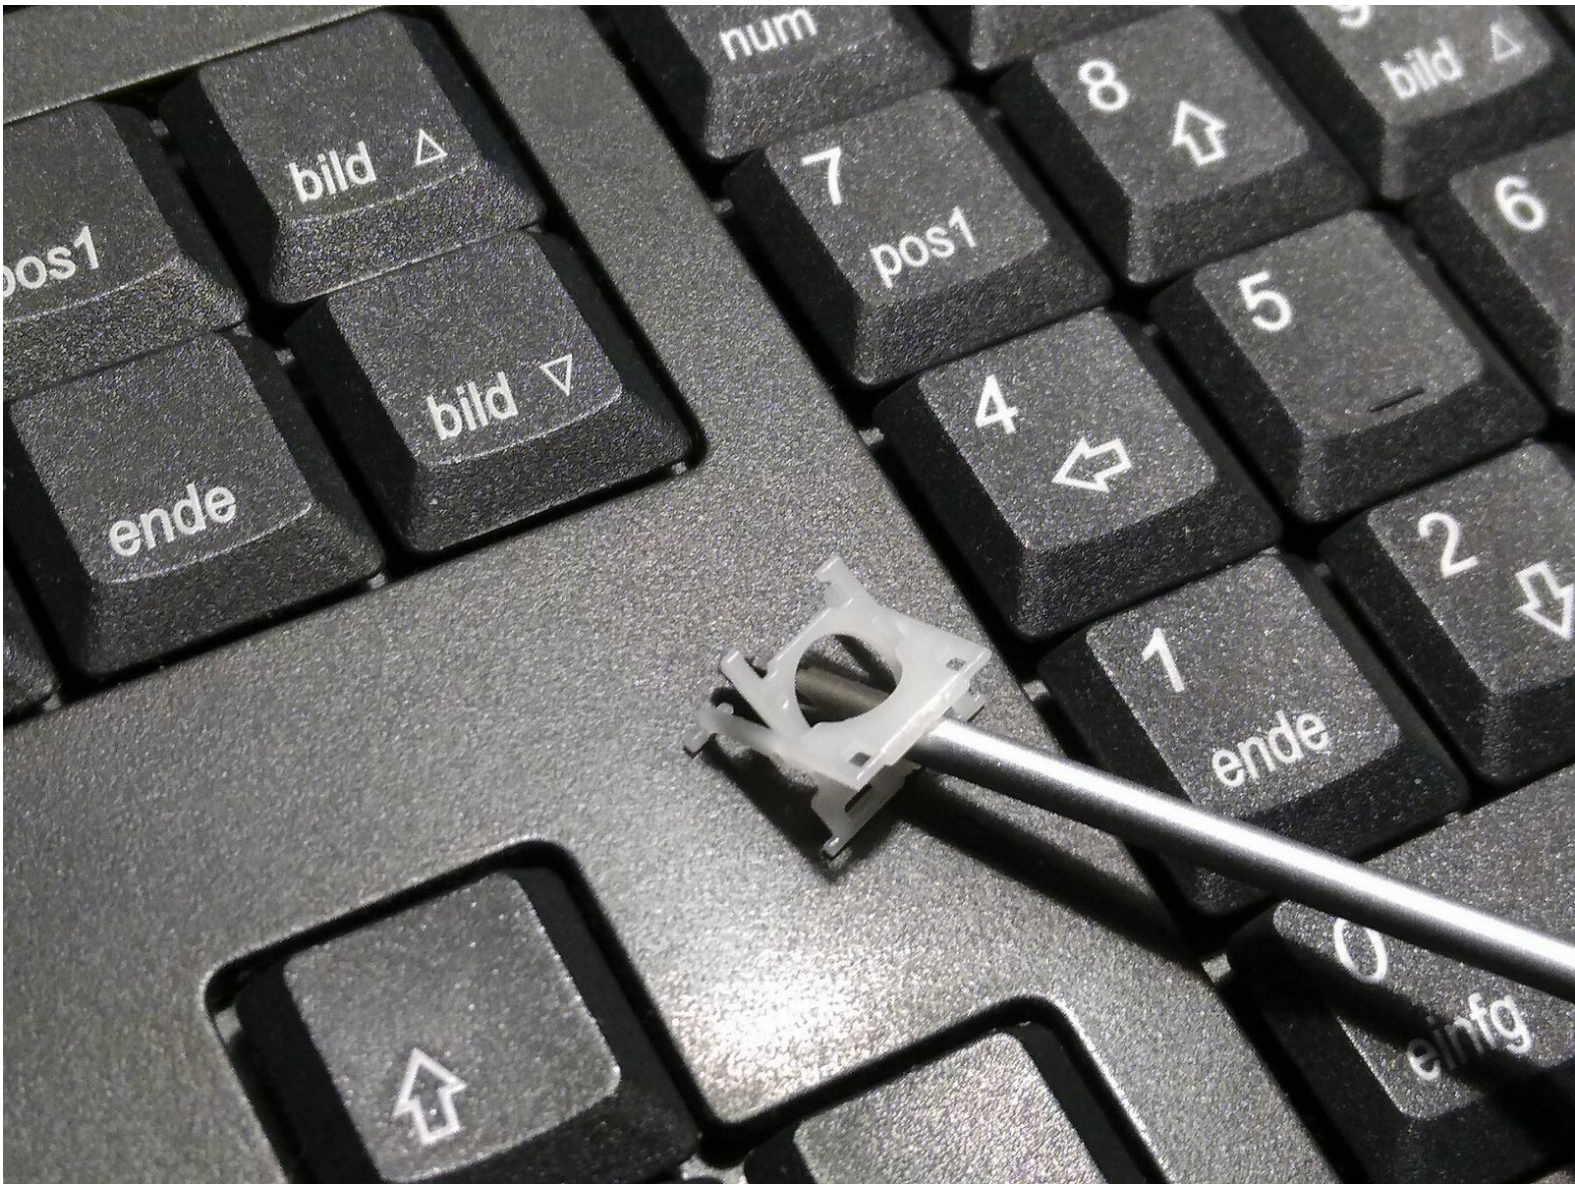

Step 1 — Key

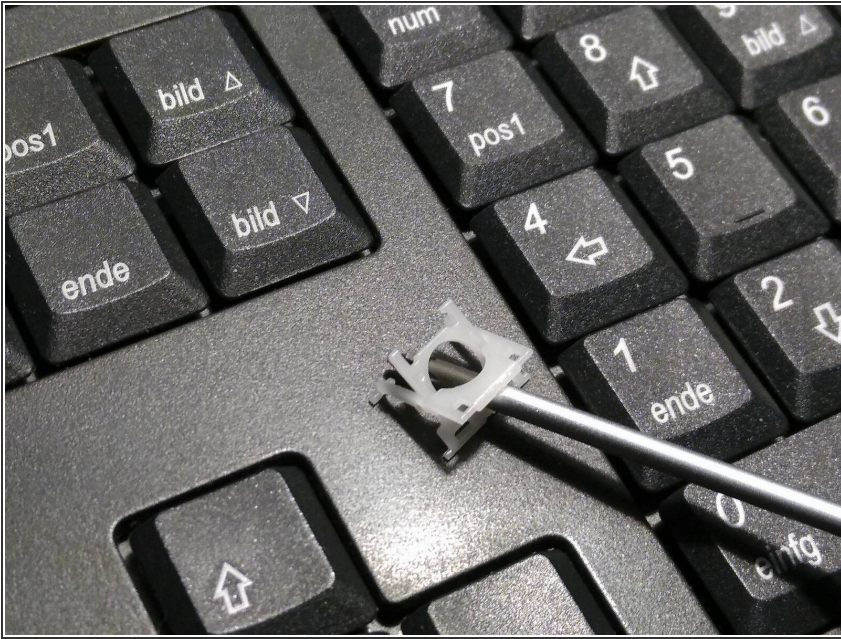

- That's how the problematic thing looks like.

Step 2



- First insert the top edge.

Step 3



- Simple release the plastic.

Step 4



- Press the bottom edge down, to insert it at the bottom.

Step 5



- To insert the key just squeeze it from above.