


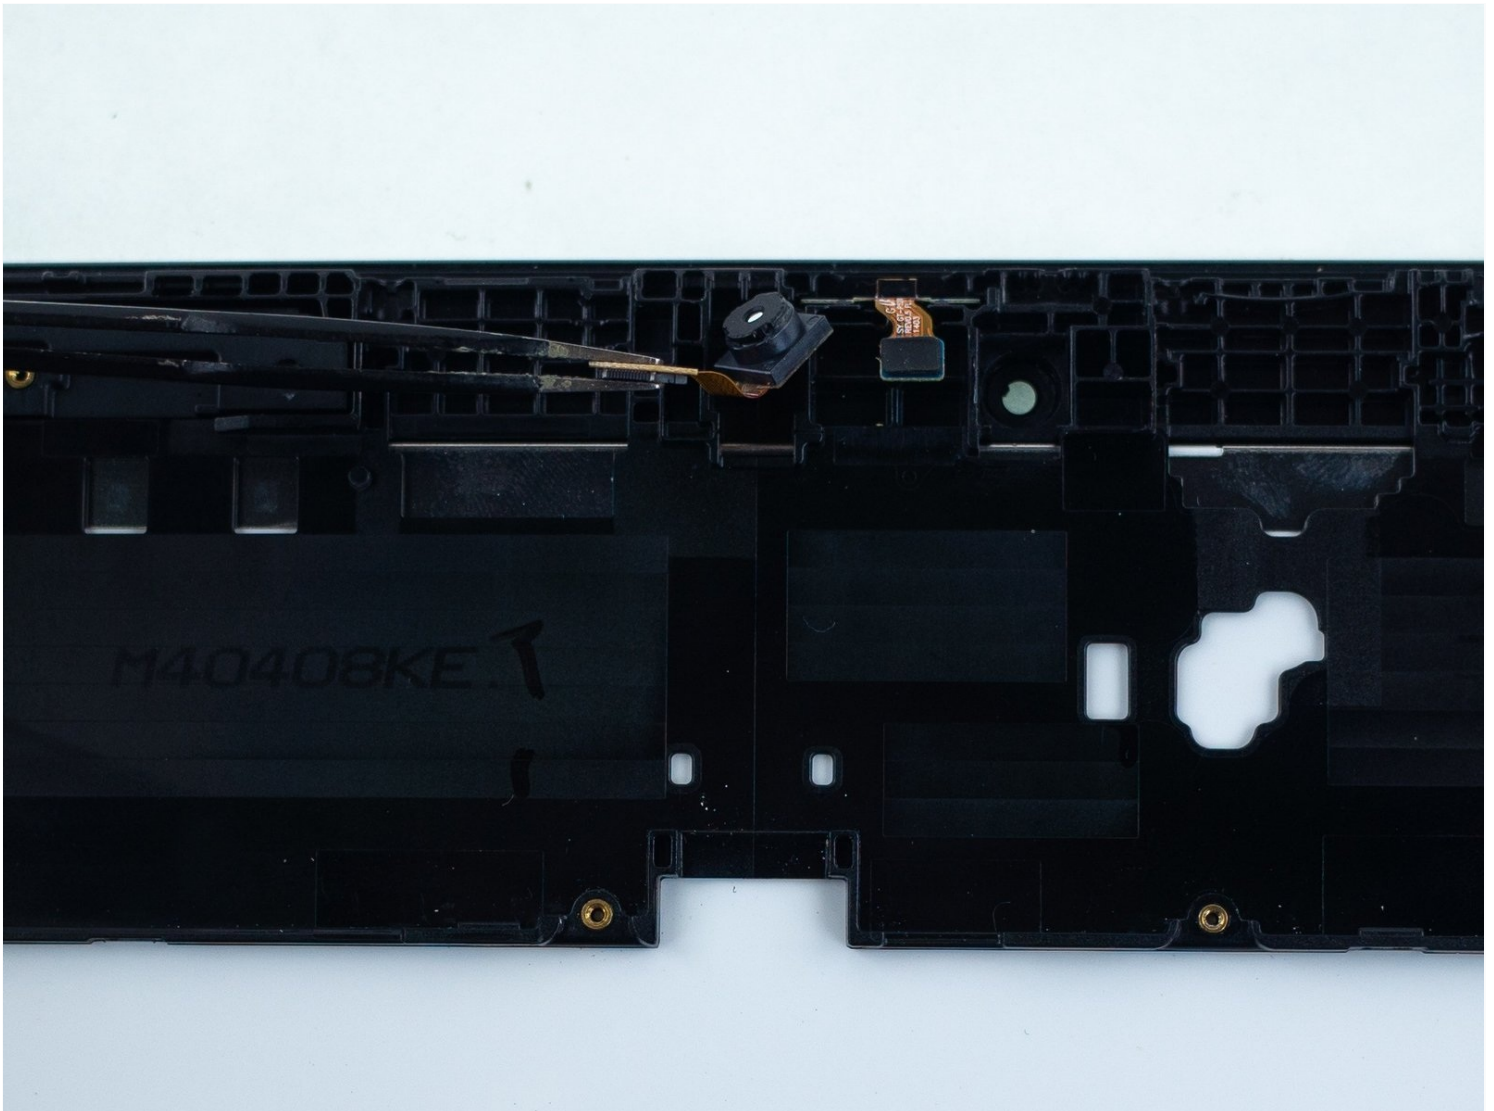

Samsung Galaxy Tab 4 10.1 Front and Rear Camera Replacement

Replacement guide for the front and rear...

Written By: Blake Klein



INTRODUCTION

Replacement guide for the front and rear cameras on a Samsung Galaxy Tab 4 10.1 android tablet.


TOOLS:

Phillips #00 Screwdriver (1)

Spudger (1)


Tweezers (1)

Step 1 — Battery

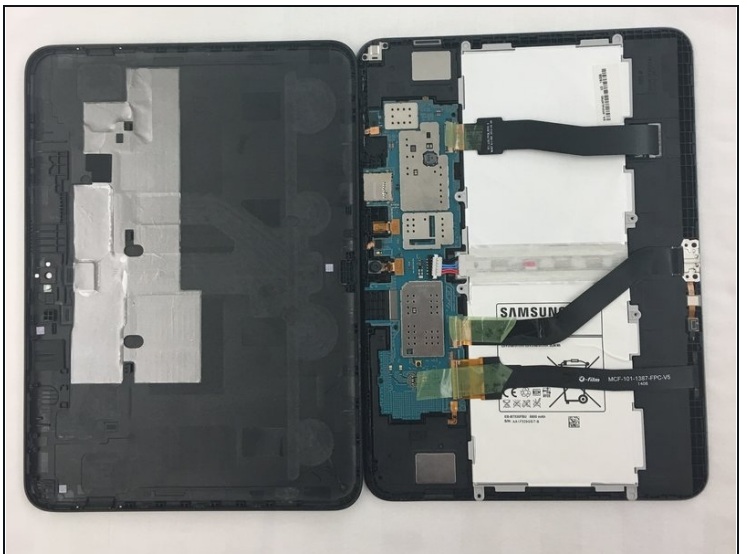


- Insert the wedge of the nylon spudger and slide it between the front and back panels until the back comes off.

Step 2

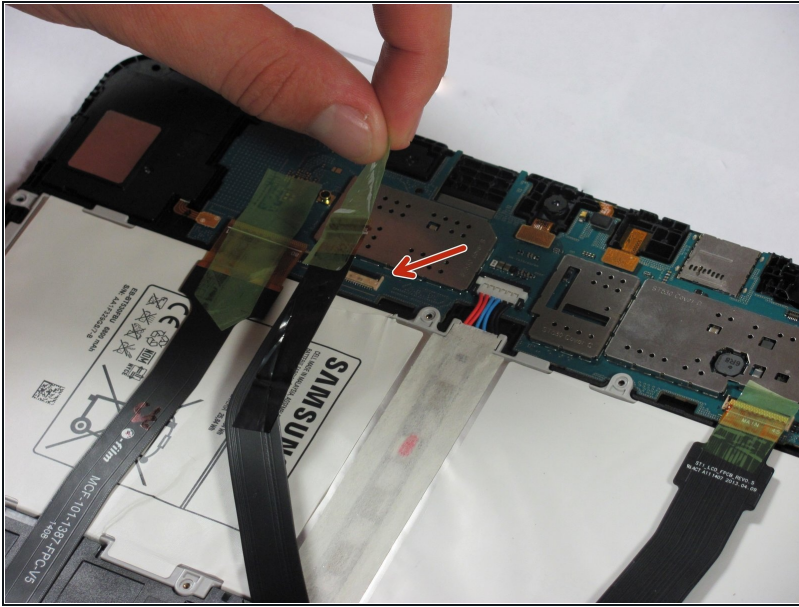


- Peel off the green tape that covers the connectors for the three black strips.
- Use the tip of a spudger or your fingernail to flip up the small retaining flaps.

Step 3

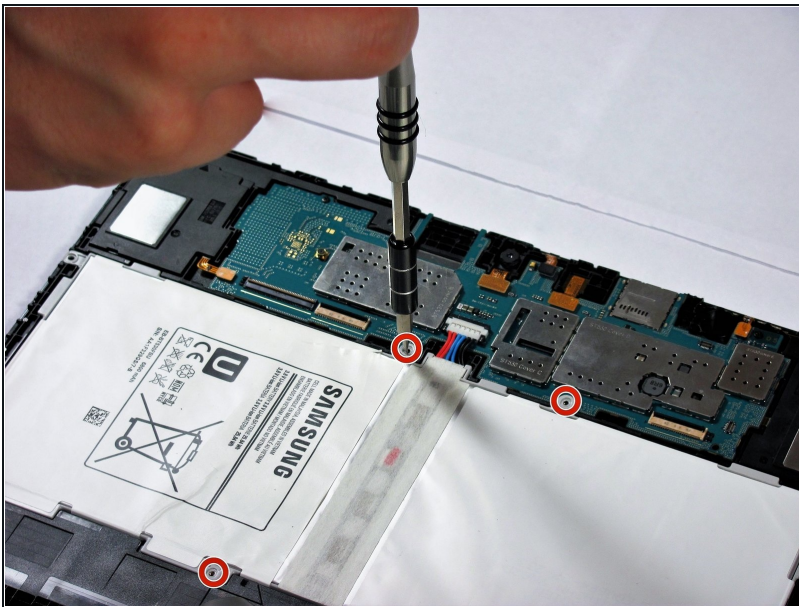

- Use a Phillips #00 screwdriver to remove the four 3.2mm screws.


Step 4

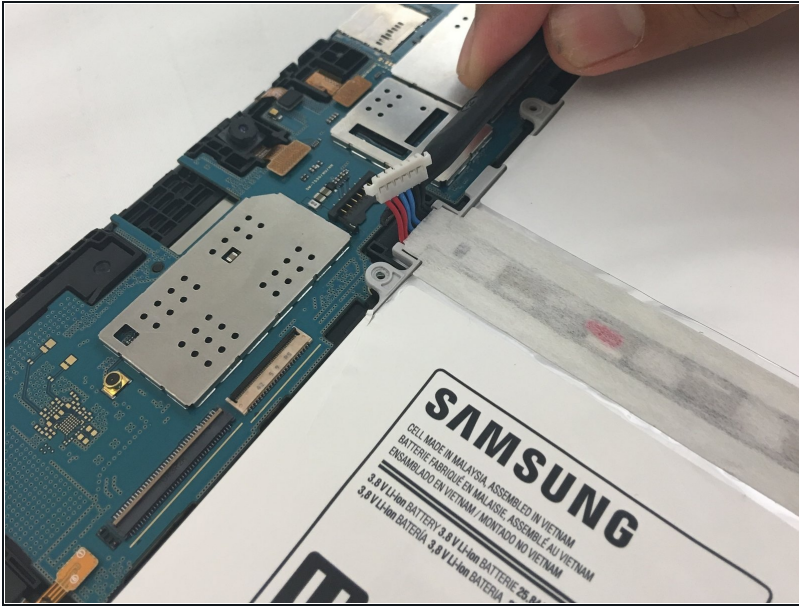

- Detach the red, blue, and black cables by prying up on the white connector from the motherboard.
- If using fingers instead, pull evenly on the full width of the cable so the wires are not overly strained.


⚠ If you pull too hard you can damage the connector on the circuit board. Use a spudger or [tweezers](#) to push down on the black connector on the board while gently prying the battery connector loose. The connector breaks VERY easily.

Step 5

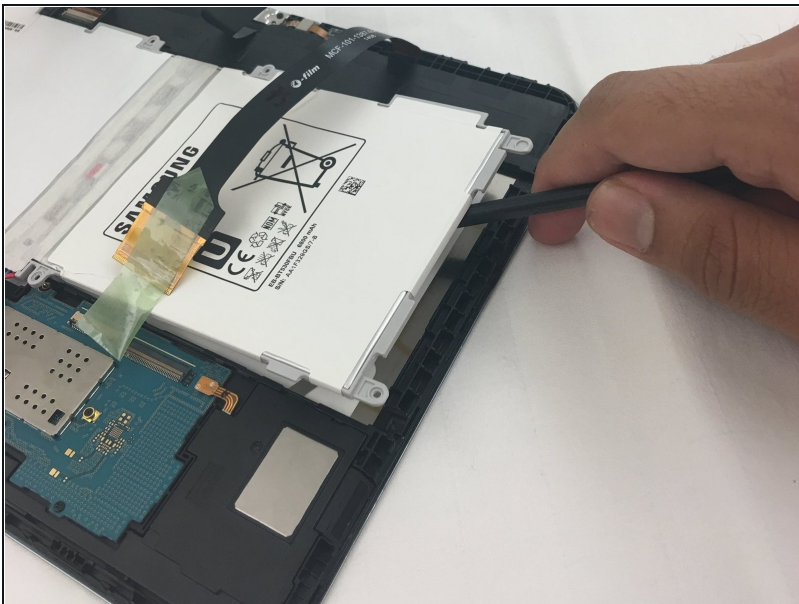


- Use the nylon spudger to remove the battery by prying up on the edges.

Step 6

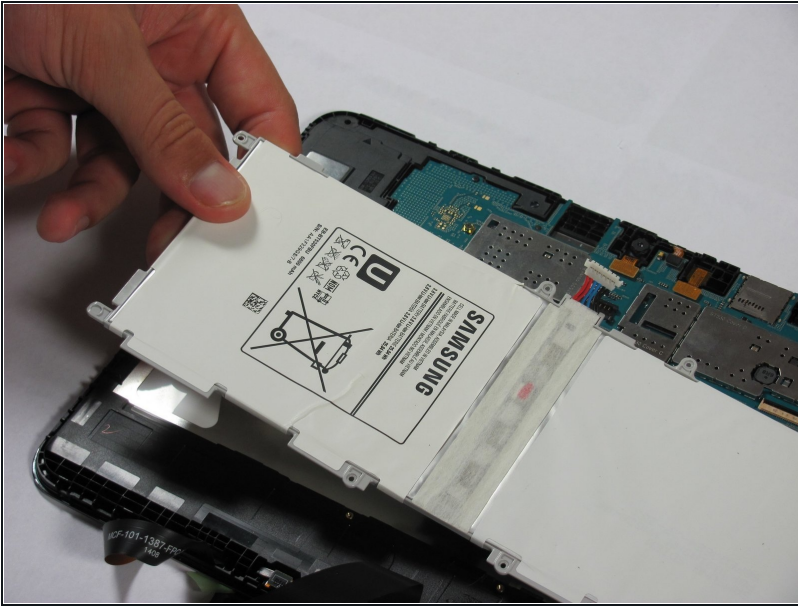



- Once the battery is loose, lift it out of the device.

Step 7 — Motherboard

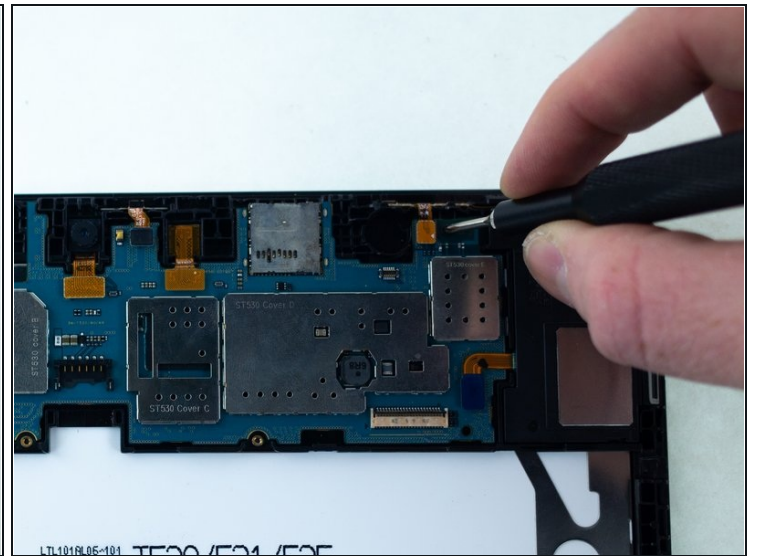


- Remove the two 2.7mm Phillips #00 screws from the motherboard.

Step 8

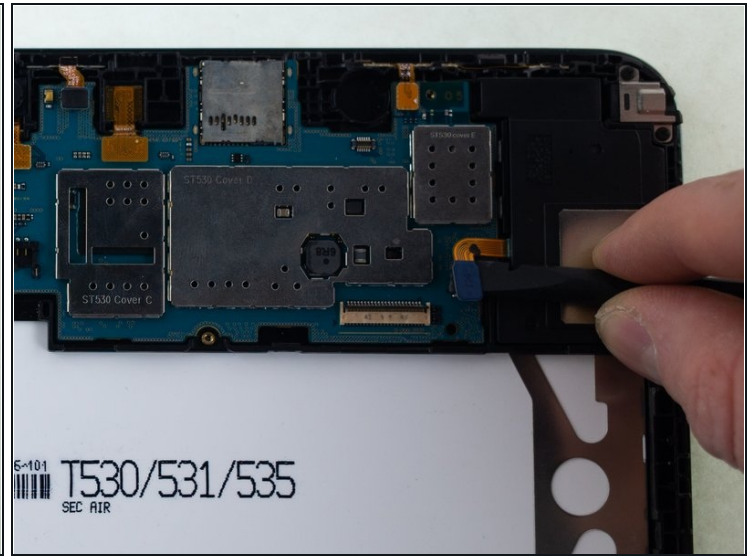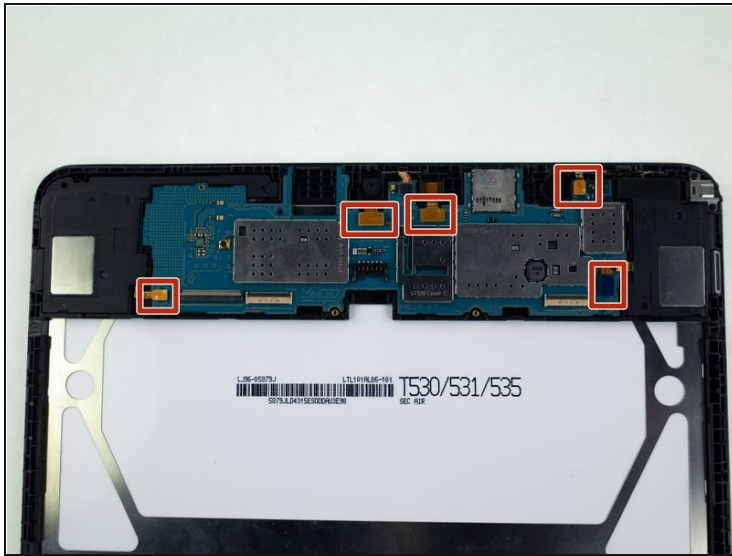


- Use the flat end of a spudger to pry up and disconnect the five press-fit connectors from the motherboard.

Step 9

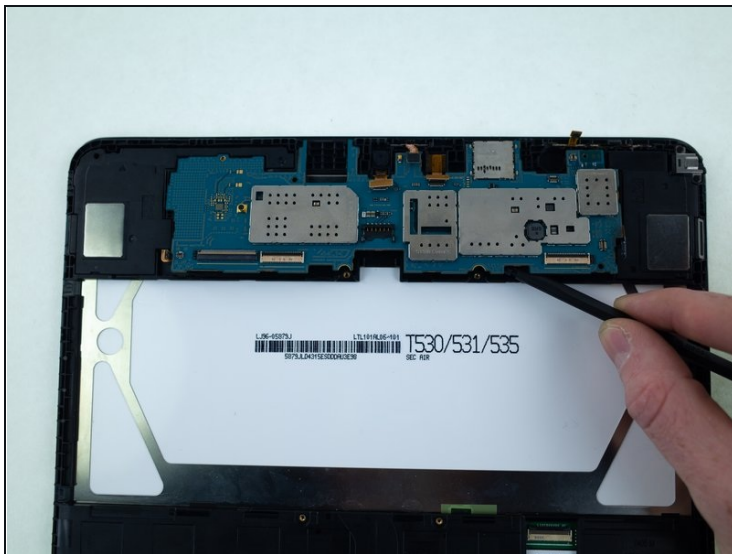

- Use a spudger to pry up the motherboard, and remove it from the device.

Step 10 — Front and Rear Camera

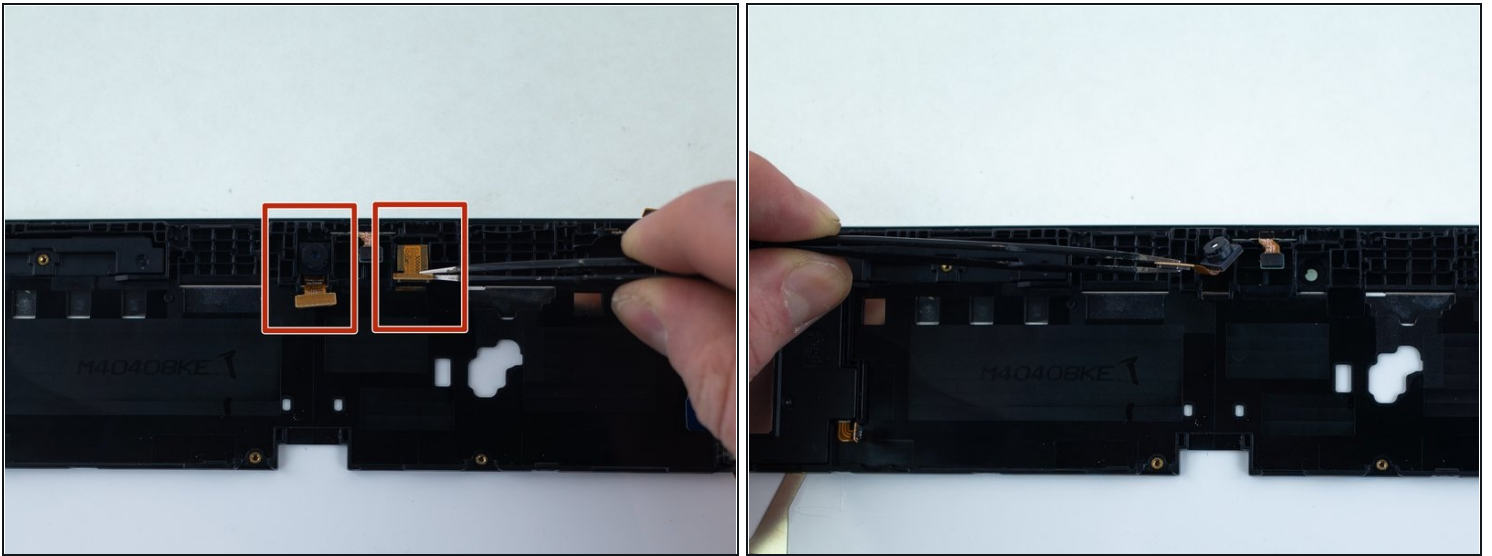

- Pull up on the cameras with a pair of [tweezers](#) to remove.

To reassemble your device, follow these instructions in reverse order.