

HP Color LaserJet Pro MFP M277dw Display Replacement

How do I replace the screen in an HP Color LaserJet Pro MFP M277dw.

Written By: Christopher Fahey



This document was generated on 2020-11-28 06:56:01 AM (MST).

INTRODUCTION

This is a guide to replacing the display on an HP Color LaserJet Pro MFP M277dw. You should not need any special equipment or skills to perform this replacement.



TOOLS:


- iFixit Opening Tools (1)
- Phillips #2 Screwdriver (1)

Step 1 — Display




Lift up the top of the printer by pulling up on it.

Step 2

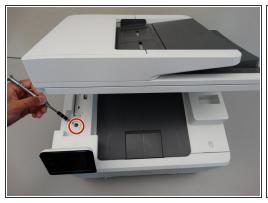




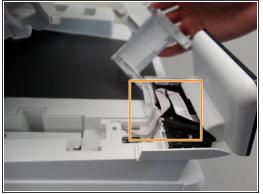

- Remove one Phillips #2 15mm screw.
- Use the plastic opening tool to remove the top of the display component.
- The cable connecting the display to the motherboard should be visible.

Step 3



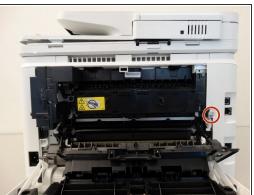



- Lower the back panel by pulling it down.
- Remove one Phillips #2 10mm screw.
- Use the plastic opening tool to remove the left side panel.
- (i) Flipping the printer onto its side makes it easier to remove the panel and access the motherboard.

Step 4



- Unplug the display from pink cable from the circuit board.
- Connecting a new display will require you to feed the cable through the printer.

To reassemble your device, follow these instructions in reverse order.