



HP 15-f162dx DVD Replacement

These two steps will help you to replace the DVD.

Written By: Abdulrahman Bogshan



INTRODUCTION


These two steps will help you to replace the DVD.



TOOLS:


- [Fingers](#) (1)
 - [Essential Electronics Toolkit](#) (1)
-

Step 1 — Battery

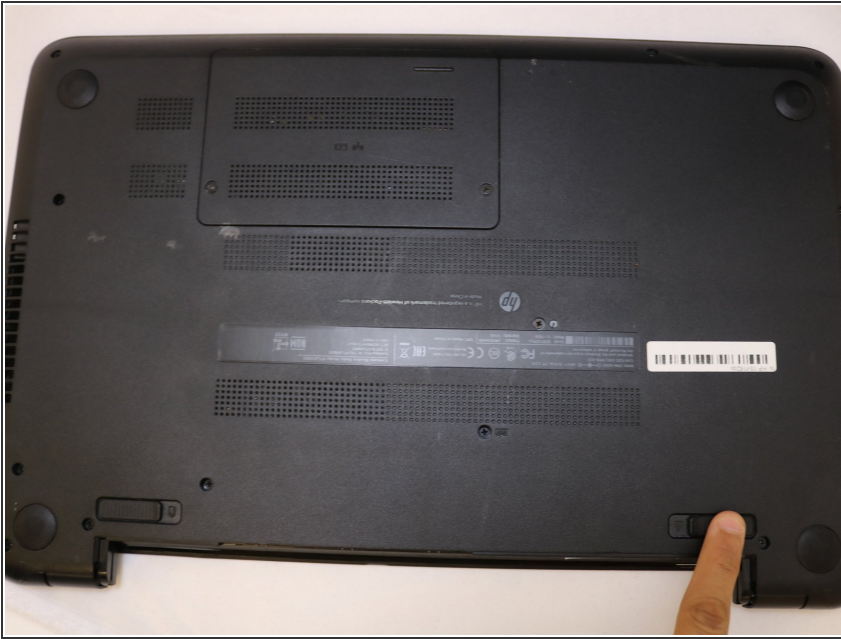

- Pull back the lock.

Step 2

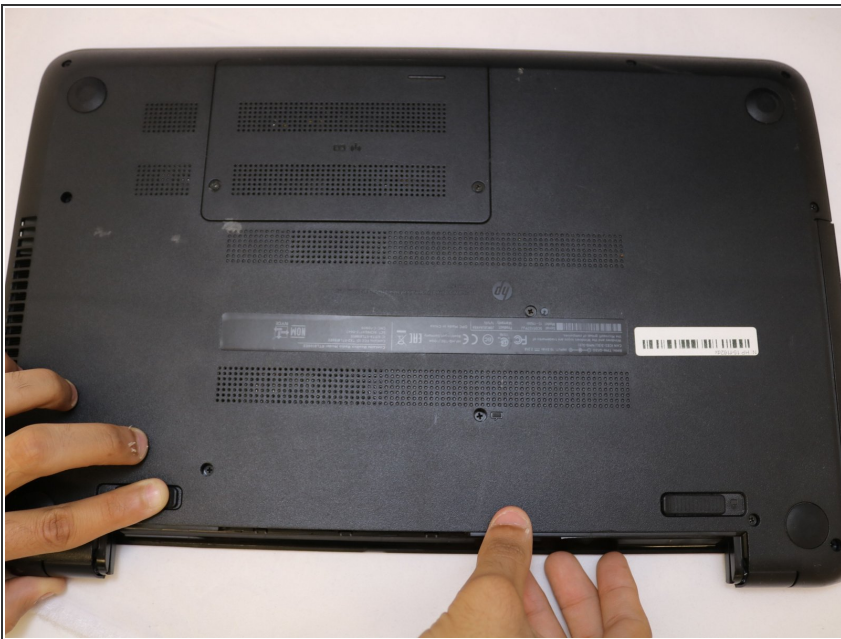

- Take off the battery

Step 3 — DVD



- Take out the DVD plug.

Step 4



- Start take out the screws to open the laptop cover and replace the DVD plug. Use Phillips screwdriver Flathead 2.5 mm

To reassemble your device, follow these instructions in reverse order.