



# Acer Aspire V3-551-8469 Hard Drive Replacement

Use this guide to replace an Acer Aspire V3-551-8469 hard drive.

Written By: Maritsa Garcia



---

## INTRODUCTION

The hard drive on a computer is typically used to access laptop applications. Use this guide to replace broken hard drives, which tend to be the most common laptop component to fail. No complicated manipulation is required.



### TOOLS:



- [Phillips #0 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Hard Drive



- To release the battery, slide the orange tab to the right with a spudger.
- The battery is now released and can be picked up and set to the side.



## Step 2

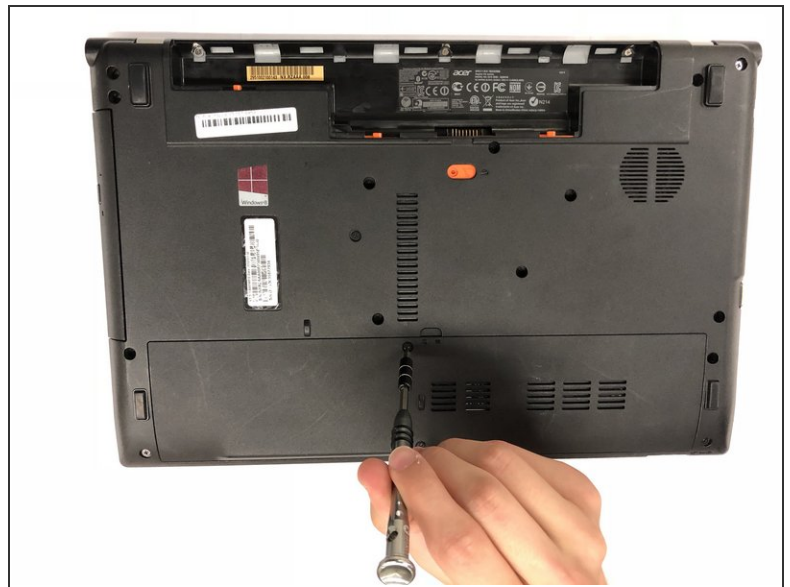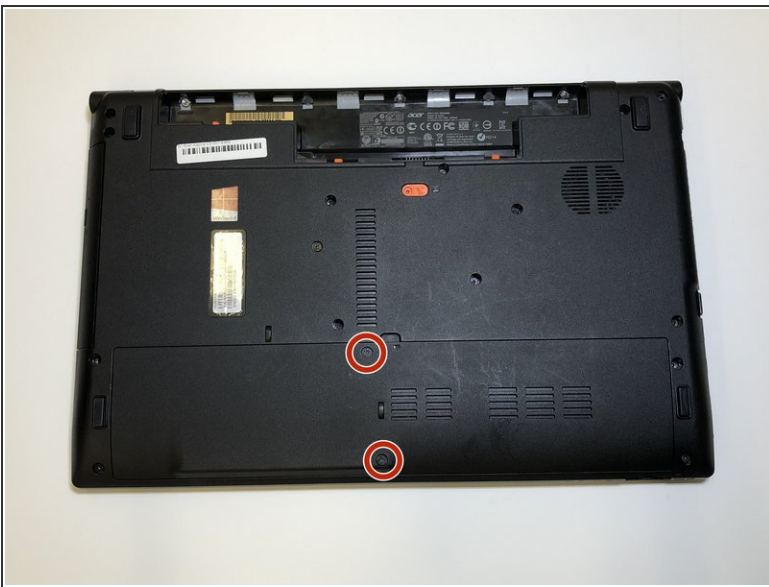

- Remove the two 5.3 mm Phillips #0 screws.




### Step 3

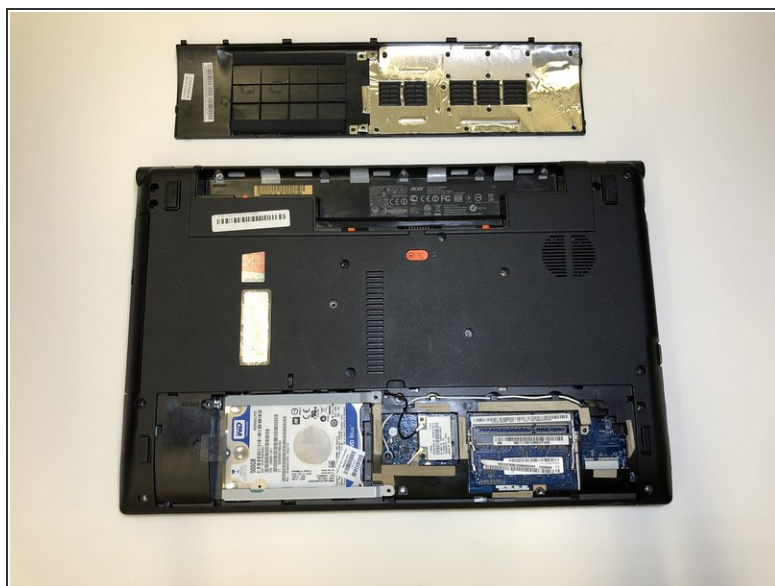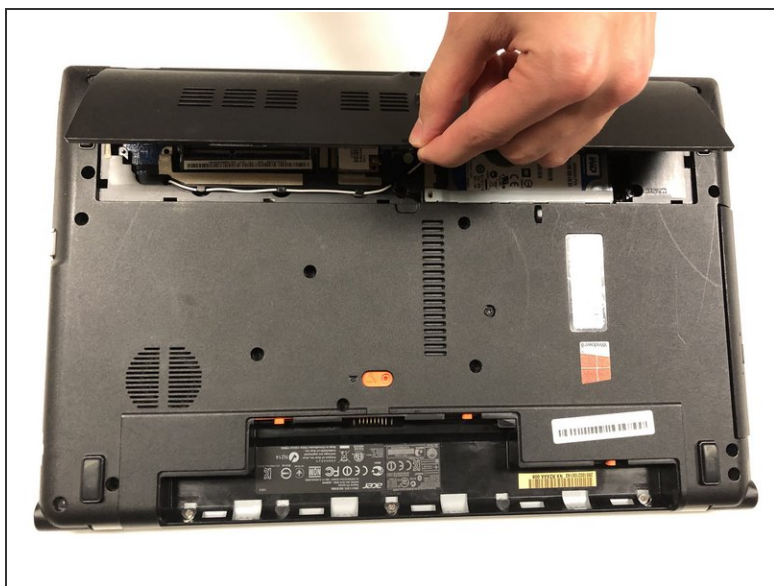


- Pull off the back panel.

### Step 4

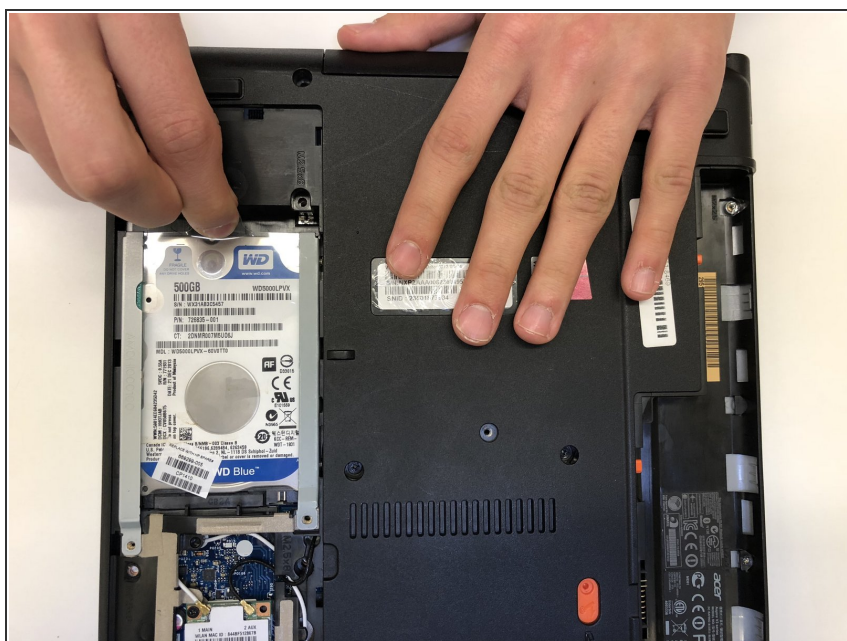

- Pull the plastic tab on top of the hard drive.

## Step 5

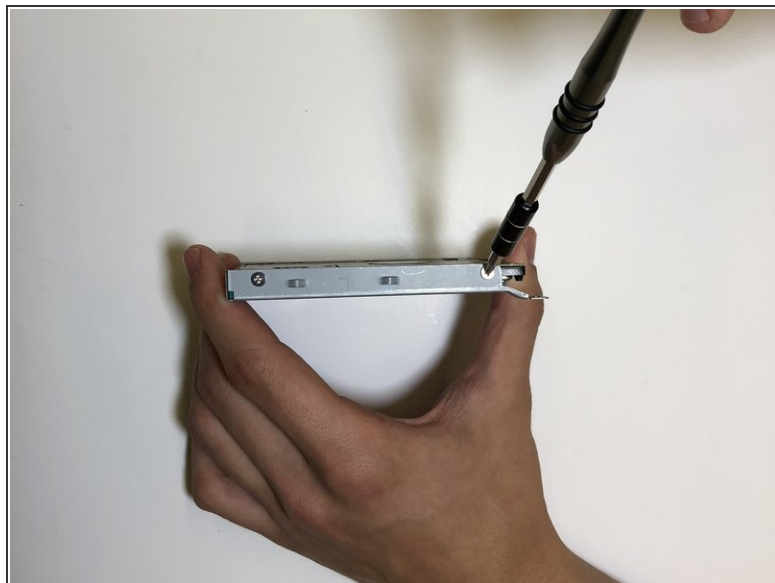

- Remove the four 5.3 mm screws that secure the hard drive in the frame.

After replacing the old hard drive, reassemble your device by following these instructions in reverse order.