




Coolpad Defiant Daughterboard Replacement

This will help you disassemble and replace the daughter board in your Coolpad Defiant.

Written By: Elijah Gustin

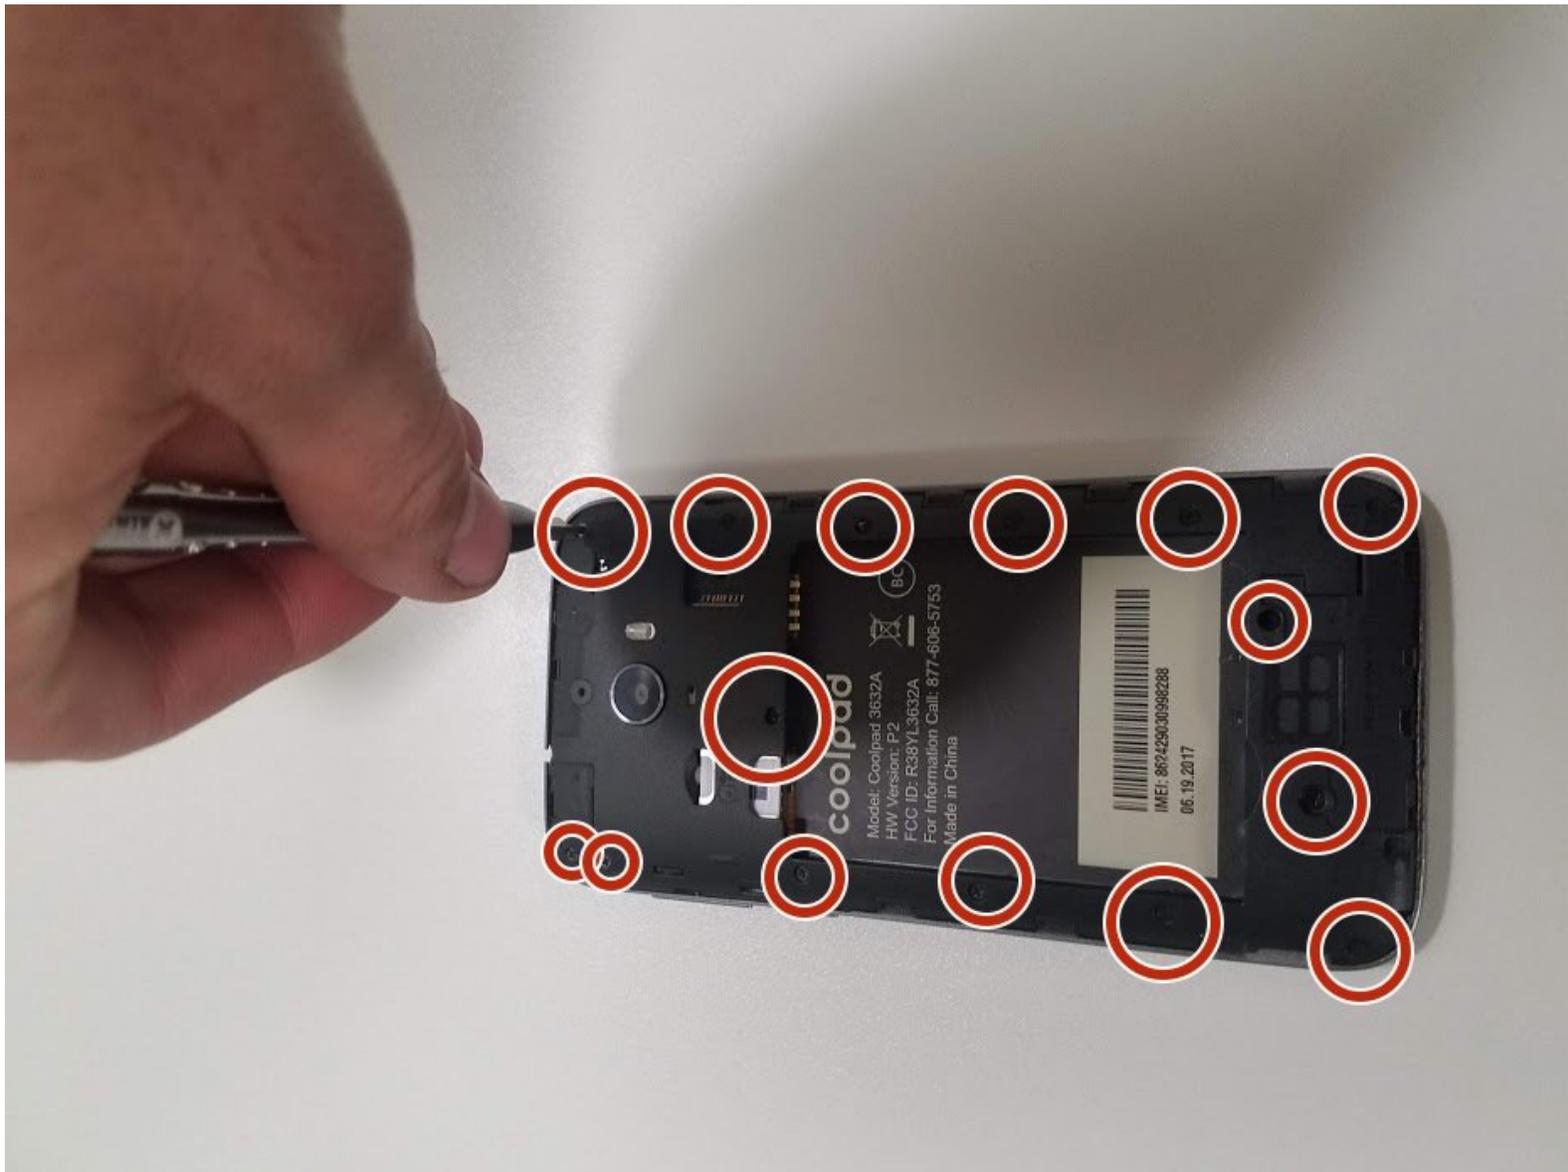

INTRODUCTION

Use this guide to replace the daughterboard in your phone.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Back Cover



- Turn the phone with the back cover facing towards you.
 - Carefully remove the back cover by holding one corner of the case and carefully pulling it away from the phone.
- ⚠ The plastic case and inner components can break if not pulled carefully, so pull cautiously.

Step 2





- Remove the back cover from your device.

Step 3 — Battery




- Find the gap on the bottom of the battery.
- With a tool or with your hands, pull the battery upward and set it aside safely.
- ★ *Remember to return the battery once you are done, safely placing it in the correct position or as how you first saw it.*
- ⚠ Be careful with old or damaged batteries and dispose of it appropriately

Step 4 — Daughterboard

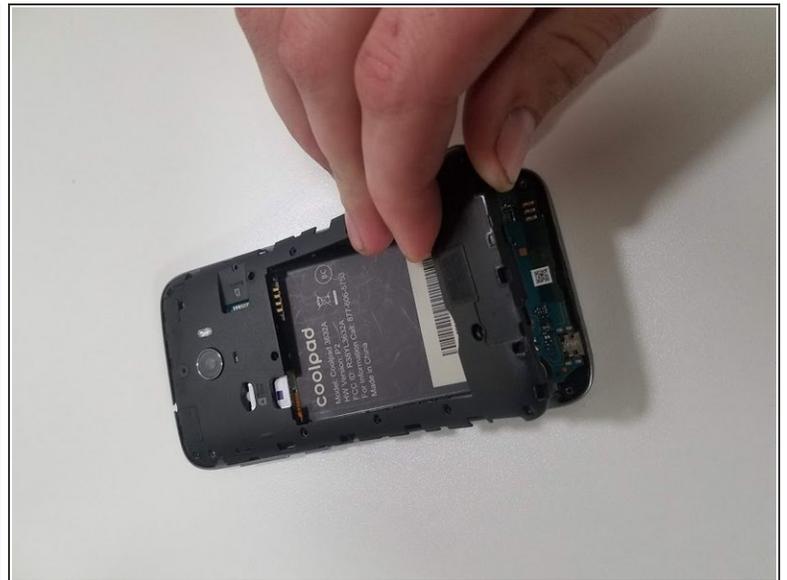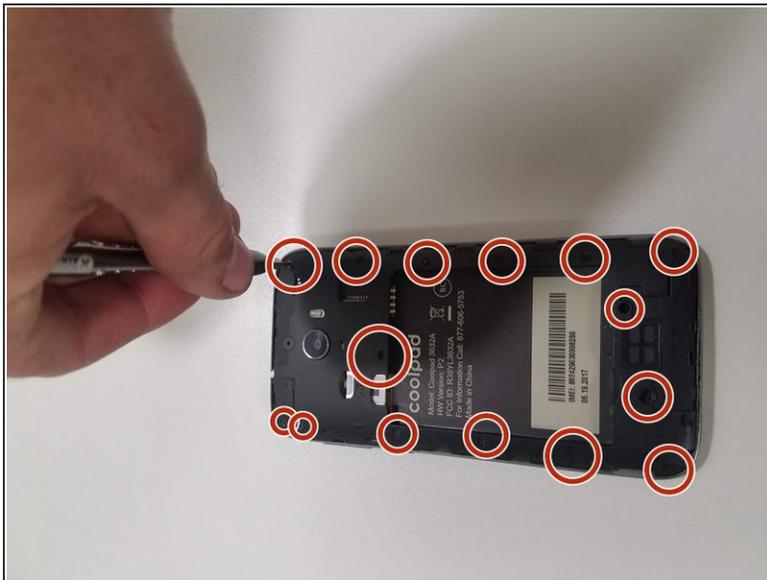

- Remove all fifteen screws using the Phillips #000 screwdriver.
- Remove the back panel after all screws are removed.

Step 5

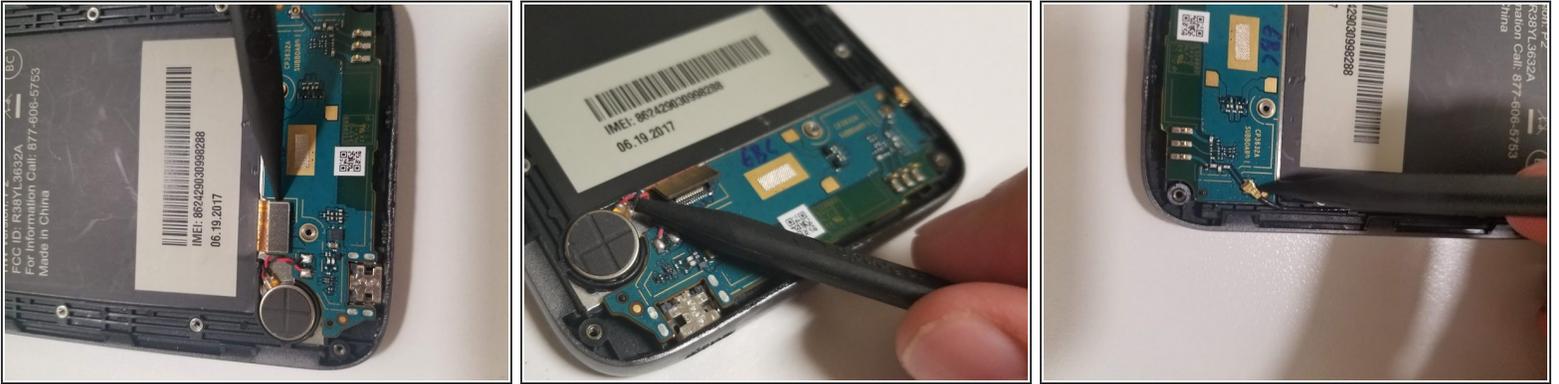

- Disconnect the metal cable using the plastic spudger.
- The remove the glued down speaker from the backing.
- Disconnect the little black wire from lower logic board.

Step 6



- Using the plastic spudger remove the lower logic board because the only thing that is holding it down is glue.

To reassemble your device, follow these instructions in reverse order.