



# MSI PR600 MS-16372 Battery Replacement

This guide will demonstrate how to replace a dead battery in a MSI PR600 MS-16372 when laptop will not charge.

Written By: Lauren Mewes



## INTRODUCTION

After confirming that your power cord is not faulty, your next step would be to buy a new battery and replace old one. To complete this task you will not need any tools.

## Step 1 — Battery




- First, turn off the computer and unplug the power cord.
- ⚠ If laptop is not unplugged from the power cord, you could be at risk of electric shock.

## Step 2



- Flip laptop over so that you are looking at the bottom of the laptop.
- Put your left pointer finger on the switch labeled "Battery lock" and your right pointer finger on the switch labeled "Release".

## Step 3

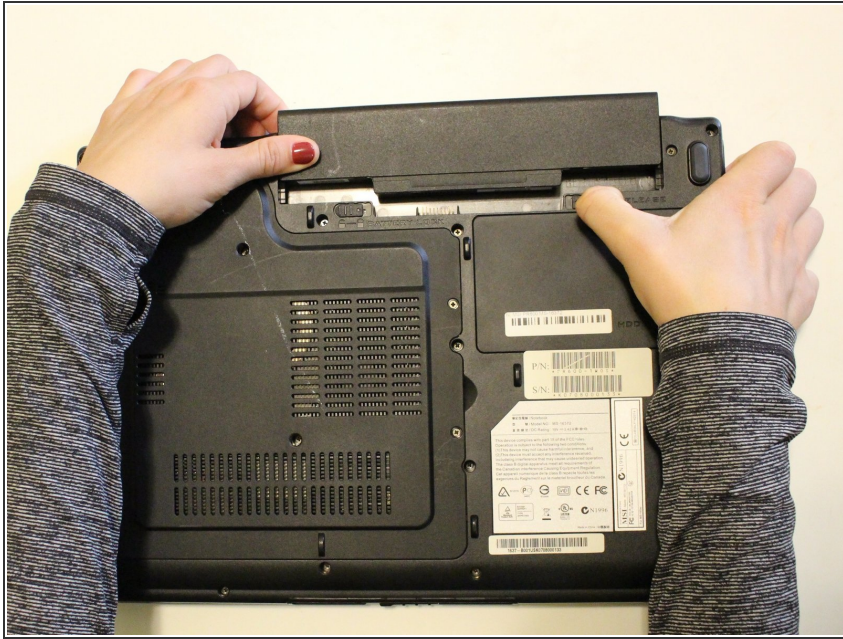

- Switch the tab labeled "Battery lock" to the unlocked position.
- Slide the tab labeled "Release" to the right and hold it down.
- While holding the "Release" tab to the right, slide the battery out with your left hand.

To reassemble your device, follow these instructions in reverse order.