




# Asus Eee PC 1201HAB Keyboard Replacement

This guide will teach you how to remove and replace the keyboard.

Written By: Katherine Chan

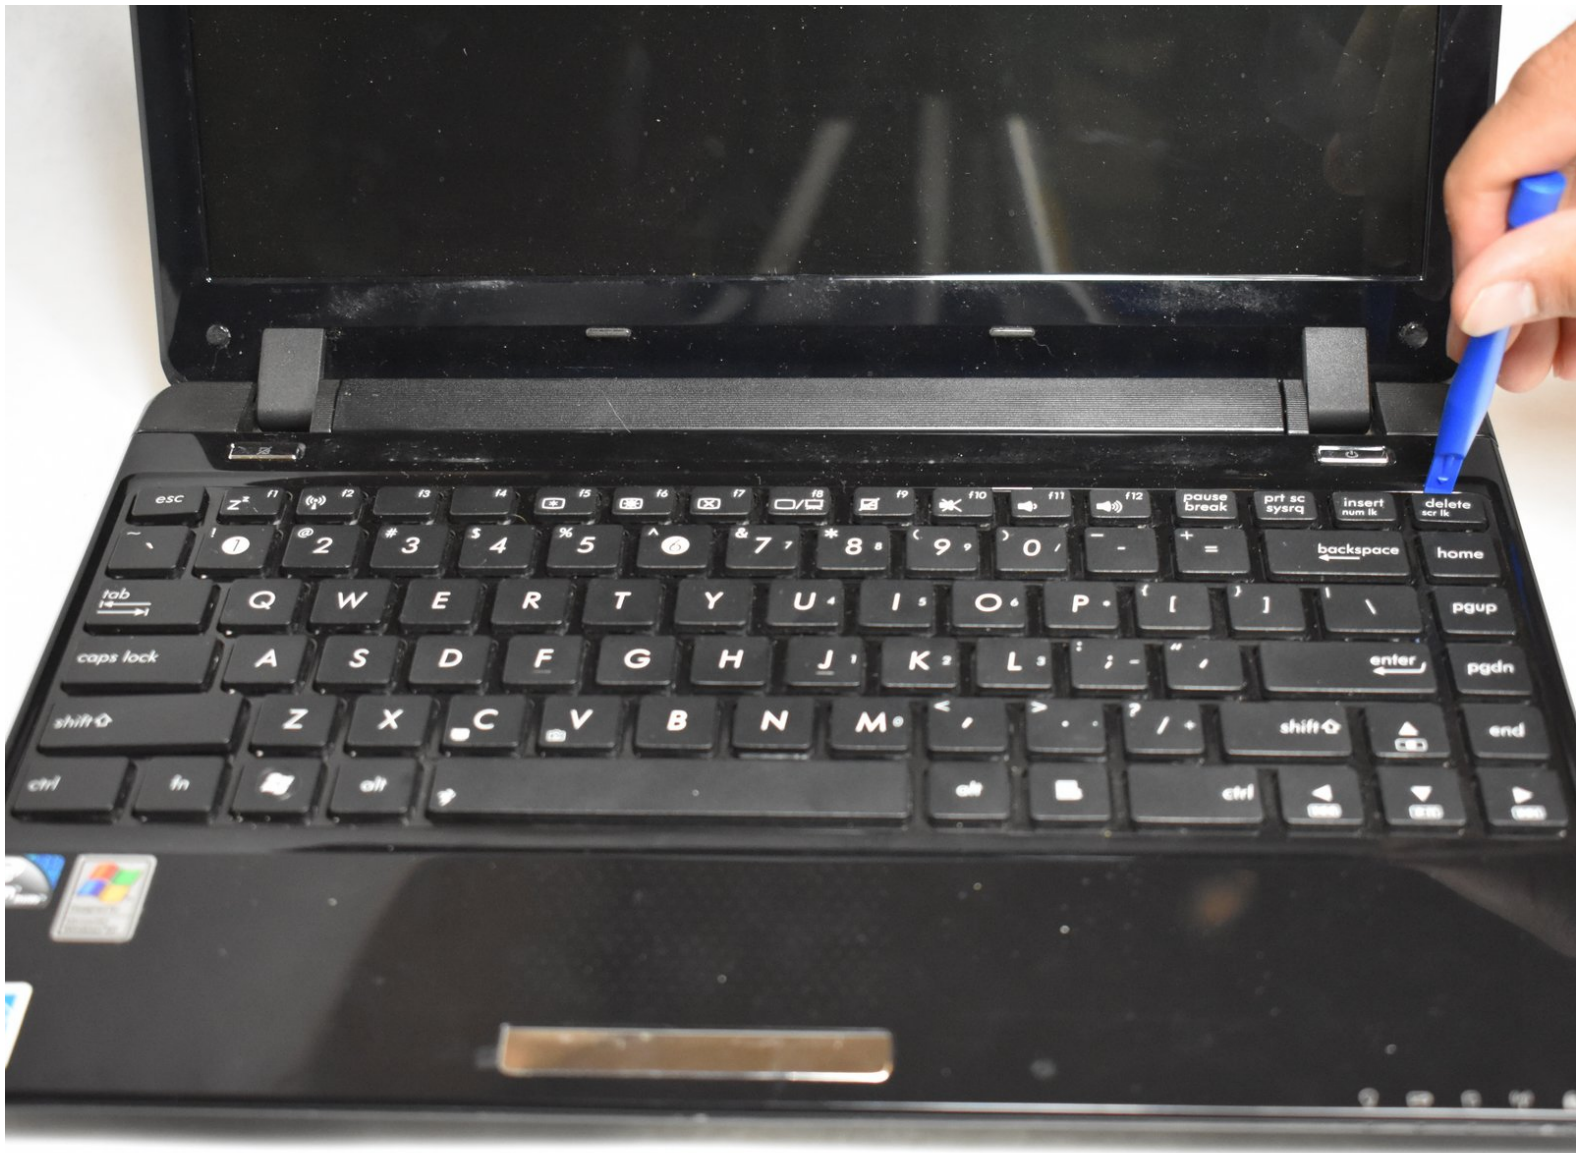

# INTRODUCTION

If you are having troubles with your keyboard, this guide will teach you how to remove and replace it.



## TOOLS:

- [iFixit Opening Tools](#) (1)



## PARTS:



- [keyboard panel](#) (1)

## Step 1 — Keyboard




- Use a plastic opening tool and carefully pry the top panel from the base.

## Step 2

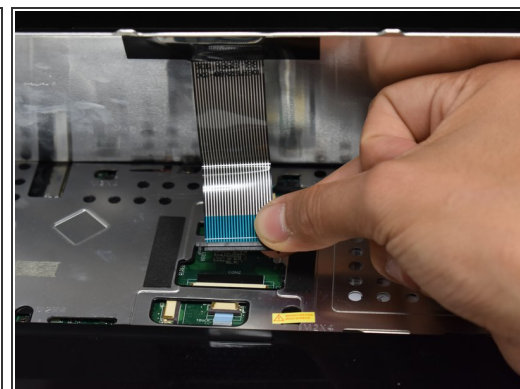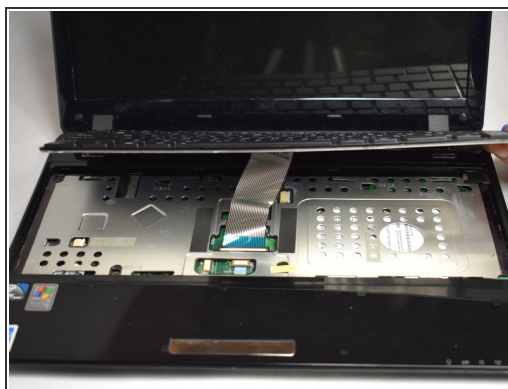

- Slowly lift the keyboard from the base.
- Disconnect the attached ribbon from under the keyboard.

## Step 3

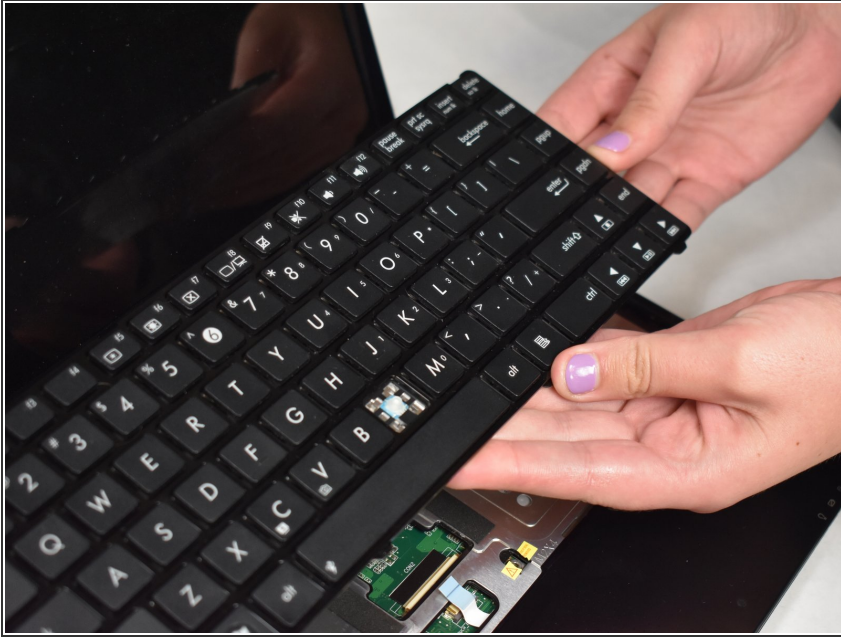

- Remove the keyboard.

To reassemble your device, follow these instructions in reverse order.