



Asus Zenfone 4 Max Battery Replacement

How to replace an Asus Zenfone 4 Max battery.

Written By: Maegan West



INTRODUCTION

If your Asus Zenfone 4 Max phone fails to charge, it could be due to a malfunctioning battery. This guide will help you remove your phone battery and replace it with a new one. Replacing the battery must be done with great care.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Battery




- Using a removable head screwdriver and a T3 bit, begin by removing the two screws located on either side of the charging port.

Step 2



- Gently wedge the opening tool between the phone and the back casing.
- Move the opening tool up and down to pry the back off of the device.

Step 3

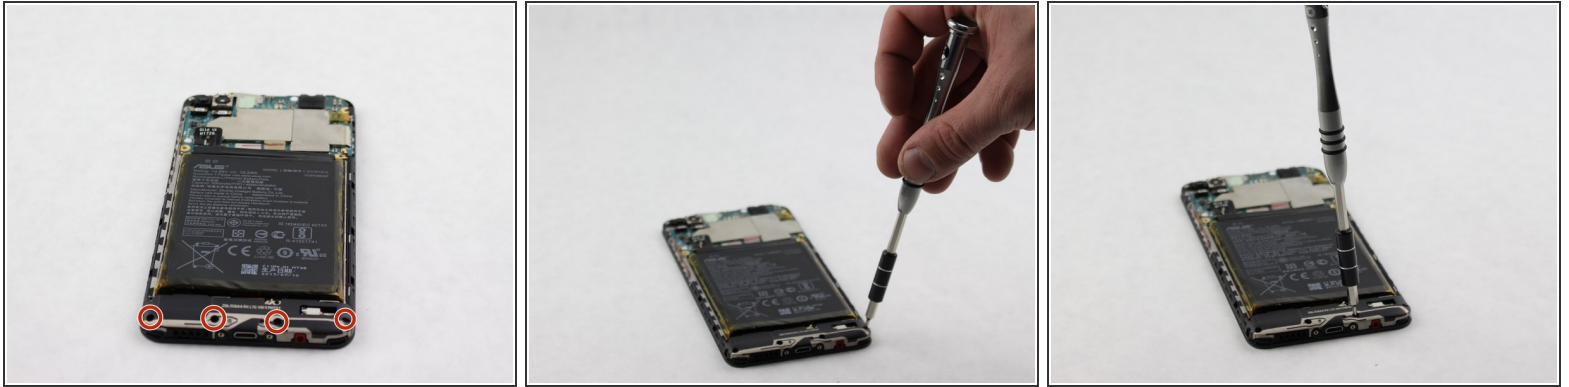


- Once the back has been removed, you will need to unscrew the four screws on the bottom panel with an AT3 bit.

Step 4



- Remove the bottom panel.

Step 5

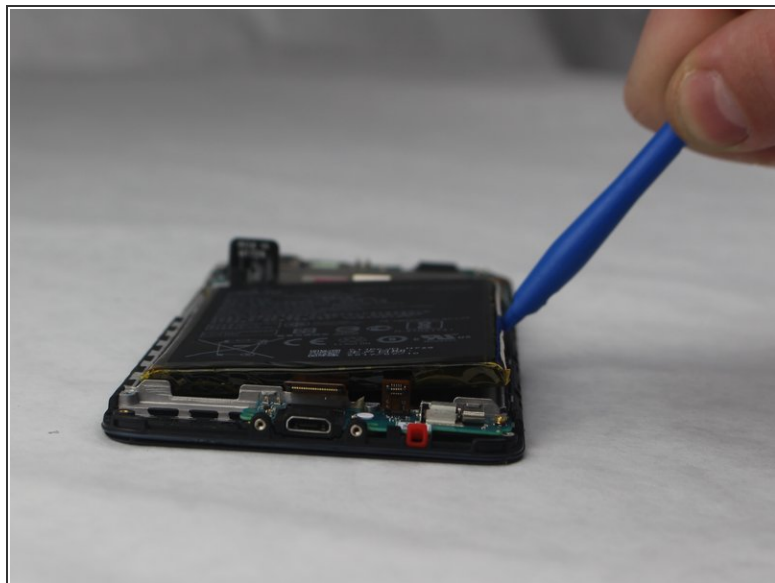

- Wedge an opening tool between the battery and phone.
 - Gently pry the battery out of the device.
- i** You can move the opening on either side of the battery as well as the bottom to aid in removal.

Step 6



- Remove the battery and replace it with the new battery.

To reassemble your device, follow these instructions in reverse order.