




Udi Discovery U818A FPV Drone Battery Replacement

How to replace the battery of a Udi Discovery U818A FPV drone.


Written By: Debra Crawford

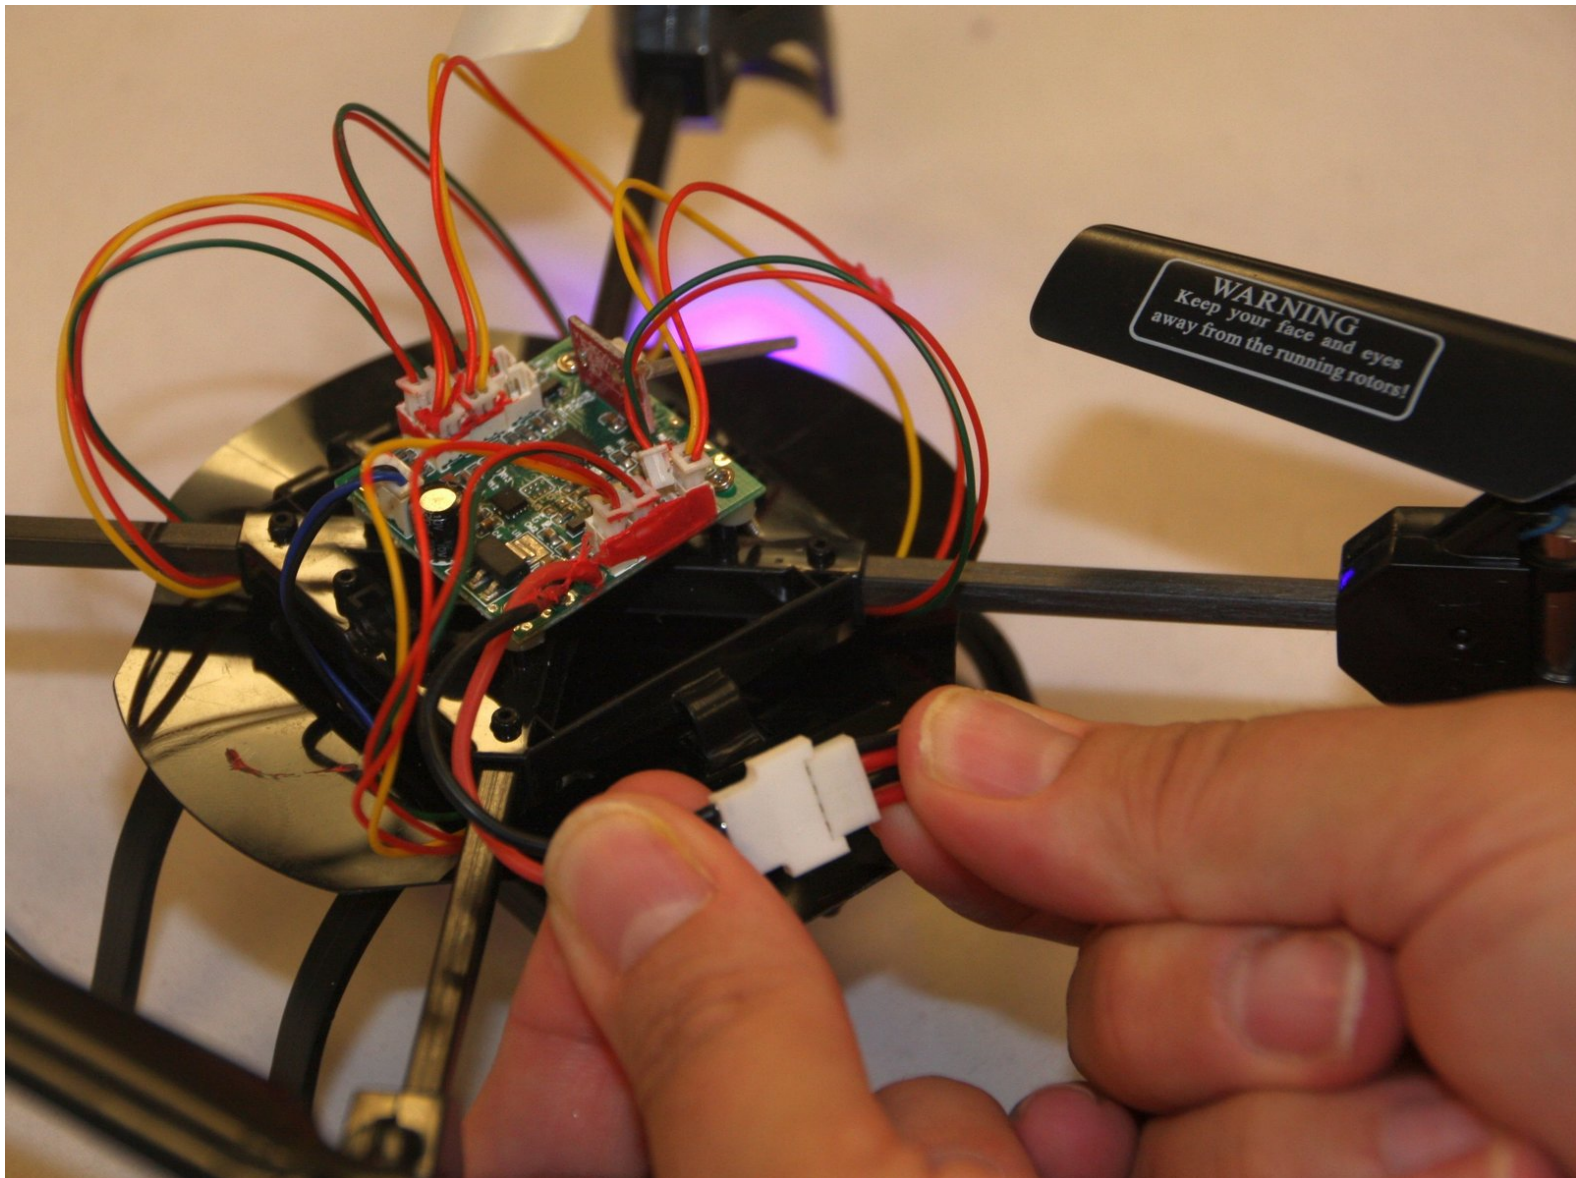

INTRODUCTION


If your Udi Discovery U818A FPV drone is sluggish or fails to respond, this guide will show you how to replace the drone battery. No tools are required for this task.

Step 1 — Drone Battery

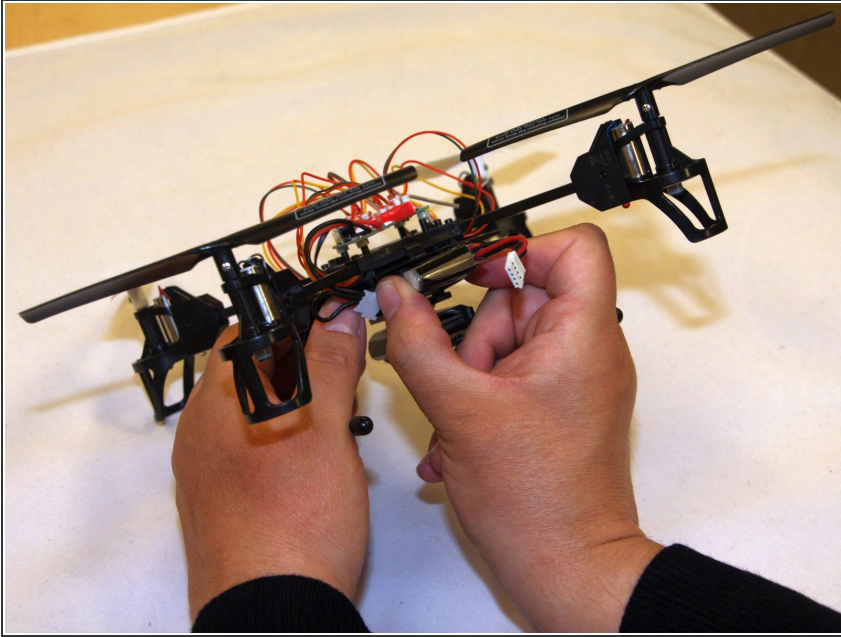


- Locate the drone battery housed in the slot between the drone body and the camera.

Step 2

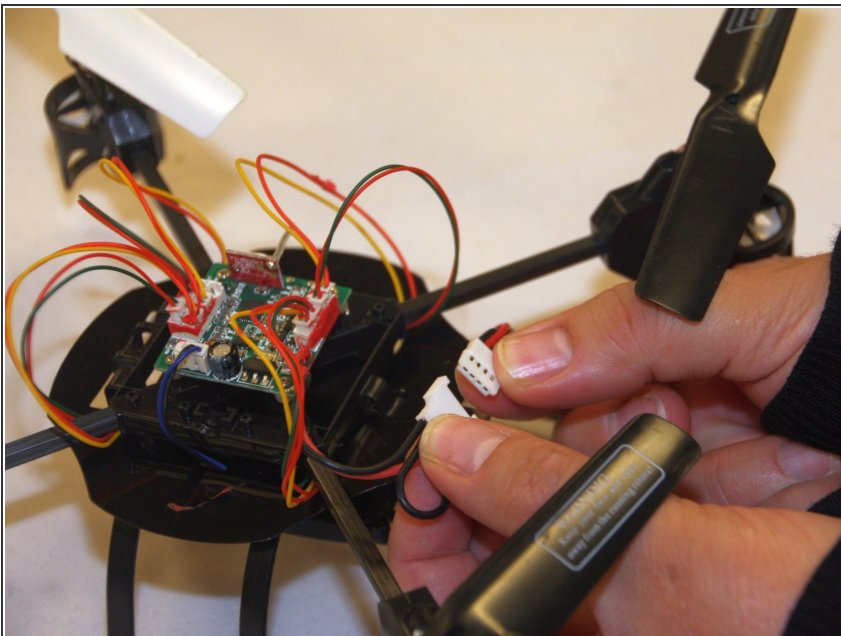

- Disconnect the battery from the drone by separating the red and black battery cable from the red and black drone cable.

Step 3

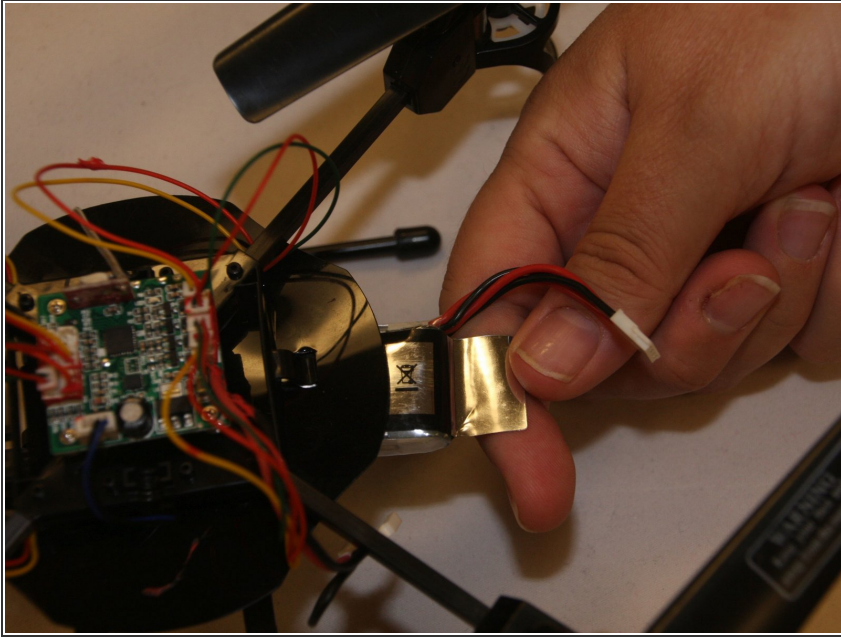

- Remove the battery from the slot by pulling on the silver tab attached to the exposed end of the battery.

To reassemble your device, follow these instructions in reverse order.