




Propel Star Wars T-65 X-Wing Drone Side Guns Replacement

This guide will detail how to replace side guns that have broken off the drone.


Written By: Miranda Brinkley

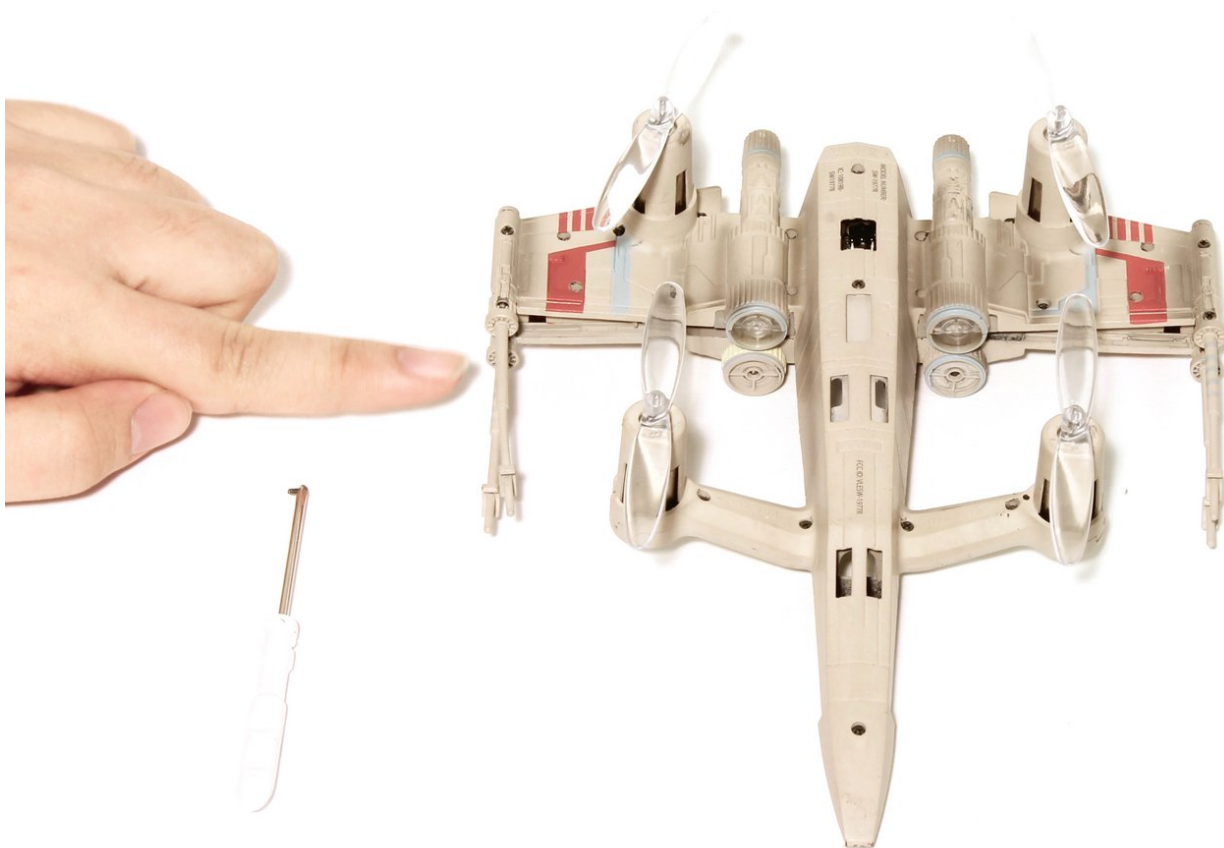

INTRODUCTION

If the side guns on your drone have broken off after a hard landing, use this guide to learn how to replace them. Replacement side guns should be included in the original packaging, and no tools are required for the replacement because the screw driver is included.

Step 1 — Side Guns

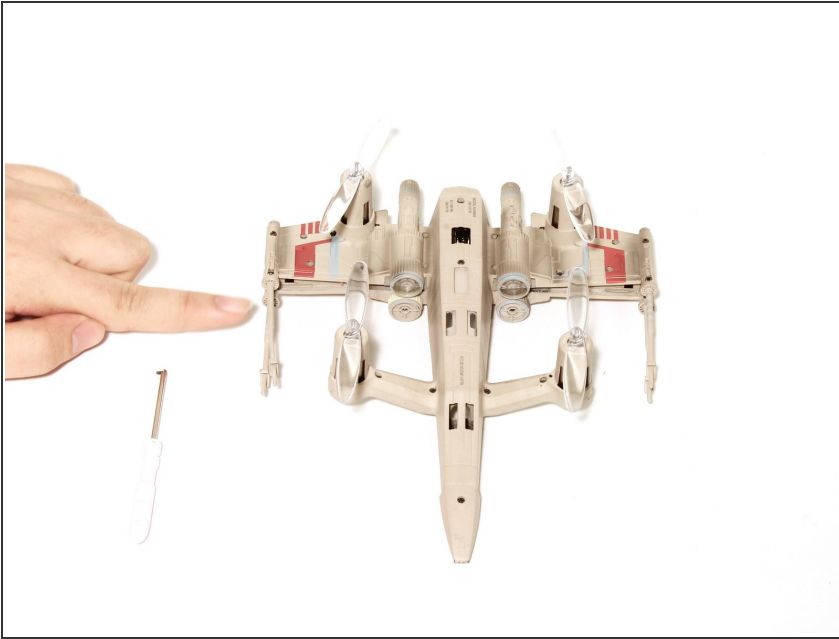


- Identify which side gun has broken off.

Step 2




- Access the screwdriver included in the remote control.

Step 3

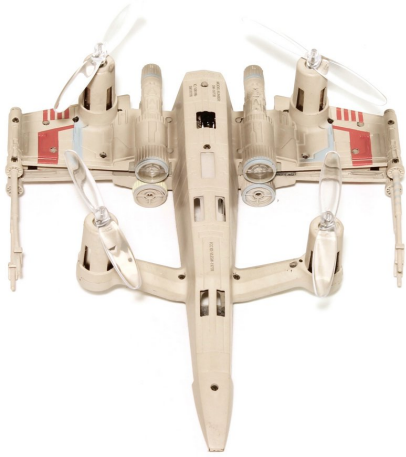

- Flip the drone upside down.

Step 4

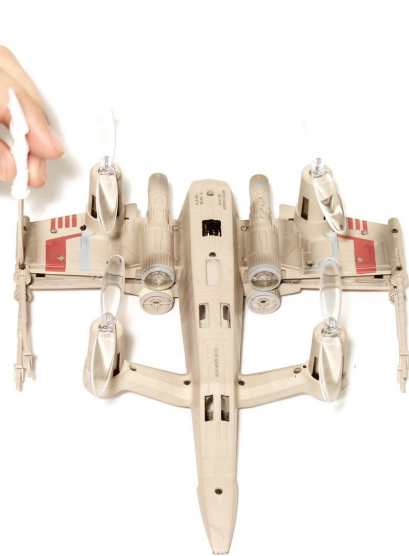

- Use the screwdriver to remove the screw holding the side gun in place. Each side gun has a corresponding screw similar to the one shown.

To reassemble your device, follow these instructions in reverse order.