


LG V30 Plus Display Assembly Replacement

Use this guide to remove the display of your LG V30 Plus.

Written By: Geoffrey Smith

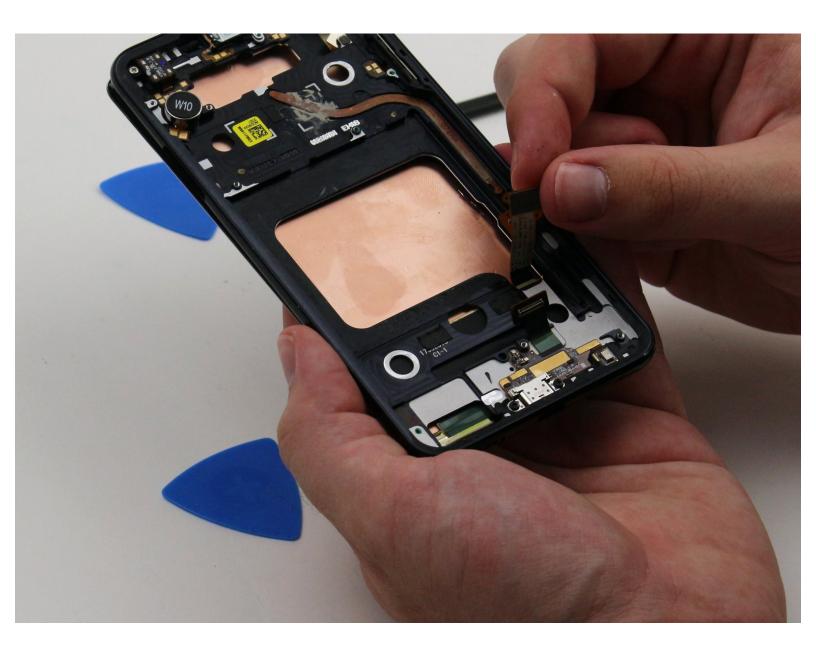

INTRODUCTION

Phone screens are prone to crack when dropped from an elevated surface. Use this guide to remove the display assembly of your device.



TOOLS:


- iFixit Opening Tools (1)
- iFixit Opening Picks set of 6 (1)
- iOpener (1)
- Phillips #0 Screwdriver (1)
- Suction Handle (1)

Step 1 — Rear Glass



- Use a pair of iOpeners by heating them in a microwave and placing the hot pads on the edges of the phone.
- Allow to sit for 1-2 minutes to heat up the adhesive.
- (i) A heat gun may need to be used if you have trouble separating the backing in the next step.

Step 2

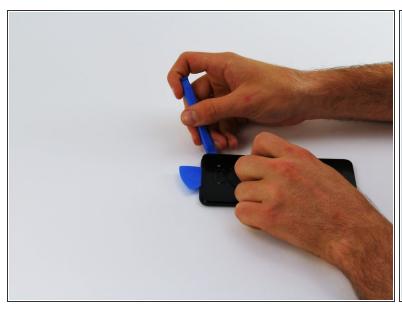



- Insert an Opening Tool into the seam between the rear glass and side of the phone.
- Pry the glass off just enough to insert an Opening Pick.
- Slide the Opening Tool around the edges of the device, placing Opening Picks regularly.




 Once all edges of the device are lifted free, use a Suction Handle to gently pull the rear glass off the device.

Step 4 — Motherboard





Remove the ten 4mm screws using the Phillips #00 Screwdriver.

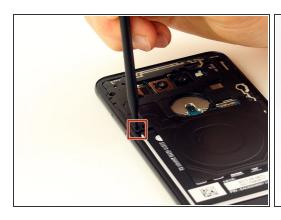





- Gently push down on the small black tab with a Spudger to release the protective board.
- Slide an Opening Tool between the phone and the protective board and slide along the edges of the phone to unclip it.
- Carefully wiggle the board back and forth while gently pulling to unclip the last attachment point.

Step 6






- Slide an Opening Tool between the lower protective board and the phone to unclip.
- Slide the tool along the remaining edges of the protective board until it pops off.





Gently pry each visible ribbon cable away from the motherboard to disconnect them.

Step 8

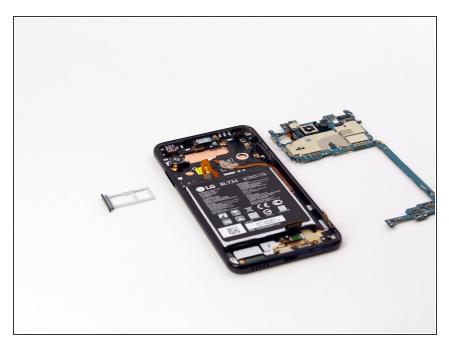

 Gently remove the motherboard from the phone.

Step 9 — Battery







- Use a Spudger to get between the battery and the phone and pry each edge of the battery away from the board.
- There may be a strong adhesive under the battery, so work your way around the battery carefully and slowly.
- Insert Opening Picks if needed to keep the battery elevated.


Step 10 — Front-Facing Camera





Use a Spudger to pry away the front-facing camera from the board.

Step 11 — Display Assembly

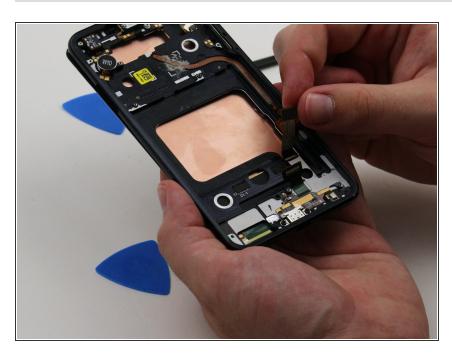

 Pull the ribbon cable attached to the screen away from the board and make sure it is bent upwards and out of the way.

Step 12



- Warm up a pair of iOpeners in the microwave for 1-2 minutes.
- Place the iOpeners on the edges of the phone and wait a couple of minutes for it to heat up the adhesive.
- (i) A heat gun may be necessary to heat the adhesive if the screen refuses to separate in the next step.







- Insert an Opening Tool between the metal sides of the phone and the front glass.
- Slide the Opening Tool around the display, placing Opening Picks as necessary.
- Use a Suction Handle or hand to remove the screen from the body of the phone.

To reassemble your device, follow these instructions in reverse order.