




BlackBerry Key2 Disassembly

Learn how to disassembly the Blackberry Key2

Written By: Douglas Vinicio



Step 1 — Blackberry Key2

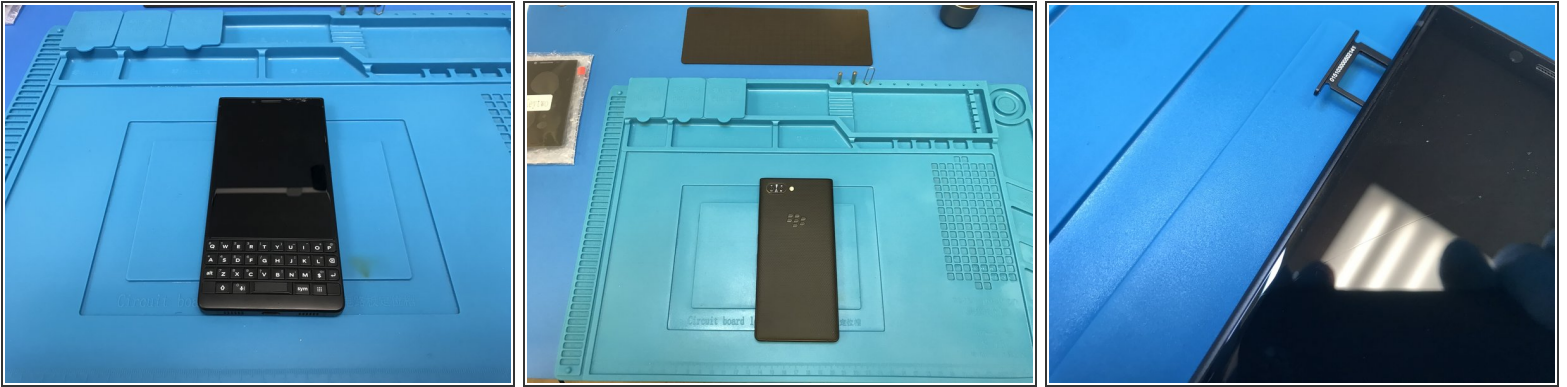


- The start of our disassembly. Turn off your device before start.
- Remove the sim card bracket.

Step 2 — Heating process






- Apply heat to the back of the phone to remove the plastic cover.
- With a pry tool of your preference start to lift up the back cover. Be careful on that part of the process.

Step 3 — Removing the screws

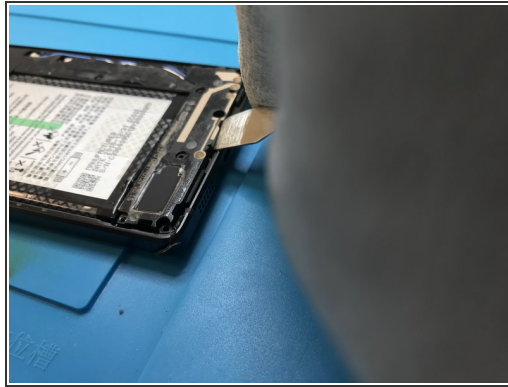

- Remove all the screws.
- Remove the loudspeaker module.

Step 4 — Antenna cable

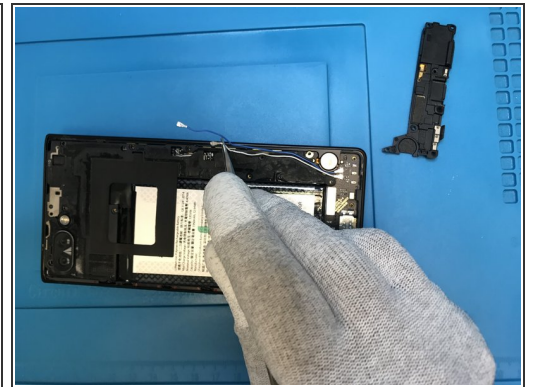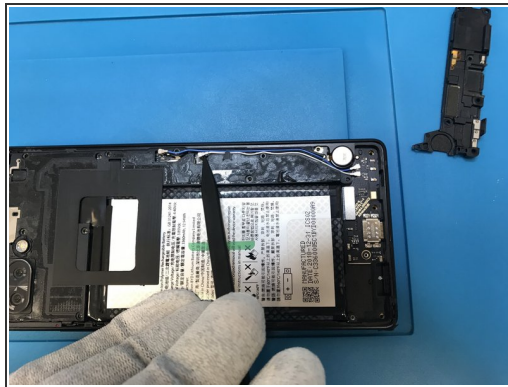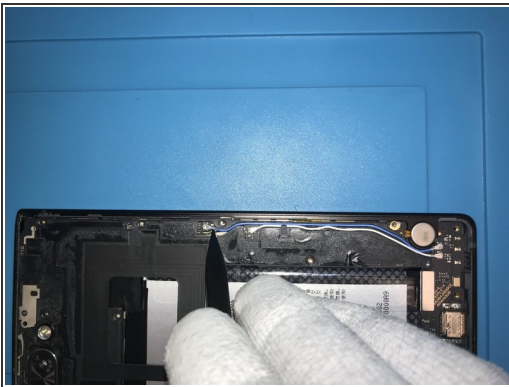


- Use the point of a plastic spudger to lift the antenna cable connector up off of its socket on the logic board.

Step 5 — Back bracket



- Be gentle lifting up the back bracket.
- I marked in red all the flex cables connected on the motherboard. You got to remove them all.
- Start disconnecting the battery flex cable.

Step 6 — Removing the flex cables

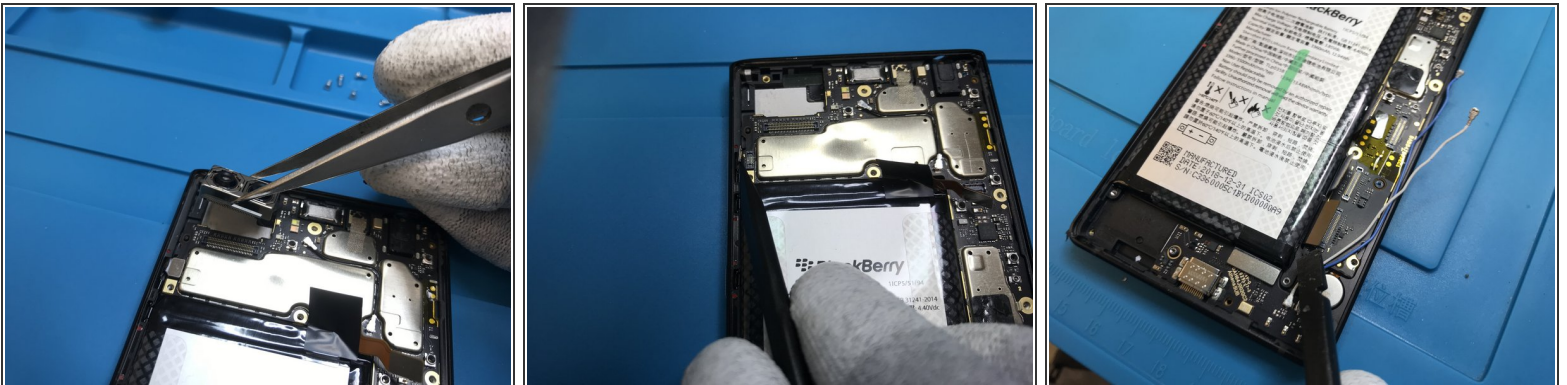

- Disconnect and remove the rear camera.
- Then continue disconnecting the other flex cables.
- Don't forget to use a plastic tool.

Step 7 — Removing the motherboard.



- Disconnect all the flex cables.
- Start from the bottom .
- Lift up gentle and check the last photo,there's a little detail on the proximity sensor. You'll have to disconnect it after lift up the motherboard.
- Observation : this way worked better for me without damaging the proximity sensor. It doesn't change anything try to heat up a little bit and removing it before remove the motherboard.

Step 8 — Removing the LCD.



- Heat the LCD before lift.

Step 9 — Final



- And we're done.

To reassemble your device, follow these instructions in reverse order.