




Google Pixel 3a Battery Disconnect

Prerequisite guide only! Battery disconnect step for the Pixel 3a.

Written By: Arthur Shi

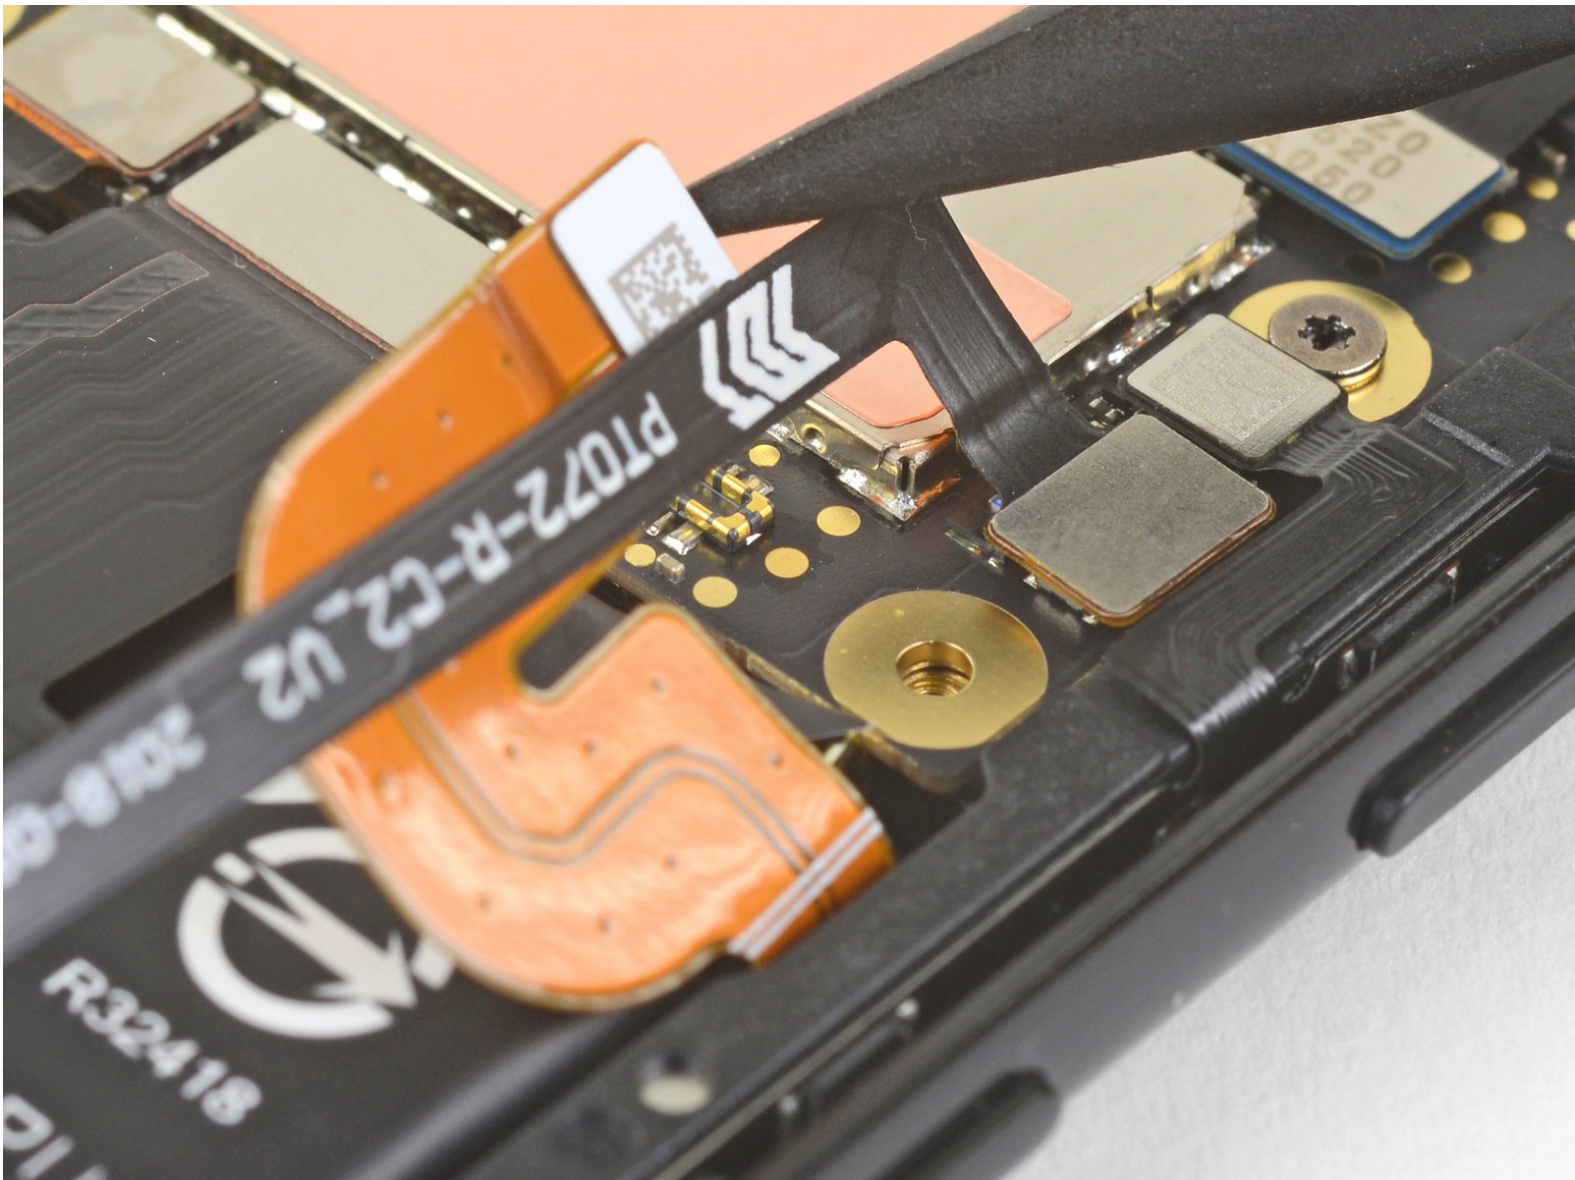

INTRODUCTION


Prerequisite guide only! Battery disconnect step for the Pixel 3a.



TOOLS:

- [Spudger](#) (1)
-

Step 1 — Google Pixel 3a Battery Disconnect

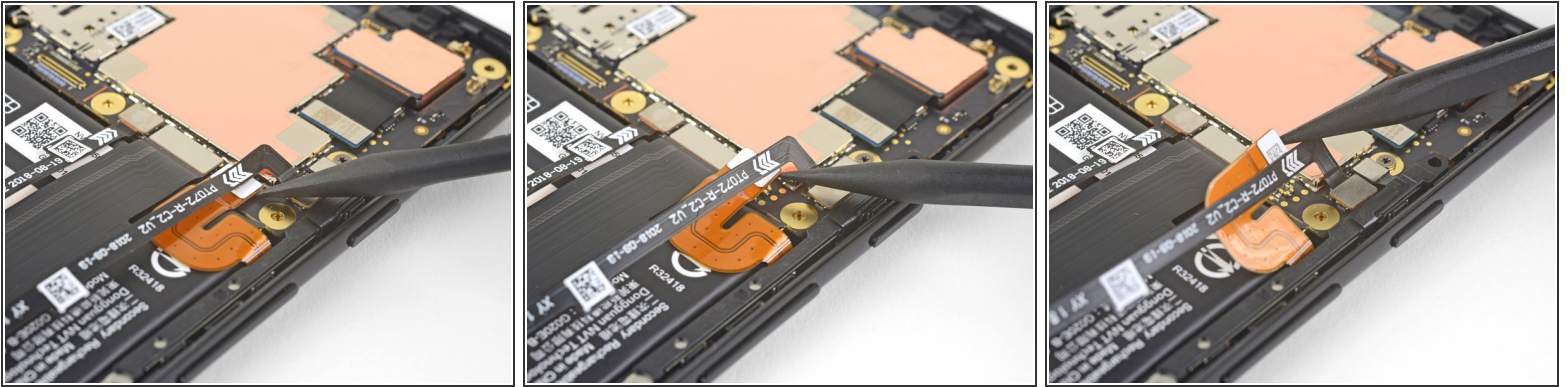

- Use the point of a spudger to pry up and disconnect the battery connector from its motherboard socket.
- Bend the battery flex cable slightly so that it will not accidentally make contact with the socket.

To reassemble your device, follow these instructions in reverse order.