



HP Pavilion 17-e146us Screen Replacement

Use this guide to replace a broken screen for the HP Pavilion 17-e146us.

Written By: Emma Neumann



INTRODUCTION

This guide will show how to replace the screen on your HP Pavilion 17-e146us. A working laptop screen is necessary to use a HP Pavilion 17-e146u and replacing the screen will ensure its continued use.

Replacing the screen could cause damage to the motherboard, so remove with caution. For more information on the causes of a faulty screen, please see our [troubleshooting page](#).

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [iFixit Opening Tool](#) (1)
-

Step 1 — Screen



- Open the laptop.
- Remove the two stickers on the lower left and right-hand corner of the laptop screen.

Step 2




- Using a Phillips #0 screwdriver, remove the two 5 mm screws in the lower left and right-hand corner of the laptop screen.

Step 3




- Place a spudger or opening tool between the laptop screen and the plastic laptop frame.
- Apply light pressure to the spudger to separate the plastic laptop frame covering the edges of the laptop screen.
- These silver pieces cover the laptop hinges and will need to be removed as well.

Step 4

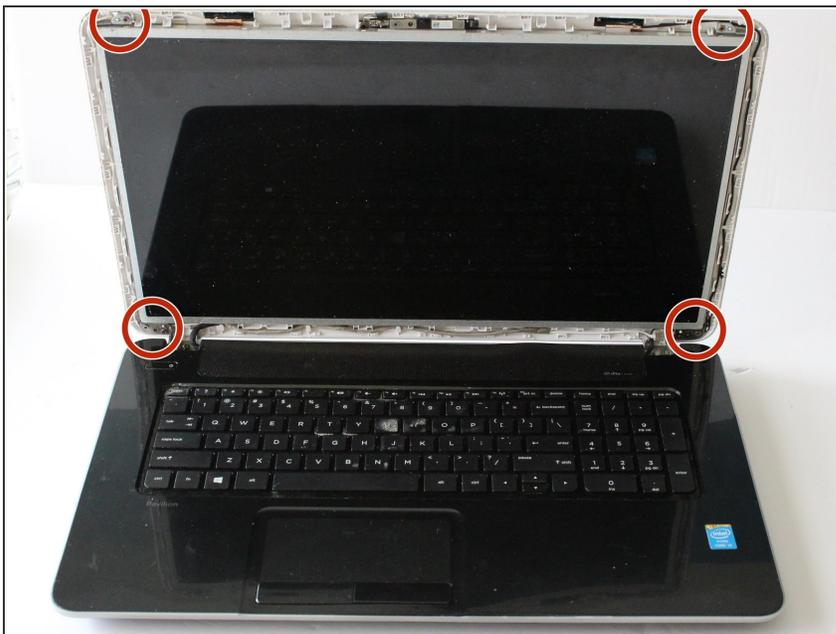


- Using a Phillips #0 screwdriver, remove the four 4 mm screws in each corner of the laptop screen.
- ⓘ This will separate the laptop cover from the laptop screen frame.
- ⚠ Hold the laptop cover securely to prevent damage.

Step 5

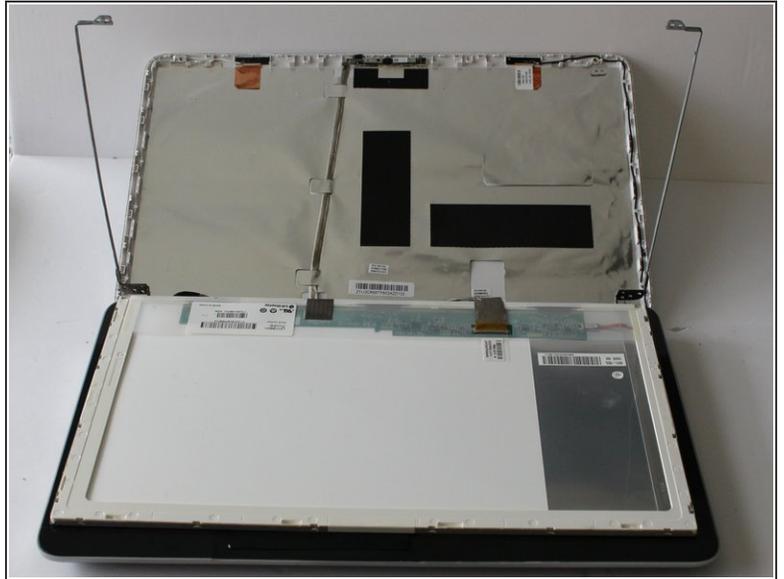

- Using a Phillips #0 screwdriver, remove the four 3 mm screws on the side of the frame, one in each corner.
- ⓘ This will release the laptop screen from the frame.
- ⚠ Hold the laptop screen and frame securely to prevent damage to the motherboard attachments.

Step 6

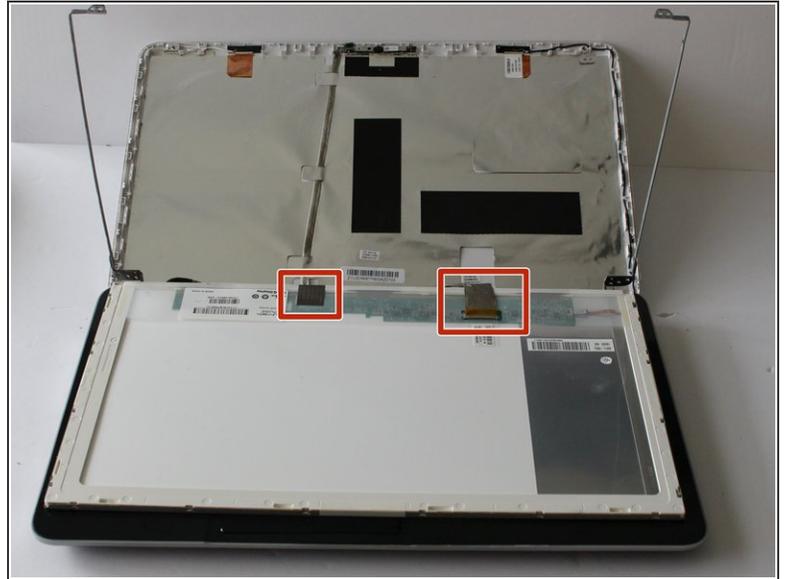

- Remove laptop screen.

⚠ While removing the laptop screen, be careful not to destroy the tape connection or break the motherboard.

To reassemble your device, follow these instructions in reverse order.