




# HTC Desire 826 Front Camera Replacement

Follow this guide to replace your HTC Desire...

Written By: Sydney Hicks

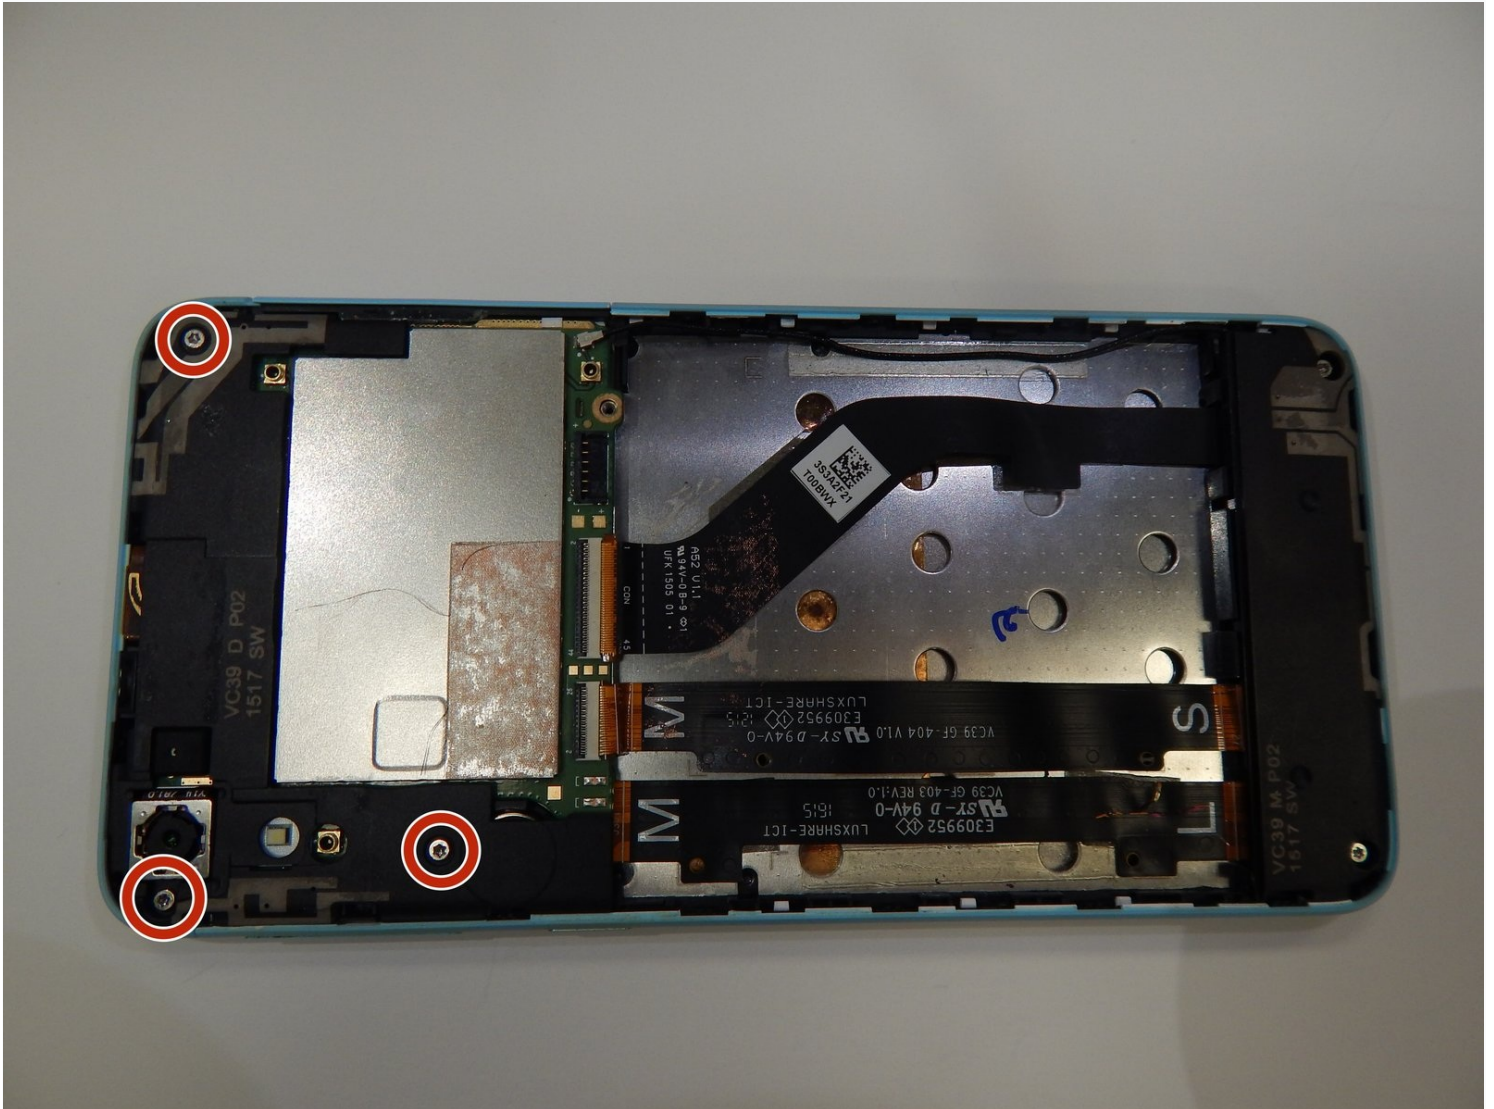

# INTRODUCTION

Follow this guide to replace your HTC Desire 826 front camera.

---

## TOOLS:

[T5 Torx Screwdriver](#) (1)

[Tweezers](#) (1)

[Magnetic Project Mat](#) (1)

[Spudger](#) (1)



---

## Step 1 — Battery




- Find a seam in the back of the device.
  - Insert the plastic spudger into the seam and pry off the back panel.
- ⓘ There will be glue, so keep prying until it comes off or you may need to heat up the edges of the device to loosen the adhesive with the [iOpener](#).

## Step 2

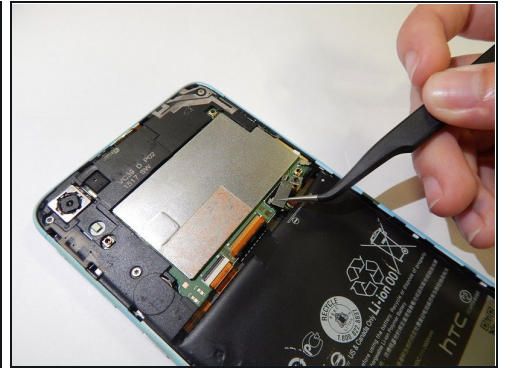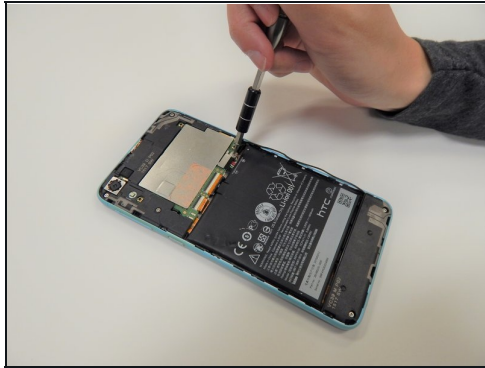

- Remove the 4.0 mm screw above the battery with a T5 Torx screwdriver.
- Remove the metal bracket with the tweezers.



## Step 3

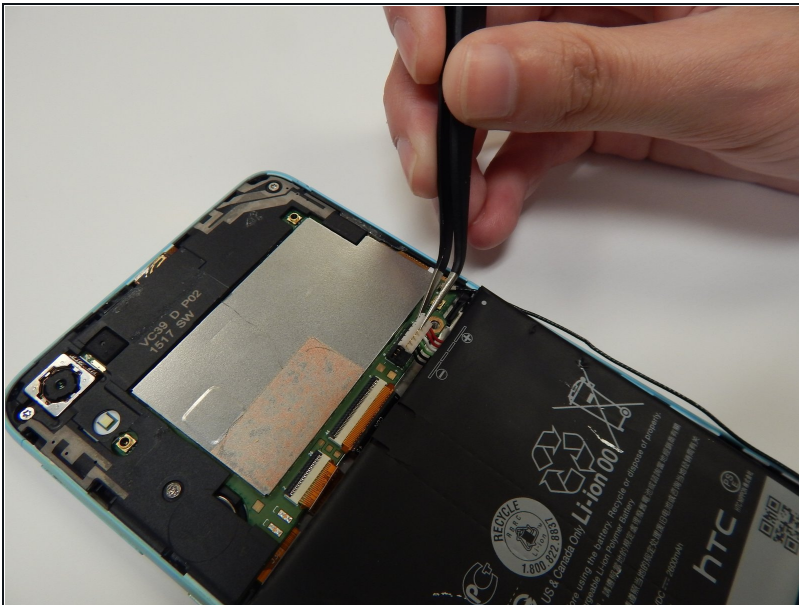

- Disconnect the battery cable from the motherboard with the tweezers.






## Step 4

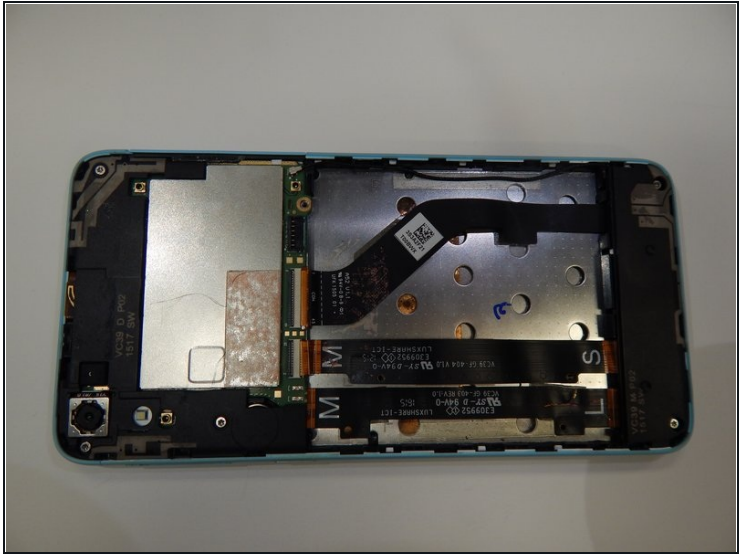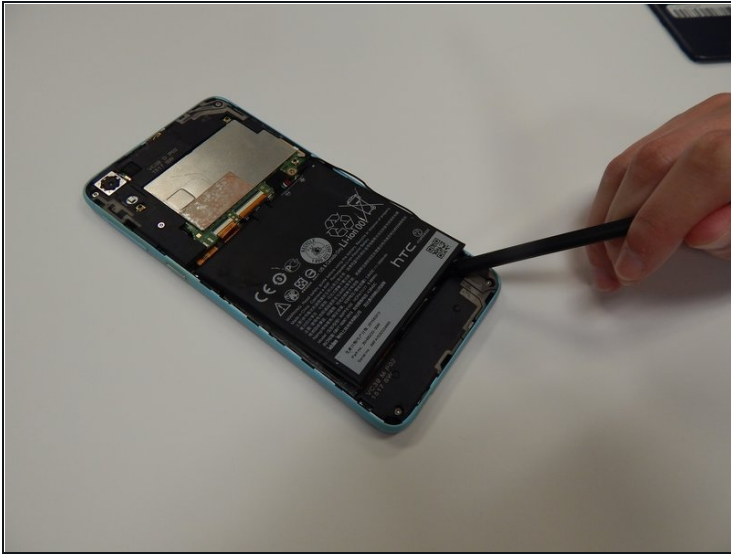


- Lift the battery with a plastic spudger and remove it from the device.

## Step 5 — Front Camera

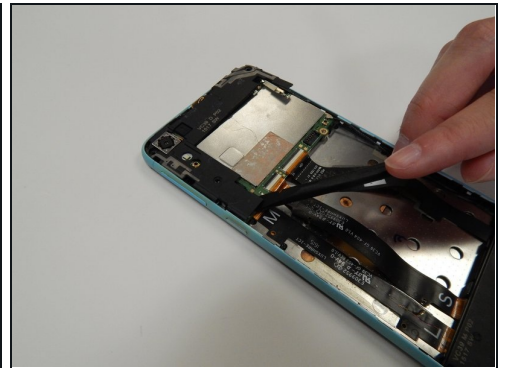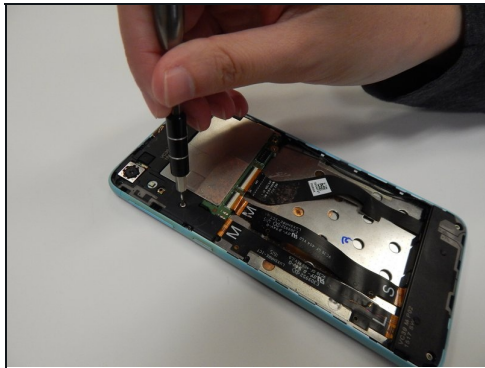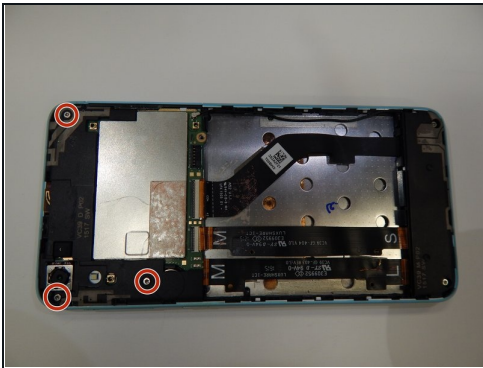

- Use the T5 screwdriver to remove the three 4.0 mm screws as shown.
- Once the screws are removed, pry up the top plastic panel using the black nylon spudger.

## Step 6

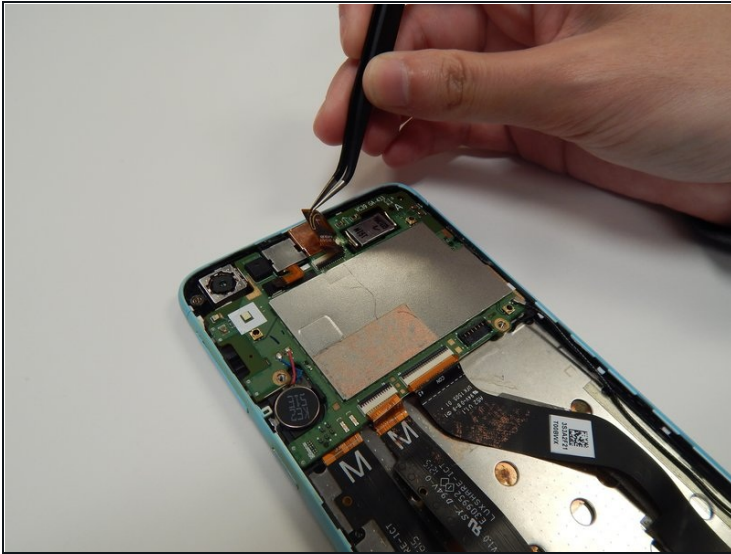

- Use the tweezers to detach the cameras wire from the top motherboard
- Then use the tweezers to remove the camera

---

To reassemble your device, follow these instructions in reverse order.