



# Asus Zenfone 3 Max SIM Card Replacement

This guide will tell you how to replace the SIM card in your Asus Zenfone 3 Max if it stops working, or you want a new one.

Written By: Lauren Compton



## INTRODUCTION


If you are changing phone carriers or just need a new SIM card due to yours not working, this guide will tell you how to replace your Asus Zenfone 3 Max (Model-identification: ZC520TL) SIM card. To do this, you can use the iFixit 150mm Flex Extension tool with the Hex 0.7 bit, the SIM card eject tool, or any small, thin pointed object (like a pin or paperclip). Be cautious when opening the SIM card slot as it's thin and can easily bend. Visit the [troubleshooting page](#) if you want more information about a faulty SIM card.

---

### TOOLS:


- [SIM Card Eject Tool](#) (1)
-

## Step 1 — SIM card

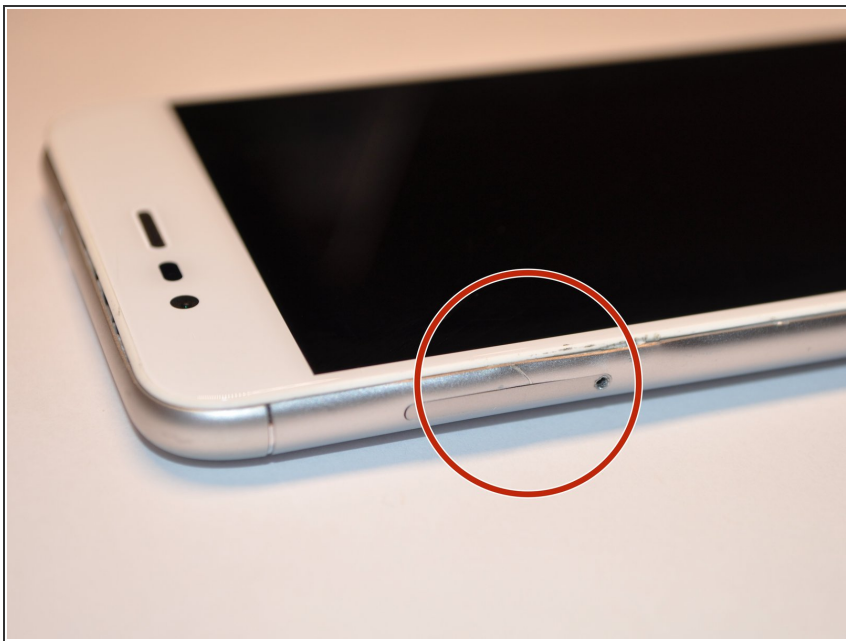

- Locate the SIM card slot on the upper left side of your Asus Zenfone Max 3.

## Step 2

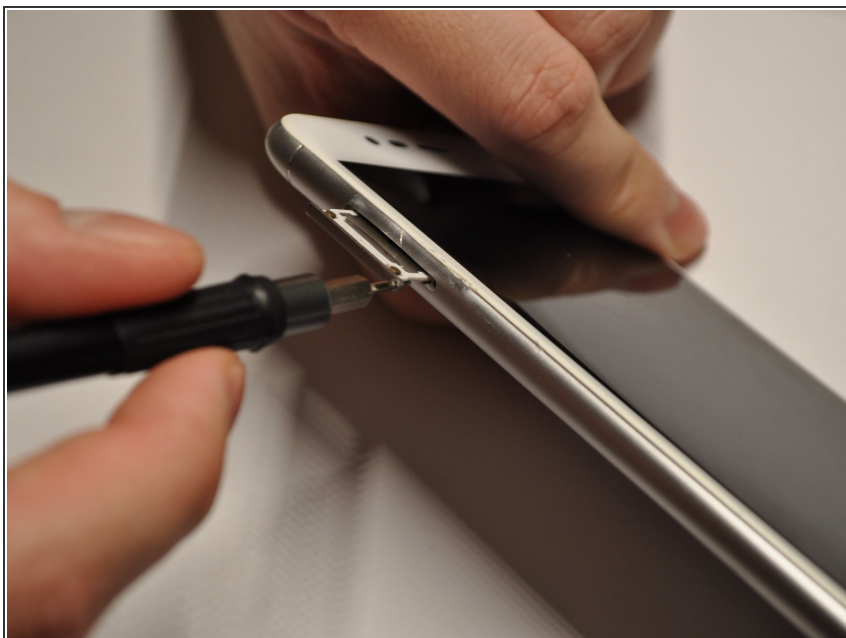

- Use the iFixit 150mm Flex Extension with the Hex 0.7 bit or the SIM card eject tool.
- Stick the tool into the hole on the SIM card slot and open the slot with it.

### Step 3



- Pull out the old SIM card all the way so it is no longer in the phone.

To reassemble your device, follow these instructions in reverse order.