



Casio MTD-120 Battery Replacement

If your Casio watch (MTD-120) has been losing...

Written By: Isabel Chavez



INTRODUCTION

If your Casio watch (MTD-120) has been losing time, showing incorrect time or stopping, it most likely has a dead or dysfunctional battery, which requires replacement.

A functional battery provides power to the watch such that the hands of the watch start functioning properly to show correct time.

TOOLS:

[Tweezers](#) (1)

PARTS:

[Battery - SR920SW \(Module-5339\)](#) (1)

Step 1 — Battery



- Place the watch upside down.

Step 2



- Remove the back cover of the watch with tweezers.

(i) This should reveal a plastic cover once the back is removed.

Step 3



- Remove the plastic cover with the tweezers.

(i) You should now see the battery compartment.

Step 4




- Remove the battery with the tweezers.
- ⓘ Use your fingers to remove the battery if you find it difficult using the tweezers.

Step 5



- Insert the new battery by pushing down gently.
- ⓘ The battery needed for this watch is an SR920SW.
- Recycle the old battery.
- ⓘ [Where To Recycle Batteries](#)

Step 6

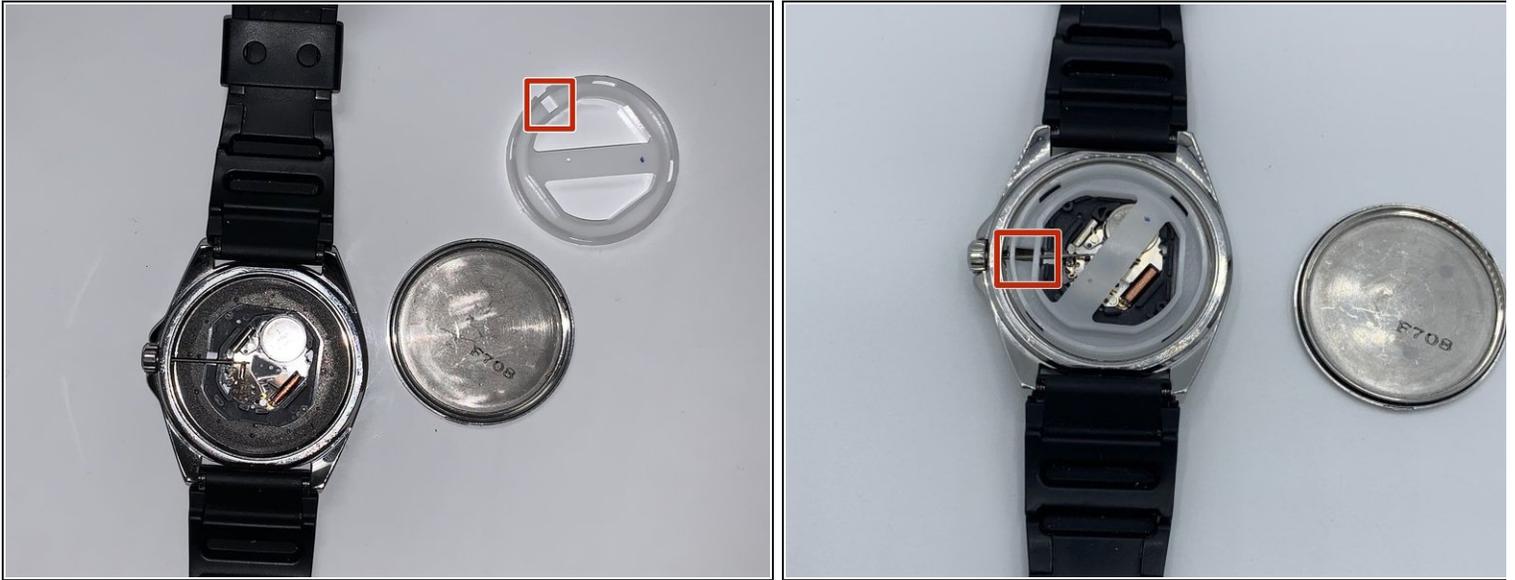

- Place the plastic cover back over battery compartment.
 - Align the marked area of the plastic cover with the crown of the watch.
- i** The crown is the knob that is used to set the watch.

Step 7



- Put the cover back and tighten it shut by pressing on it.

Follow the link provided in step 5 to find more information on recycling your old batteries.