



Ricoh Super 8 800z Film Cartridge Door Replacement

This is a detailed guide on how to remove the...

Written By: Michael Flynn



INTRODUCTION

This is a detailed guide on how to remove the film cartridge door of a Ricoh Super 8 800z camera. This may be necessary if the door is damaged/cracked in some way, or the seal is allowing light in which affects the film. If light leaks are appearing in photos, this guide may be for you. This is a fairly easy process and only requires a screwdriver.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Film Cartridge Door





- Pull the film cartridge door release lever towards the eyepiece to open the film cartridge door.

Step 2



- Remove the two screws from the center of the spring plate, located on the camera side of the film cartridge door hinge, with a Phillips #00 screwdriver.
- Remove the spring plate from the hinge.

Step 3

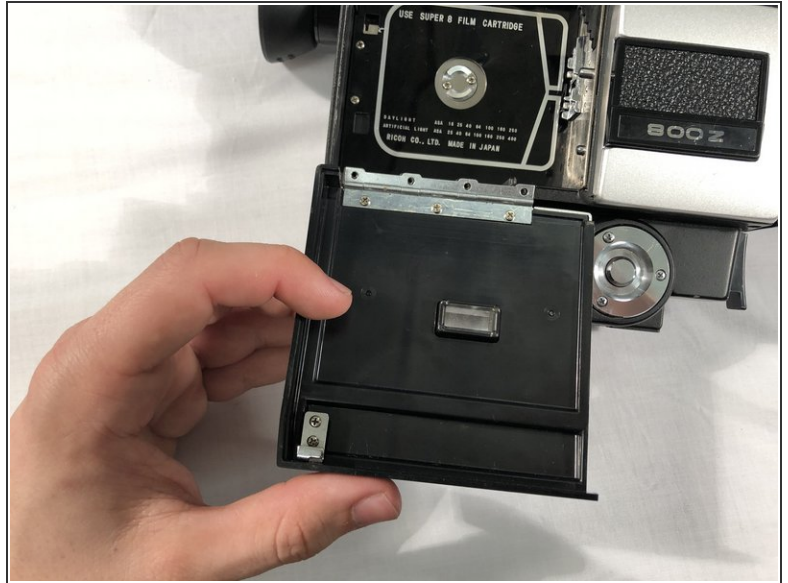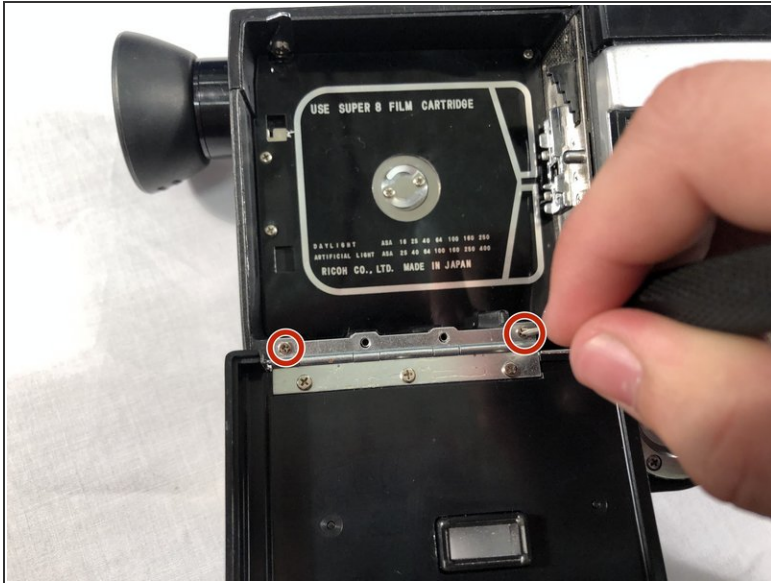

- Remove the two outer screws from the camera side of the door hinge with a Phillips #00 screwdriver.
- Remove the film cartridge door from the camera body.

To reassemble your device, follow these instructions in reverse order.